

Atlantic Region

Montreal Terminals Laurentian and Farnham Divisions Quebec Central Railway

Time Table

25

Taking Effect at 0300 Eastern Daylight Saving Time Sunday April 27, 1975.

Governed by: Eastern Daylight Saving Time beginning at 0300 Sunday April 27, 1975 and by

Eastern Standard Time beginning at 0100 Sunday October 26, 1975.

For the Information and Guidance of Employees Qnly

Safety is No Accident

G. E. Benoit
Vice-President
R. A. Swanson
General Manager,
Operation and Maintenance
C. H. Massicotte
Superintendent Transportation

7.30

HH W. Blice 484-8474

Nos

Glen Shop 2200

Pax 223

Windson Sta. 300 2344

SH 683

Westmount Tower 642

Mrl. West Sta. 2193

Par 155

11 11 Tower 2260

Supervisor \$2432

Pax 152

861-8137

Delson 632-2440

Dorval 631-3611

Departure Yd - Opt. 484 - 4353

Pax 126

Diesel Shop 488-8104

Pax 176

Piggybeck Consist 631-1872

Pax 217

Sea way

632-6100

Vasdrevil

455 - 3431

CTC

· Pax 137

Car Consist 2416

Transportation offreed 596 861-10+4 - 2 short

(oncourse / P. 155 728 498

Phone Trouble 849-628/

Night Bridge Numbers Supervisor 861-8137

CP Police Hot. West Power 861-6689

Westmont Tage 861 6410 Windsor - Station master 861-4888 Perk Ave Dispatcher 817102

Hal west Agent 861-6008 West. Tower 861-8024

ale ~ Shop fles 987 84 700

MEDICAL OFFICERS

DR. Wm. L. MAY, Chief of Medical Services, Room 501 Windsor Station, Montreal, Phone 861-6811

294

TELEPHONE No.

NAME			
DR. F. VICTOR OGULNIK	. 866-9037	481-3568	Montreal
DR. EARL E. LESAGE			
DR. PAUL EUGENE MILOT			
DR. STANLEY S. BLICKER			
DR. H. FLORENT			
DR. DONALD W. RUDDICK			
DR. J. G. GAURON			
DR. J. A. THOMSON			
DR. KENNETH WILSON			
DR. N. L. WILLIAMSON			
DR. J. E. BELANGER			
DR. ANDRE SAMSON			
DR. F. R. MACRAE			
DR. J. G. GREGORY, Jr			
DR. YVON NAUD			
DR. RENE PAQUIN			
DR. MARC-ANDRE MARCHAND			
DR. ROGER AMYOT			
DR. F. ROSAIRE DESJARDINS	435-7545		. Ste. Therese
DR. PAUL E. BELISLE	986-3670	5	Ruckingham
DR. MARCEL MENARD			
DR. C. E. LEONARD			
DR. GILLES DAUNAIS			
DR. PIERRE L'ALLIER			
DR. ALPHONSE VERDICCHIO			
DR. JACQUES HUARD			
DR. ROLAND COTE			
DR. FERNAND DUMONT			
DR. G. B. LOOMIS	562-4666	569-5604	66
DR. H. BRUCE FLETCHER	569-1565	838-4802	
DR. JEAN-LOUIS CARDIN			
DR. GUY LAROCHE			
DR. DAVID TECTOR			
DR. H. L. LAFLAMME			
DR. C. G. SCHURMAN, Jr			
DR. RICHARD M. BELOIN			
DR. MAURICE E. ROWE			
DR. R. LEMIEUX			
DR. FERNAND BERNARD			
DR. REJEAN POULIN			
DIN ALDERNI I COLLI			y alice solicituit

MONTREAL TERMINALS DIVISION

SUBDIVISION (or Spur) PA	AGE	MILES
Adirondack Farnham Connection La Salle Loop North Jct. Lead Outremont	.6	Breslay
South Jct. Lead	.6Montreal Westto .6St. Luc Jctto .6Montrealto	Cote St. Paul 6.0 South Jct. 0.7 Ballantyne 2.1 Mileage 4.7 4.7 Mileage 3.3 3.3
		46.7

Smiths Falls Division Train Dispatchers, Laurentian Division Train Dispatchers and Farnham Division Train Dispatchers will issue train orders within the Montreal Terminals Division, on request of Montreal Terminals Superintendent, to trains to and from their respective dispatching territories.

S. P. JOSEFCHAK, Superintendent, Park Avenue.

C. E. MOORE, Asst. Supt., Park Avenue.

R. P. PREMONT, Asst. Supt., Park Avenue.

J. V. RIVEST, Asst. Supt., Park Avenue.

Traffic Supervisor's office at St. Luc, Tel. 514 - 861-6811, Local 596

- J. P. GLOBENSKY, Chief Traffic Supervisor.
- J. CREVIER, Night Chief Traffic Supervisor.

J. P. DROUIN, J. G. MORIN, J. G. DION, G. B. BOURDON, G. GELINAS, C. BOUCHER, M. PARIS,
J. R. BECHARD,
Supervisors.

LAURENTIAN DIVISION

	MILES
Berthier berthierville	2.1
Buckingham Jct to Buckingham	4.0
Ste. Thereseto Laman	96.1
Vaudreuil to Mileage 82.5	82.5
Mileage 9.0to Ste. Therese	11.3
Cap de La Madeleineto Garneau	20.3
Trois Rivieresto Ouebec	77.5
Ste. Thereseto Mont Laurier	138.2
Lanoraieto St. Gabriel	27.6
Trois Rivieres to Grandmere	27.4
St. Martin Jct to Trois Rivieres	82.3
Mileage 3.3 Mileage 20	16.7
Cap de La Madeleine to Wayagamack	4.1
Trois Rivieres to Loop Line	
Staynervilleto Brownsburg	
Mileage 0.0to Mileage 5.0	
	(00 F
	600.5

J. B. CHABOT, Superintendent, Park Avenue.

G. H. VEILLEUX, Asst. Supt., Trois Rivieres.

G. MAHEUX, Asst. Supt., Park Avenue.

Dispatching Office at Park Avenue — Tel. 514 - 861-6811, Local 2134.

G. DEVAULT, Chief Train Dispatcher.

J. C. FORTIN, G. M. GAGNE, C. DOYON, D. N. DROUIN, J. G. TURCOTTE, J. P. WEANER, A. BERNIER, G. CONSTANT, J. P. LACERTE, M. TREPANIER.

Train Dispatchers

Refief M.J Jolien J. Mercier

FARNHAM DIVISION

SUBDIVISION (or Spur)	PAGE		MILES
Drummondville Lyndonville Newport Sawyerville Sherbrooke Stanbridge St- Guillaume	3536373442344545	KnowltonNewportBrookportCookshireBrookportFarnhamFarnham	 Mileage 39.0 39.0 Drummondville 51.9 Mileage 63.5 63.5 Newport 58.4 Sawyerville 6.7 Megantic 125.6 Stanbridge 13.8 St. Guillaume 46.7 end of track 1.8
			407.4

J. L. FORTIN, Superintendent, Sherbrooke.

D. J. HIGMAN, Asst. Supt., Newport.

R. BEAUCHESNE, Asst. Supt., Sherbrooke.

Dispatching Office at Sherbrooke — Tel. 819 - 563-3220 Local 34 (South dispatcher) Local 35 (East ")

L. N. COUTURE, Chief Train Dispatcher.

K. A. McCANN, Night Chief Train Dispatcher.

B. H. BEERS,	G. H. O'NEILL,	F. A. MARCOTTE,	R. GOSSELIN,	
J. J. LAPALME,	J. F. DRAINVILLE,	J. M. AUDET,	P. LEVESQUE,	Train
G. R. LEVESQUE,	U. SEGUIN,	D. M. REGNIER,	C. BUSQUE.	Dispatchers
F. JACQUES,	K. R. HARRISON,	R. BEAUREGARD,	B.G. Allen	J

QUEBEC CENTRAL RAILWAY

SUBDIVISION (or Spur)	PAGE	MILES
Chaudiere Levis Stanstead Tring Vallee	49 46 49 46 47	 o Newport

338.4

J. L. FORTIN, Manager, Sherbrooke.

M. G. CHABOT, Asst. Supt., Thetford Mines.

D. J. HIGMAN, Asst. Supt., Newport.

Dispatching Office at Sherbrooke — Tel. 819 - 563-3220 Local 32.

L. N. COUTURE, Chief Train Dispatcher.

K. A. McCANN, Night Chief Train Dispatcher.

Farnham Division Train Dispatchers will issue train orders on Quebec Central Rly.

MONTREAL		,			OUTY	WARD T	RAINS—	-FIRST	CLASS		
TERMINALS		Train Order Office Signals	249 Pagr. Dally	214	181 Pagr. Dally	247 Psgr. Dally	245	273 Psgr. Daily	243 Pagr. Dally	271 Pagr. Daily	29 Psg Sat
STATIONS		Train Office	ex. Sun.	Pagr. Daily ex. Sat. and Sun.	ex. Sat. and Sun.	ex. Sat. and Sun.	Psgr. Daily ex. Sat. and Sun.	Daily ex. Sat. and Sun.	Daily ex. Sat. and Sun.	Daily ex. Sat. and Sun.	Sat Sur
MONTREALKWZ 8 5	Z V	W J	1750 S 1756	1735 S 1740	1730 \$ 1736	1723 S 1729	1719 * 1725	1715 * 1721	1645 S 1651	1610	161
MONTREAL KWZ (S Y 1.9 L 1.4 L	de Ra		s 1802		S 1742	s 1729	1725	* 1721 * 1727	\$ 1651	S 1616 S 1622	S 161 S 162
0.7 LACHINE XY	2		1805 S 1807			1739 \$ 1742	1735	1730	1700 S 1702	1625 S 1627	162 S 162
GROVEHILL XY			s 1809			s 1745	1738	1734	s 1702	s 1627 s 1629	S 162
7 4 GAS 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7				1748 S 1751			••••••	••••••			
SEAWAY ADIRONDACK JCTXY Jct. Pen-Cen	A			F 1754				••••••			
NORTH JCTX ST. LUC JCTX					1743 1745	,					
OUTREMONTXY S	3				1750 1752						
					s ₁₇₅₅		1				
MONTREAL			#76.56 #76.56	ALAN S	9	VARD TE	RAINS—	FIRST C	LASS		1
MONTREAL TERMINALS)	Signals	,1776 ,876 ,876		9	/ARD TE	RAINS—	FIRST C	LASS	3.0 38 30	
MONTREAL	Trais Auto	Train Order Office Signals	,30°45 ,8045 8.45		9	VARD TI	RAINS—	FIRST C	CLASS	3.031.0	
MONTREAL TERMINALS STATIONS MONTREALKWZ \ 2 \ 2 \ 5) v	Trais Urder Office Signals	SPA		9	VARD TI	RAINS—	FIRST C	CLASS		
MONTREAL TERMINALS STATIONS MONTREALKWZ 2 2 2 2 2 3 3 3 3 3 3 3 3 3 3 3 3 3 3) v		,8745 - 20 - 21 - 11 - 11 - 11 - 11 - 11 - 11 - 11		9	VARD TI	RAINS—	FIRST C	CLASS		
MONTREAL TERMINALS STATIONS MONTREAL KWZ 19 WESTMOUNT XY MONTREAL WEST X SORTIN 0.8	V				9	VARD TI	RAINS—	FIRST C	CLASS		
MONTREAL TERMINALS STATIONS MONTREAL 1.9 WESTMOUNT XY L2.7 MONTREAL WEST X SORTIN 0.8 BALLANTYNE X CROVEHILL XY GROVEHILL XY LE LACHINE XY GROVEHILL XY LE LACHINE XY LACHINE	V				9	VARD TI	RAINS—	FIRST C	LASS		
MONTREAL TERMINALS STATIONS MONTREAL KWZ 1.9 WESTMOUNT XY 2.7 MONTREAL WEST X SORTIN BALLANTYNE X 0.7 LACHINE XY GROVEHILL XY SOUTH JCT. X	V				9	VARD TI	RAINS—	FIRST C	LASS		
MONTREAL TERMINALS STATIONS MONTREAL KWZ 4 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5	V				9	VARD TI	RAINS—	FIRST C	LASS		
MONTREAL TERMINALS STATIONS MONTREAL LACHINE SORTIN BALLANTYNE LACHINE SOUTH JCT. SOU	V				9	VARD TI	RAINS—	FIRST C	CLASS		
MONTREAL TERMINALS STATIONS MONTREAL WESTMOUNT XY MONTREAL WEST X SORTIN BALLANTYNE X LACHINE XY GROVEHILL XY SOUTH JCT. X LASALLE XY ADIRONDACK JCT. XY Jct. Pen-Cen NORTH JCT. X	A W				9	VARD TI	RAINS—	FIRST	CLASS		

MONTREAL TERMINALS DIVISION FOOTNOTES ON PAGES 10, 11, 12 AND 13

		OUTV	VARD T	RAINS—	-FIRST	CLASS				MONTREAL
231	154	293	263	1	34	281	152	241	sis	TERMINALS
Pagr. Daily ex. Sat. and Sun.	Pagr. Dally	Pagr. Sun.	Pagr. Daily ex. Sun.	Psgr. Dally	D & H Psgr. Daily	Pagr. Sat.	Pagr. Daily ex. Sun.	Pagr. Daily ex. Sat. and Sun.	Train Order Office Signals	STATIONS
1430	1330	1215	1215	1115	0950	0940	0815	0722	wı	92(MONTREALK
s 1436		S 1221	S 1221	S 1121	* 0956	S 0945	0-4-1	s 0727		Lege Westmount
S 1442		s 1226	s 1226	* 1127	* 1002	s 0950	The second second	s 0733		MONTRÉAL WEST
1445		1229	1229	1130		0953		0737		' ' 08
F 1447			S 1231			1,1,1				DALLANT THE
F 1449			s 1233	1131		F 0955				BALLANTYNE 0.7 LACHINE 0.4 GROVEHILL
					เหนา004					SOUTH JCT
					10331008					LASALLE
										▼ > SEAWAY
					10371012					O.7 ADIRONDACK JCT Jct. Pen-Cen
	1341						0826			NORTH JCT
	1343						0828			ST. LÜÇ JCT
	1348		•••••				0833			OUTREMONT
	1350						0835			OUTRÉMONT 1.0 BRESLAY 0.2
	8 1353						s 0838			V PARK AVENUE
	1355						0840			JAC. CARTIBR JCT Jct. C.N.R.

		OUTV	VARD T	RAINS-	-FIRST	CLASS				MONTREAL
	277	251	42	275	156	167	40	133	grafs	TERMINALS
192	Pagr. Daily	Pagr. Daily	Psgr. Daily	Pagr. Daily ex. Sat. and Sun.	Psgr. Daily	Psgr. Mon. Wed. Frl.	Psgr. Dally	Psgr. Daily	Train Order Office Signals	STATIONS
	2335	2130	1950	1857	1835	1815	1800	1755	WJ	(3.2) MONTREALKW
	S 2340	S 2135	* 1957	S 1903	* 1840	S 1820	* 1807	S 1800		MONTREAL KW 1.9 WESTMOUNT X
• • • • • • • • • • • • • • • • • • • •	S 2345	s 2140	* 2005	s 1909	* 1845	S 1825	* 1815	* 1805		MONTRÉAL WEST
			• • • • • • • • • • • • • • • • • • • •							MONTREAL WEST
• • • • • • • • • • • • • • • • • • • •	2348	2143		~~ ~~						
• • • • • • • • • •		F 2145					• • • • • • • • • • • • • • • • • • • •			LACHINE X
	F 2352	F 2147		S 1916			· · · · · · · · · · · · · · · · · · ·			FE GROVEHILLX
			2007				1817			SOUTH JCT
•••••			2010				1820			
										LASALLEX
			2013				1823		•••••	ADIRONDACK JCTX
					1846	1826		1806		NORTH JCT.
					1848	1828		1808		ST. LUC JCT
					1853	1833		1813		OUTREMONTx
					185 5	1835		1815		OUTRÉMONT X
					S 1858	S 1838		S 1817		V PARK AVENUEV
					1900	1840		1819		JAC. CARTIER JCT

^{*} No. 1 will flag stop at Montreal West to entrain for advertised stops Ottawa and west.

* No. 245 will stop at Westmount to entrain only.

* No. 133 will stop at Montreal West to entrain only.

* Nos. 273, 40, 42 and 156 will stop at Westmount and Montreal West to entrain only.

* No. 34 will stop at Westmount and Montreal West to entrain only.

MONTREAL				INW	ARD TR	AINS—F	IRST C	LASS		
TERMINALS	Train Order Office Signals	270	240	213	242	290	272	180	244	274
STATIONS	T T O	Pagr. Daily ex. Sat. and Sun.	Pagr. Daily ex. Sat. and Sun.	Pagr. Daily ex. Sat. and Sun.	Pagr. Daily ex. Sat. and Sun.	Psgr. 8at.	Pagr. Daily ex. Sat. end Sun.	Pagr. Dally ex. Sat. and Sun.	Pagr. Dally ex. Sat. and Sun.	Pagr. Dally ex. Sat. and Sun.
	WJ	0711	0747	0750	0807	0812	0812	0820	0832	0842
WESTMOUNT XY		S 0705	s 0739	S 0743	S 0759	S 0804	S 0805	S 0814	S 0824	S 0835
WESTMOUNT XY E E 2.7 MONTREAL WEST XY E E 2.7 MONTREAL WEST XY E E 2.4 MONTREAL WEST XY E E E E E E E E E E E E E E E E E E		. S 0659	s 0733	S 0737	S 0752	S 0757	S 0759	S 0807	S 0817	S 0828
SORTIN SORTIN BALLANTYNE X		0654	0729		0746	0754	0755		0811	0821
BALLANTYNE X		8 0651	0.22		S 0745	S 0752			S 0809	
GROVEHILLXY		8 0640	0727		S 0742	s 0750	0752		s 0806	0820
SOUTH JCTX)				0733						
1.0				S 0730						
ADIRONDACK JCTXY	4			F 0728						
Jct. Pen-Cen NORTH JCTX								0801		
ST. LUC JCT. X								0759		
3.9								0755		
OUTREMONT XY 1.0 BRESLAY X								0753		
V PARK ÄVENUEVX					ļ			S 0752		
JAC. CARTIER JCTX								0746		

MONTREAL	_	163		INW	ARD TR	AINS	FIRST C	LASS	333	
TERMINALS	Train Order Office Signals	262	296	153	298	232	248	284	37 35	2
STATIONS		Pagr. Daliy ex. Sun.	Pagr. Sun.	Pagr. Daily	Psgr. Sat.	Pagr. Dally ex. Sat. and Sun.	Pagr. Daily ex. Sat. and Sun.	Pagī. Sat.	D & H Psgr. Dally	Pagr. Dally
MONTREAL KWZ 3 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5		S 1438	1510 \$ 1503 \$ 1456	1650 \$ 1642 \$ 1635	1735 S 1728 S 1722	1735 S 1728 S 1722	1844 S 1836 S 1830	1943 \$ 1936 \$ 1929	* 1952 * 1945	2005 \$ 1958 \$ 1950
SORTIN 0.8 BALLANTYNE 0.7 LACHINE XY GROVEHILL XY		F 1427	1451 F 1449 F 1447		1718 F 1716 F 1714	1719 F 1717 F 1715	1825 F 1822	1924 F 1923 F 1921		1945 1942
SOUTH JCT. X LASALLE XY 1.0 8EAWAY 0.7	w								. 1923 1938 1931934	
SEAWAY 0.7 ADIRONDACK JCTXY Jct. Pen-Cen	4								1929	
NORTH JCTX ST. LUC JCTX 3.9				1631 1629						
OUTREMONT XY BRESLAY X 0.2 PARK AVENUE XX				1624 1622 \$ 1621						
JAC. CARTIER JCTX				. 1618			• • • • • • • • • • • • • • • • • • • •		• • • • • • • • • • • • • • • • • • • •	

MONTREAL TERMINALS DIVISION FOOTNOTES ON PAGES 10, 11, 12 AND 13

	INWARD TRAINS—FIRST CLASS						st.	an	MONTREAL			
41	246	292	294	132	276	282	151	164	Train Order Office Signals			TERMINALS
Pagr. Daily	Pagr. Dally ex. Sat. and Sun.	Pagr. Sat.	Pagr. Sum.	Pagr. Dally	Pagr. Dally ex. Sat. and Sae.	Pagr. Sat.	Pagr. Daily ex. Sun.	Psgr. Taes. Thur.	Tra			STATIONS
0850	0930	0930	1020	1030	1115	1117	1130	1235	WJ	1	S .	MONTREALKWZ
0842	S 0922	S 0923	S 1013	S 1023	S 1107	S 1112	S 1122	S 1227			Three	1.9x
0835	S 0915	s 0916	S 1006	S 1016	S 1100	S 1107	S 1116	S 1220		1 1	~ 5	MONTREAL WEST
• • • • • • • • • • • • • • • • • • • •	0910	0912	1002		1055	1102					-	SORTIN 0.8
	S 0908	S 0910	S 1000		S 1053	S 1101					Three Tracks	0.7 LACHINE X
•••••	S 0906	s 0908	S 0958		S 1051	s 1059					ĘË	GROVEHILLX
0828												SOUTH JCT
0825										BS	Tracks	LASALLEX
										4	₹ ĕ	SEAWAY
0821											-	ADIRONDACK JCTX
				1012			1112	1217				NORTH JCT.
				1010			1110	1215				ST. LUC JCT
				1005			1105	1210		Н	0 2	OUTREMONTX
				1003			1103	1208			Tracks	BRESLAY
				S 1002			S 1102	S 1207			-	V PARK AVENUEV
				0956			1059	1201				JAC. CARTIER JCT

		INW	ARD TR	AINS—I	FIRST C	LASS			2			MONTREAL
172	134 Pagr.	155	250			-parity	-	alle by s	Trais Order Office Signals			TERMINALS
Sun.	Sun.	Pagr. Daily	Page. Dally	1				2 1 1 1	-5			STATIONS
2100	2105	2145	2325						WJ	1	e S	MONTREALKWZ
\$ 2052	S 2058	S 2137	S 2318				11.01				Ta D	1.9 XY
S 2045	S 2053	S 2130	S 2313								Two Three racksTracks	MONTREAL WESTX
			2309								-	SORTIN
			F 2307								cks	BALLANTYNEX
			F 2304								Three	GROVEHILL X
												SOUTH JCT
			••••••				• • • • • • • • • • • • • • • • • • • •			B S	Two	LASALLEX
										4	₹ <u>₽</u> `	SEAWAY
												ADIRONDACK JCTXI
2042	2050	2127										NORTH JCTX
2040	2048	2125										ST. LUÇ JCTX
2035	2043	2120									. 5	OUTREMONTXY
2033	2041	2118									Tracks	BRESLAY
S 2032	S 2040	S 2117									F	V PARK AVENUEVX
2026	2036	2114										JAC. CARTIER JCTX

 $[\]star$ No. 35 will stop at Montreal West and Westmount to detrain only.

St Loc AS

MONTREAL TERMINALS DIVISION FOOTNOTES

TIMES SHOWN BELOW FOR INFORMATION ONLY

No. 926 Daily ex. Sun., arrive Ballantyne0001	No. 506 arrive Ballantyne1100
leave St. Luc0045	No. 908 Daily, leave St. Luc
NI CO1 C4 Tue	No. 910 Daily, arrive Ballantyne
No. 501 arrive St. Luc	No. 937 Daily, leave Ballantyne
No. 912 Daily, arrive St. Luc	No. 942 Daily, arrive Ballantyne
No. 931 Daily ex. Sun. & Mon., leave Grovehill0130	No. 903 Daily, arrive St. Luc
No. 913 Daily ex. Mon., arrive St. Luc	leave Ballantyne
No. 927 Daily ex. Sun., arrive St. Luc	No. 918 Daily, ex. Sat. & Sun., leave St. Luc
leave Ballantyne0400	No. 915 Daily ex. Sun., leave Ballantyne
No. 904 Daily, arrive Ballantyne	No. 929 Daily ex. Sat & Sun., leave Grovehill2050
leave St. Luc	No. 916 Daily, arrive Ballantyne
No. 85 Daily ex. Sun., leave St. Luc	No. 952 Daily, arrive Ballantyne
No. 65 Daily ex. Suit., leave St. Luc	leave St. Luc
No. 505 leave Ballantyne	
No. 928 Daily ex. Sun. & Mon., arrive Grovehill0600	No. 511 Arrive St. Luc
No. 905 Daily, leave Ballantyne	No. 914 Daily ex. Sat., leave St. Luc
No. 86 Daily ex. Mon., arrive St. Luc	No. 920 Daily ex. Sat., leave Grovehill
No. 919 Daily ex. Mon., arrive St. Luc	leave St. Luc
arrive Grovehill0800	No. 91 Daily, arrive St. Luc
No. 981 Daily ex. Tuesday, arrive St. Luc	No. 925 Daily, leave Ballantyne
No. 911 Daily, leave Ballantyne	No. 949 Daily ex. Mon., arrive St. Luc
No. 930 Daily ex. Sun. & Mon., arrive Grovehill0835	Daily ex. Mon. & Tues., leave Ballantyne0210

1 Transfer of passengers from inward to outward trains will be made at Montreal West, unless inward train can arrive Montreal fifteen minutes before departure time of outward train. Should a train with passengers for connection be delayed after leaving Montreal West, outward train must be held for connection at Montreal or Westmount.

2 Yard limits, Montreal, extend to yard limit signs at mileage 3.83 Winchester subdivision, mileage 9.2 Park Avenue subdivision and mileage 38.8 Adirondack subdivision.

Three main tracks in service between mileage 0.3 and mileage 1.9, Westmount Sub. and between Ballantyne and Dorval numbered 1, 2 and 3 from south to north. Two main tracks in service between mileage 1.9 Westmount Sub. and Ballantyne designated as North track and South track. Two main tracks in service between Seaway Spur and Outremont designated as west track and east track.

Movements against the current of traffic within yard limits, Montreal Terminals Division, must not be made except as authorized by the Area Supervisor or Traffic Supervisor.

3 All Junctions, Montreal Terminals, are interlocking except: Breslay and Mile End — ABS.

Twin drawbridges, Seaway Canal, mileage 41.4 Adiron-dack subdivision — Interlocking. Controlled by operator Seaway Tower. Rule 663 applies.

West Loop, St. Luc yard, between Hampstead and Hump Office — Interlocking. Controlled by operator Hampstead Tower. Rule 663 applies.

All main tracks Montreal Terminals and, in addition, those of the Adirondack subdivision between mileage 38.3 and yard limit sign mileage 38.8 are within interlocking limits. These interlocking limits also include South Jct. lead, North Jct. lead, St. Luc Branch, Farnham Connection and South Independent lead at Ballantyne. Exceptions are as follows:

WITHIN ABS

(ABS Rules and Footnote No. 15 page 11, apply)

Adirondack subdivision Park Avenue subdivision between mileage 49.1 and mileage 50.3; between mileage 0.0 and mileage 5.0; between mileage 5.9 and mileage 9.0.

OUTSIDE ABS

Outremont subdivision, South Bank Branch subdivision, LaSalle Loop subdivision, North Bank Branch subdivision and Park Avenue subdivision between Mile End and Breslay.

4 In Montreal Terminals, including to Dorval on Winchester Subdivision, and to mileage 38.3 on Adirondack Subdivision, when necessary to pass interlocking signals indicating STOP which do not govern movements over dual control switches, Rule 663 will apply.

When interlocking signals indicating STOP govern movements over dual control switches, Rule 104B must apply in addition to Rule 663 except that, in the event of signals becoming

inoperative and information has been received that all dual control switches affected by one or more interlocking signals have been placed in HAND position and lined for the route to be used, signalman may verbally authorize movements to pass signal or signals involved over that route in accordance with Rule 663 only.

When there is no means of communication, operations must be directed by a 'Signalman' on the ground who will be governed by these instructions.

NOTE: Interlockings at Montreal, Westmount and Montreal West are equipped with power switches which are not dual controlled. Rule 104B does not apply.

5 Equipment with built-in markers equipped to display only yellow or red to the rear will, when necessary, display yellow instead of green to comply with Rule 19.

6	Perm	anent Slow Orders	Permissible Speed Miles per Hour					
Mile	eage	Location	Passenger Trains	Freight and Mixed Trains				
		Westmount Subdivision						
0.0 to	0 0.3	Interlocking limits	10	10				
0.6 t			70	1/1/1				
		forms (backing-up) Montreal West Station	10	10				
		platforms Montreal West Station	15	15				
		platforms (backing-up) Westmount and Montreal West interlockings	10	10				
		through turnouts and crossovers	15	15				
		Winchester Subdivision						
		Montreal West Station						
		platforms	15	15				
		platforms (backing-up)	10	10				
0.0 t	0 2.0		55					
		Grovehill Spur on curves	20	20				
		Lachine Spur on curves	20	20				
		Adirondack Subdivision						
40.7 t	0 42		50	1,000				
42.4 t			60	11k D				
44.6 t			40	40				
45.5 t			60					
48.9 t			30	30				
		South Bank Branch Sub.						
0.0 t	0 6.)	10	10				
			Continue	ed on Page 11				

MONTREAL TERMINALS DIVISION FOOTNOTES — Continued

	Perman	ent Slow Orders		sible Speed per Hour
M	ileage	Location	Passenger Trains	Freight and Mixed Trains
0.0 t 4.31	to 4.31	LaSalle Loop Line Sub. St. Patrick St. Must be protected by a member of the crew	20	20 *10
	to 1.23 to 1.50 to 2.5	Farnham Connection On curves	30 20 30	30 20 30
0.0	to 2.1	St. Luc Branch Sub.	30	30
0.0	to 1.6	Outremont Sub.	30	30
0.0	to 0.7	South Jct. Lead	. 25	25
0.0	to 1.1	North Jct. Lead	. 25	25
~ Until	crossing	fully occupied.		

7 In territory where Rules 605-673 are effective, movements must not enter on nor foul interlocking territory nor re-enter in-terlocking territory after having cleared it, except by signal indication or until permission has been received from the signalman.

When the "Employee call" located on signal bungalows is operating either by a steady or a flashing light or sounding horn, or both, it is an indication for any employee in the vicinity, except crews on moving trains, to answer the signalman's phone at that location.

- In territory where rules 605-673 are effective, movements must not clear the main track at non-electrically locked hand operated switches at the locations listed in these footnotes. When switching movements are made through such switches, the switch must be left open until switching completed and movement has returned to the main track.
- 9 Trains originating in Montreal Terminals going beyond Dorval will obtain clearance from Smiths Falls Division Train Dispatcher, trains going beyond Seaway Spur will obtain clearance from Farnham Division Train Dispatcher, and trains going beyond Jac. Cartier Jct. will obtain clearance from Laurentian Division Train Dispatcher.
 - 10 Trains originating at St. Luc must register at St. Luc.
- 11 Northward Penn Central trains will report to operator at Seaway Tower when they are ready to leave Adirondack Jct. and will stop engine at Seaway Tower to obtain CPR clearance. OK'ed by Farnham Division Train Dispatcher.
- 12 Trainmen who run regularly in and out of Montreal Windsor Station, will be required to sign special register provided for in Station Master's Office to certify that they are competent to handle drafts between Montreal Windsor Station and Glen Yard, having properly qualified in the operation of back-up hose and possess full knowledge of hose signal, switches and rules governing movements between these points, and it will be the duty of conductors to ascertain if the trainmen assigned to back up drafts have registered. In the event of trainmen not having qualified, advice by wire should be sent to office of Superintendent of Terminals by conductor so that arrangements can be made to have draft handled by qualified man. In accordance with Air Brake Rule 9, form 582, which covers the operation of trains with control from the rear, when backing trains from Montreal Windsor Station to Glen Yard, the brakes are to be applied by the Trainman, by using standard back-up hose, on the leading car before backing out of train shed. When trainman is ready to back out, he will give three blasts with the communicating signal, then apply brakes and he must know that brake is applied on the leading car of the draft, before giving clear hand signal to back up. Engineman must not back up until he knows that brakes have

been applied on his engine by the Trainman using the back-up hose and, where a solarium car is the leading car of draft, Engineman will not back up until he receives a second three blasts of communicating signal, after the brakes have been applied.

- 13 Inward passenger trains will be advised at Montreal West the track number to be used at Montreal. This is to ensure that trainmen on arrival may be in position to open all vestibule doors and, direct passengers to detrain on the platform side. The Station Master at Montreal Windsor Station or his representative will communicate this information to Montreal West.
- 14 Whistle signal 14(L) is prohibited within the limits of the Town of Montreal West, City of Cote St. Luc, Town of Mount Royal and City of Montreal except for the following crossings where whistle signal 14(L) must be sounded.

South Bank Branch.....Lafleur Avenue

LaSalle Loop Line.....All crossings North Bank Branch.....Blvd. Gauron, Ville St. Pierre. The ringing of engine bell is prohibited for public crossings at grade within the limits of the City of Montreal.

- 15 Provided fixed signals indicate proceed, movements may be made with the current of traffic on the time of superior trains, provided such movements are kept sufficiently clear to avoid delay.
- 16 Bulletins for CONDUCTORS, YARDMEN, ENGINE-MEN, AND FIREMEN and Standard Clocks are located as follows:

Hochelaga. Outremont, Cote St. Paul, St. Luc Yard Office mess room, St. Luc Departure Yard, St. Luc Hump Office,

Hampstead Tower, Lachine Piggyback Yard, LaSalle Mess Room, Windsor Station, Glen Yard Office, Glen Shop, St. Luc Diesel Shop.

17 WESTMOUNT SUBDIVISION.

A—Electrically locked hand operated switch, track No. 1 to St. Henry lead, mileage 1.1. Footnote No. 7 applies.

Movements from Nun's yard tracks, Windsor Station, must not line either switch to enter or foul interlocking territory until permission has been received from signalman Westmount, after which crews will be governed by indication of signal.

Routes through Montreal interlocker for yard move-ments originating from Windsor Station are not to be lined nor signal indication given until a member of the crew has advised the Train Director or Leverman located at Westmount Tower that the movement is ready to proceed.

Telephones for communicating with signalman at Westmount are located near signals 01, 01-4, 03-3, 04-2, 04-3, 13 and 15.

Telephones for communicating with operator Montreal West and signalman Westmount located on re-lay case at signal 43, and at east end of platform between tracks 2 and 3, Montreal West.

- B-Under Air Brake Rule 31, form 582 (Running Test), it is necessary for enginemen on all passenger trains to make sufficient application of the brakes to ascertain that brakes are in operating condition approaching the entrance to Montreal Station. In order to have uniform practice in this territory, this test is to be made between Westmount Tower and signals 14, 14-1, 14-2 near Greene Avenue.
- C—In Switching Imperial Tobacco Company's Track, St. Henry, CTC Order 53086 restricts switching to night hours 1830 to 0500 no car to be allowed to stand on portion of track on St. Antoine Street. Before any car or engine shall cross St. Antoine Street, or move along Bourget Street, member of crew will precede the movement to see that streets are clear before giving Engineman signal to proceed. Movements over such streets must be protected by member of crew.

MONTREAL TERMINALS DIVISION FOOTNOTES — Continued

D-Movements over loop track, Glen Yard, will be governed as follows: Signal 01, governs movements from tracks Nos. 3

to 27 loop yard. Signal No. 02 governs movements from track No 2,

loop yard. Signal 03 governs movements from track No. 1,

loop yard. Signal 04 governs movements from track No. 1

Old Yard. Signal 05 governs movements from west end lead,

Old Yard.

Switches must be lined by crews and restored to normal position after being used.

Movements must be made at restricted speed, not exceeding 8 mph. In the event that signal remains at STOP for 5 minutes, crews must know that the route for their movement is properly lined afterwhich movement may proceed under protection of flagman.

In the case of drafts backing up, person in charge must be sure to leave valve handle of air hose controller in open position before leaving draft to

make such arrangements. Telephones for communicating with Area Supervisor, Westmount Tower or Switchtender are located on signal 03 and on post, South side of track, 100 feet beyond signal 05.

- E—Eastward movements on third track extending be-tween Montreal West and Westmount must stop clear of switch leading to loop track, Glen Yard and only proceed on hand signal from switchman on ground.
- F—All trains stopping at Montreal West station must not move over Elmhurst Avenue or Westminster Avenue crossings until gates have been lowered and will ring engine bell or, if necessary, blink headlight to indicate to towerman that train is ready to proceed.
- G—Restricted horizontal clearance exists on station tracks Nos. 3, 4, 7 and 8 at Windsor Station on account of cross arms on lighting standards on platforms. Employees are prohibited from riding on sides of engines and cars while operating on these tracks.
- H-Nos. 270, 241, 232, 249, 248, 275, 250, 277, 292 and 298 may register at Montreal by register ticket.

18 WINCHESTER SUBDIVISION.

- A—Electrically locked hand operated switch, at mileage 3.68, Meadowbrook Spur. Footnote No. 7 page 11
- Telephones for communicating with operator St. Luc Yard located on electric locks leading to Meadowbrook Spur and at CNR Connection. On relay case at signals 33B, 33C, on signals 33, 34 Dorval, signals 50, 29, 29B, 29E, 30 and on steel relay house Lachine. Signals 21, 21C, 24 and on steel relay house Ballantyne. Telephone for communicating with operator Mont-real West located on signal WO-14.
- C—Eastward freight trains operating on track No. 1 at Lachine will stop clear of the pedestrian cross-walk at time westward passenger trains with stops at La-chine are due unless and until it is known that the train will not be stopped at a point where the pedestrian cross-walk will be blocked. When necessary, trains must be cut to allow passengers to use the cross-walk. Radio communication will be used to ascertain that passenger trains are operating on time.

ADIRONDACK SUBDIVISION.

-Electrically locked hand operated switches at mileage 38.37, 39.3, 40.05, 40.06, 43.25, 43.4, 43.86, 48.86 and at crossovers mileage 42.9, 43.3, 47.07. Footnote No. 7 page 11 applies.

- B-Telephones for communicating with operator at Seaway Tower are located in instrument cases near signals 383-384-423-424-407-408-413 and 414.
- C—After last switching movement LaSalle has been completed, yard foreman or conductor must promptly advise operator at Seaway Tower. Before switching resumes, yard foreman or conductor should again contact operator at Seaway Tower so that route can be lined up and signal displayed. Yard crews must watch dwarf signal 424-C at all times to see that proper indication is displayed for their movements.
- D—The switches controlling movements to and from track No. 2 and the South Bank branch at the north end of LaSalle yard will be treated as main track switches and will, when not in use, be kept right and locked in accordance with Rule 104. The normal position will be for the South Bank branch and track No. 2 LaSalle yard. Crews setting out cars at LaSalle will leave them on track No. 1.
- E-Spring switch located at north end of LaSalle yard, mileage 42.9. Rule 104A applies.
- F-Mileage 48.81 Wilderton Avenue crossing is equipped with automatic gates and flashing lights. Northward movements on both main tracks must stop south of the crossing if signal 487 or 487B displays stop. Northward movements on the service track must stop at stop sign south of crossing, request signal indication on signal 487 permitting movement to proceed. Such indication must be received before proceeding over crossing. In event with restriction in accordance with footbast. authorization in accordance with footnote No. 4. page 10, is obtained to pass signals 487 or 487B when displaying STOP indication, movements over crossing must be protected by member of crew. All cars left on the service track must be left south of the stop sign south of the crossing.
- -Spring switch located at south end of South Loop, Sortin yard to Farnham connection at South Jct. Rule 104A applies.
- H—Footnote No. 8 page 11 applies at switches mileage 42.4, 42.9, 47.8 and 47.9.
- I Signals 431B, 432B, 478B and 479B are located to the left of the track they govern.

20 NORTH JCT. LEAD.

Footnote No. 8, page 11, applies at switch, mileage 0.48.

21 ADIRONDACK SUBDIVISION, SOUTH JCT., NORTH JCT. CONNECTION, FARNHAM CONNECTION AND ST. LUC BRANCH.

A—Telephones for communicating with operator at St. Luc Yard are located near signal 16, 17, 429C, relay case signal 432, 439, 442, relay case near signal 071, 445, 446, 455, 456, 470, 487, 490 and under Rockland overpass mileage 49.4, also at Electric locks, south and north of Lachine Canal, Dominion Fing Spare Knows Spare signal hungalow. Dominion Eng. Spur, Knoxs Spur, signal bungalow, South Jct., and signal bungalow halfway between Cote St. Luc Road and Hudson Ave.

22 ST. LUC YARD.

- A-All movements over all public and private crossings in the Mount Royal Industrial area must be protected by member of crew.
- B-Movements must not exceed 20 mph on west loop between signal 05 at Hampstead and signal 10 at Hump tower.

MONTREAL TERMINALS DIVISION FOOTNOTES — Continued

C—ACI SCANNERS are located at Wentworth, mileage 1.7, St. Luc Branch subdivision, at St. Luc Jct., mileage 45.48, Adirondack subdivision, and at Hampstead, mileage 46.8, Adirondack subdivision.

To avoid damage to eyes employees are prohibited from looking into scanner's lens when scanner circuit is occupied.

D—Electric Yard Switches at receiving yard, Hampstead, are equipped with switch point indicator lights:

Indications: Green Yellow —Set for straight track.
—Set for diverging route.

No light -Stop.

Hampstead Tower operator must be contacted to send maintainer to repair switch.

E—No car or engine is to move foul at south or hump end of St. Luc Receiving Yard before permission is obtained from the Hump Yardmaster on duty. This authorization must be secured at all times for all movements. It is the responsibility of the Hump Yardmaster to see that engines of incoming trains or transfers proceed to the shop track without undue delay.

23 ST. LUC BRANCH SUBDIVISION.

A—Electrically locked hand operated switches at mileage 0.05 and mileage 0.56, footnote No. 7 page 11 applies.

24 PARK AVENUE SUBDIVISION.

- A—All southward freight trains operating between Mile End and Hochelaga must not exceed 20 mph between Masson Street, mileage 3.55 and St. Catherine Street, mileage 1.65 and Special Instruction L page 45, in connection with retaining valves applies to southward freight movements between mileage 3.55 and mileage 1.65.
- B—Trainmen and other employees are forbidden to ride on the top or sides of cars and engine crews are forbidden to put head out of engine cab side windows when passing restricted clearance points on Barrett's industrial tracks, Mileage 4.45.
- C—Before proceeding over Beaubien Street crossing mileage 5.42 movements must stop at stop signs erected on each side of crossing.
- D—Movements leaving Hochelaga and proceeding beyond Angus are to contact the Area Supervisor at Outremont before leaving or passing Angus in order that movements of Outremont yard engines working in Beaubien Yard may be co-ordinated.
- E—Engines or cars exceeding 15'3" extreme heigth or 14'11" high at eaves, measured from top of rail, must not be moved under Notre-Dame Street bridge on lead to Delorimier Yard, mileage 0.93. Riding on top or sides of cars is prohibited.

25 SOUTH BANK BRANCH SUBDIVISION.

- A—All tracks are other than Main tracks, Rule 105 applies.
- B—In performing services on the South Bank Branch (Cote St. Paul Area) no cars are to be allowed to stand on tracks located on the travelled portion of a public street, no back and forth switching

movements of cars to be made on that portion of a public street—cars to be switched in order elsewhere—and all switching movements over streets must be protected by member of crew.

- C—No switching movements are to be made over the crossing of Lafleur Avenue at the drawbridge Mileage 0.8 between the hours of 1600 and 1800 and movements between Cote St. Paul and LaSalle must be curtailed to a minimum.
- D—Mileage 0.8 Lafleur Avenue, Ville LaSalle. Movements must stop at stop signs erected on each side of crossing, then trainmen will proceed to boxes marked "Trainmen's Push Buttons," located on each side of crossing, and push button marked "Start" before proceeding. If train then does not proceed over crossing, the "Stop" button must be used to prevent unnecessary operation of the protection.
- E Mileage 3.80 Church and St. Patrick streets. ALL movements must stop at stop signs on each side of crossing and wait for yellow light before proceeding.
- F—In Switching private track serving Ross Engineering of Canada, Mileage 0.98, only one car may be placed in their building at a time, and under no circumstances must an engine enter this building.
- G—Trainmen must not ride on top or sides of cars when passing through subway under Canadian National tracks.
- H—Equipment 85 feet in length or longer must not be used to switch industrial tracks.

26 LASALLE LOOP LINE SUBDIVISION.

- A—All tracks are other than Main tracks, Rule 105 applies.
- B Mileage 0.42 Lafleur Avenue and

Mileage 3.7 — Jolicoeur Street. Movements must stop at stop signs erected on each side of crossing, then trainmen will proceed to boxes marked "Trainmen's Push Button" located on each side of crossing and push button marked "Start" before proceeding. If train then does not proceed over crossing, the "Stop" button must be used to prevent unnecessary operation of the protection.

- C—All movements over all public and private crossings must be protected by a member of the crew except where crossings are protected by automatic crossing protection and protection is operating as intended.
- D—Equipment 85 feet in length or longer must not be used to switch industrial tracks.

27 NORTH BANK BRANCH.

When transfer engines working east of Atwater transfer are required to move over crossing at Blvd. Gauron, Ville St. Pierre, adjacent to entrance of Canada Car & Foundry plant, all movements over crossing must be protected by member of the crew.

28 OUTREMONT SUBDIVISION.

A—All tracks are other than Main tracks, Rule 105 applies.

			W	ESTWA	ARD TI	KAINS					
MINISTER		T WEU		FIR	RST CLAS	S	4	-111			
WINCHESTER SUBDIVISION							277	251	275	249	247
SOBDIAISION	E PARTIE LA TRANSPORTE		E	JFE			Passenger Daily	Passenger Daily	Passenger Daily ex. Sat.	Passenger Daily ex. Sun.	Passenge Dally ex. Sat
									and Sun.	on. Juli.	and Sun
STATIONS		-									
Protomovity Trans							2335	2130	1857	1750	172
MONTREALKWZ 1,9 WESTMOUNTXY	and the second s					12877-1497-1497-1498	1	22100	S 1903		S 172
2.7							S 2345	S 2140	s 1909	S 1802	S 173
MONTREAL WESTX	1										
SORTIN							2348	2143	1912	1805	173
BALLANTYNEX							1		S 1914		\$ 174
LACHINE XY			l						S 1916		
GROVEHILL XY							F 2355	F 2150	S 1919	S 1812	S 17:
Jct, with C.N.R.							F 2255	F 2152	s 1922	S 1815	S 17
PINE BEACH							F 2357	E 2155	S 1922	S 1817	S 17.
0.7 STRATHMORE			••••••						s 1924 s 1926		
VALOIS						1112			0 1000		
LAKESIDE							1 0000			S 1821	
CEDAR PARK							1111	F 2202		S 1824	
0.5 POINTE CLAIRE								F 2204			
BEACONSFIELDP	x	<u></u>				1				F 1832	
BEAUREPAIRE							F 0013			F 1832	
BAIE D'URFE						••••••		F 2214 F 2217		S 1839	
V STE. ANNESPV	x						F 0019	F 2217	1940	F 1842	100
1.0 BRUCY							P 0000	F coor	F 1950		
1.6 ILE PERROT						*********	F 0023				_
0.7 VALIDREUIL KPVWX	(Y						. S 0026	2225	1934	1845	18
Jct. with M. & O. Sub.	WK (m 10-130 4)								. ug		
Smiths Falls Division							Train		Train		
							Subdivision		Subdivision		
							N N		. divi		
			1				Sub	331.0		Ora in second	
							0		· · · · ·		
							eg		«×		
							≱				
the little was a state of			111111		100		Daily		ex. Sat.	Dally ex. Sun	n. ex.
Colored Street, Street, Square, Square		7	1		100	al Pade			and Sun.		and
The state of the s	physical residence		10.3		DINA.	to bole	277	251	275	249	7 24
	The section of the section of		1	WIND CO.	CALL PROPERTY.	100					

WINCHESTER SUBDIVISION FOOTNOTES

Maximum speeds unless otherwise res	tricted — M.P.H.
Passenger trains: Other	89
Freight trains: Nos. 928-929-930-93	31 65 (Note)
Note — Will also be governed by sp for passenger trains.	
nanent Slow Orders Westward Track	Permissible Speed Miles per Hour
Monte in the second sec	n Theight on

Permaner	nt S	low O	ders	Westwa	ard frack		per riour
Mileage			Loc	ation		Passenge Trains	r Freight and Mixed Trains
0.0	to	2.0	On	curves		. 55	_
8.0	to	15.0				. 80	—
15.0	to	18.0	On	curves		. 50	_

Permaner	nt Sl	ow Or	ders	Eastwar	d Track		sible Speed per Hour
Mileage		with	Loc	ation		Passenge Trains	r Freight and Mixed Trains
18.0	to	15.0	On	curves		50	
15.0	to	8.0	On	curves		80	
2.0	to	0.0	On	curves		55	_ ×

Special Instruction "C" is amended as follows:

Except when weather or other conditions prevent proper running inspection trains 505, 506, 903, 904, 905, 910, 911, 912, 915, 916, 925, 926, 927, 928, 929, 930, 931, 937, 942, 949 and 952 need not stop for standing train inspection and other freight trains may run 75 miles without stopping for standing train inspection.

	Mr.			,	WESTV	VARD '	TRAIN	S						}			ls.	
					FI	RST CLAS	S					al West		WINC	HESTE	R	Signa	S.
247	245	273	243	271	295	231	293	263	1	281	241	Montreal		SUBDI	VISIO	1	Order Office Signals	ity Sidings
Passenger Daily ex. Sat. and Sun.	Passenger Dally ex. Sat. and Sun.	Passenger Dally ex. Sat. and Sun.	Passenger Daily ex. Sat. and Sun.	Passenger Daily ex. Sat. and Sun.	Passenger Sat. and Sun. only	Passenger Daily ex. Sat. and Sun.	Passenger Sun. only	Passenger Daily ex. Sun.	Passenger Daily	Passenger Sat. only	Passenger Daily ex. Sat. and Sun.	Wiles from		STAT	TIONS	dir.	Train Orde	Car Capacity
\$ 1736 1739 \$ 1742 \$ 1745 \$ 1750 \$ 1754 \$ 1757 \$ 1801 \$ 1803	1719 * 1725 1731	1715 * 1721 * 1727	1645 \$ 1651 \$ 1657	1610 \$ 1616 \$ 1616 \$ 1622 	\$ 1620 1623 \$ 1624 \$ 1626 \$ 1629 \$ 1635 \$ 1637 \$ 1640 \$ 1642 \$ 1645 \$ 1655 \$ 1655 \$ 1658 	\$ 1442 1445 F 1447 F 1449 \$ 1452 F 1455 F 1457 F 1459 F 1501 F 1504 F 1506 \$ 1509 F 1512 F 1516 \$ 1519 F 1522 F 1525	S 1229 S 1231 S 1233 S 1236 S 1236 S 1241 S 1243 S 1245 S 1247 S 1249 S 1251 F 1259 S 1302 F 1304	\$ 1229 \$ 1231 \$ 1233 \$ 1236 \$ 1236 \$ 1241 \$ 1243 \$ 1245 \$ 1245 \$ 1245 \$ 1255 \$ 1255 \$ 1302 \$ 1304 \$ 1307	* 1127 1130 1131 * 1133 	S 0950 0953 F 0954 F 0955 F 0957 F 0959 F 1001 F 1003 F 1007 F 1009 F 1011 F 1014	S 0733	0.0 1.4 2.2 2.9 3.3 4.8 6.0 6.7 7.3 7.9 8.7 9.2 10.2 12.1 13.8 15.6 16.6 18.2 18.9	A B S Inferie	Two Ltacks Workers Wovement by Signal Indication Workers W	ONTREAL 1.9 STMOUN 2.7 IREAL W 1.4 ORTIN 0.8 1.4 ORTIN 0.7 CONTREAL 0.7 ORVAL VITH C.N.R. 1.2 E BEACH 0.7 ATHMORE 0.5 ATHMORE 0.6 AR PARK 0.5 CONSFIEL 1.0 CONSFI	XY XY XX XE	DR	Yard Nil Nil Yard Yard Nil
Daily	Dally	M. & O. Subdivision	Dally	M. & O. Subdivision	M. & O. Subdivision	Dally	M. & O. Subdivision	M. & O. Subdivision	M. & O. Subdivision	Sat. only	Daily							
ex. Sat. and Sun. 247	ex. Sat. and Sun.	ex. Sat. and Sun.	ex. Sat. and Sun.	ex. Sat. and Sun.	295	ex. Sat. and Sun.	293	ex. Sun.	46	281	ex. Sat. and Sun. 241							

WINCHESTER SUBDIVISION FOOTNOTES—Continued

Smiths Falls Train Dispatchers will supervise train movements between Vaudreuil and Dorval and will issue train orders between Dorval and Grovehill on request of the Laurentian Division. On request of the Montreal Terminals they will issue train orders within the Montreal Terminals.

Montreal Terminals Traffic Supervisors will supervise movements between Dorval and Grovehill.

Trains originating in Montreal Terminals going beyond Dorval must obtain clearance from Smiths Falls Train Dispatcher and may leave Ballantyne and Grovehill without a clearance and may leave Dorval and Vaudreuil without a clearance provided train order signal indicates proceed.

Eastward trains originating on Winchester subdivision west of Vaudreuil may leave Vaudreuil without obtaining clearance provided train order signal indicates proceed.

Times shown Montreal to Lachine inclusive are for information only. Movements between Grovehill and Montreal, or St. Luc, will be governed by schedules and footnotes for Montreal Terminals Division pages 6 to 13 inclusive.

Movements West of Vaudreuil, mileage 18.9, will be governed by current Eastern Region Time Table.

Laurentian Division extends to mileage 20.0.

Rules 251-257 apply on eastward and westward tracks between Dorval and Vaudreuil.

Jct. with M & O Subdivision at Vaudreuil — Interlocking.

CONDITIONAL STOPS

* See page 7

Continued on Page 16

ning

ed ur and rains

916, 1 not run

ge 15

1			Î	ı			ell , " y	EASTW	ARD T	RAINS	3			
West	WINCHESTER	Signelia	,,,					FI	RST CLAS	s				
from Montreal	SUBDIVISION	Order Office S	Capacity Sidings	270 Passenger	240 Passenger	242 Passenger Daily	290 Passenger Sat. only	272 Passenger Daily	244 Passenger	274 Passenger Daily	246 Passenger	292 Passenger Sat. only	294 Passenger Sun. only	276 Passenger
Miles	STATIONS	Train	Car Ca	Dally ex. Sat. and Sun.	Daily ex. Sat. and Sun.	ex. Sat. and Sun.	out. Uniy	ex. Sat. and Sun.	ex. Sat. and Sun.	ex. Sat. and Sun.	ex. Sat. and Sun.			ex. Sat. and Sun.
	MONTREALKWZ }	WJ	Yard	0711	0747	0807	0812	0812	0832	0842	0930	0930	1020	1115
	WESTMOUNT .XY		Nil	S 0705	S 0739	s 0759	S 0804	S 0805				S 0923		S 1107
0.0	MONTREAL WEST .X 3	Ē	Nil	S 0659	S 0733	S 0752	S 0757	S 0759	S 0817	s 0828	S 0915	S 0916	S 1006	S 1100
1.4	SORTIN		Yard											
2.2	BALLANTYNEX		Yard	0654	0729	0746	0754	0755	0811	0821	0910	0912	1002	1055
2.9	LACHINEXY		. Nil	S 0651		S 0745	S 0752		0002			S 0910		S 1053
3.3	GROVEHILLXY		Nil	S 0649	0727	S 0742	S 0750	0752	S 0806			S 0908	S 0958	S 1051
4.8	DORVAL X	DR	Nil	\$ 0647			S 0747	S 0749				\$ 0905		S 1048
6.0	PINE BEACH		. Nii	S 0644	- ,				S 0800			S 0902		S 104:
6.7	STRATHMORE		Nil		0,72	The second second	S 0743				S 0857	S 0900		\$ 1042
7.3	VALOIS 💆		. Nii	s 0640	S 0716	S 0734	S 0741		S 0755			S 0859		S 103
7.9	LAKESIDE 5		Nil	0 0 0 0			S 0739				S 0852	S 0857	\$ 0947	S 1037
8.7	CEDAR PARK		. Nil	S 0636		S 0728	S 0737						\$ 0945	S 103.
9.2	POINTE CLAIRE		Nil	S 0634			S 0735	S 0735		S 0808	113	S 0853	1	S 1033
10.2	BEACONSFIELDPX }	n	. 45	S 0631	S 0707	0724	s 0730	S 0731		S 0804		S 0850		S 1030
12.1	BEAUREPAIRE §	•	Nil	\$ 0628	27001 RC P. S S S S S S S S S	S 0721	F 0727	· · · · · · · ·				S 0847	S 0937	\$ 102
13.8	BAIE D'URFE		Nil	S 0624			F 0724	1	0.10			S 0844	F 0934	S 102
15.6	V STE. ANNES PVX		Nil	S 0621	0702	S 0711	S 0720	0721	S 0735	S 0754		S 0842	8 0932	S 102
16.6	1.0 BRUCY		Nil	S 0618			F 0718				F 0834	F 0840	F	6 404
18.2	ILE PERROT		Nil	S 0615		S 0705	F 0715		S 0730			S 0837		\$ 101
18.9	V VAUDREUIL KPVWXY Jet. with M. & O. Sub.	RO	Nil	s 0613	0657	0702		0715	0727	S 0746	0830	S 0835	\$ 0925	
	Smiths Falls Division		1	Train			Train	Train		Train		Train	Train	Train
										- E				E
				Subdivision			Subdivision	Subdivision		Subdivision		Subdivision	Subdivision	Subdivision
				ğ			1 2	P G		ip di		- Pg	n p q n	pq
							0.	9.		0.5		. o	9	o.
				94			. 8	8		- 85		. oğ	80	80
				ž			. ¥	ž		ž		ž	ž	×
				Daily ex. Sat. and Sun.	Dally ex. Sat. and Sun.	Daily ex. Sat. and Sun.	Sat. only	Daily ex. Sat. and Sun.	Dally ex. Sat. and Sun.	Daily ex. Sat. and Sun.	Dally ex. Sat. and Sun.	Sat. only	Sun. only	Dally ex. Sat and Sun
							200			274	246	292	294	276
				270	240	242	290	272	244	4/4	Z40	272	474	4.70

WINCHESTER SUBDIVISION FOOTNOTES — Continued

Vaudreuil is register station for trains originating and terminating only. Through trains to and from Smiths Falls Division will not register unless otherwise instructed.

Whistle signal 14 (L) is prohibited approaching public crossings at grade between mileage 2.48 and 3.92; between mileage 6.76 and 9.56; Woodland Ave., mileage 12.15; Perrot Blvd., mileage 16.62; Third Ave., mileage 18.07; and between mileage 18.44 and 22.3.

INTERLOCKING LIMITS - VAUDREUIL

WESTWARD — Between signals 183 - 189B, 190 - 190B Winchester Subdivision and signal 008 M & O Subdivision.

EASTWARD — Between signal 008 M & O Subdivision and signals 190 - 190B, 183 - 189B Winchester Subdivision.

Eastward signals 200 and 216 West of Vaudreuil are Station Protection Signals.

INTERLOCKING LIMITS - DORVAL

WESTWARD — Between signals 33, 33B, 33C, 33D Grovehill and signals 50 and 50B Dorval.

EASTWARD — Between signals 50 and 50B Dorval and signals 33, 33B, 33C, 33D Grovehill.

Three main tracks from Dorval extending to Ballantyne numbered 1, 2 and 3 from South to North.

Telephones for communicating with operator St. Luc are located near signals 33, 33B, 33C, 34, 45 and 50.

					E	ASTW	ARD T	RAINS						10 to
		10				FIR	ST CLASS				- 11	in the		WINCHESTER
276	282 Passenger	262 Passenger	296 Passenger	298 Passenger	232 Passenger	248 Passenger	284 Passenger	2 Passenger	250 Passenger	112	142	ro. i		SUBDIVISION
Dally ex. Sat. and Sun.	Sat. oaly	Dally ex. Sun.	Sun. only	Set. only	Daily ex. Sat. and Sun.	Dally ex. Sat. and Sua.	Sat. only	Dally	Daily					STATIONS
1115	1117	1445	1510	1735	1735	1844	1943	2005	2325					MONTREALKWZ
S 1107	S 1112	S 1438	S 1503	S 1728	S 1728	S 1836	S 1936	S 1958	S 2318			• • • • • • • •		XY WESTMOUNTXY
S 1100	S 1107	S 1432	S 1456	S 1722	S 1722	S 1830	S 1929	S 1950	S 2313					MONTREAL WESTX
	,												• • • • • • • • • • • • • • • • • • • •	SORTIN
1055	1102	1427	1451	1718	1719	1825	1924	1945	2309				• • • • • • • • • • • • • • • • • • • •	BALLANTYNEX
S 1053	S 1101	F 1426	F 1449	F 1716	F 1717		F 1923		F 2307					LACHINEXY
S 1051	s 1059	F 1424	F 1447	F 1714	F 1715	F 1822	F 1921	1942	F 2304					GROVEHILLXY
S 1048	\$ 1056	F 1421	S 1444	F 1711	F 1712	F 1819	F 1918	S 1940	F 2302					DORVALX Jct. with C.N.R.
		_		T 4500	E 4=40	T 4046	F 1016		F 2300					PINE BEACH
S 1045				F 1709		47			F 2258					STRATHMORE
S 1042					F 1708	T 1010	F 1914		F 2256					VALOIS
S 1039		F 1415	F 1438			F 1813			F 2254					LAKESIDE
S 1037	S 1049	F 1413	F 1436	1,0.1	F 1704	E 4040	F 1911		F 2252					CEDAR PARK
S 1035	S 1047	F 1410	F 1434		F 1702		F 1909							POINTE CLAIRE
S 1033	\$ 1046	F 1408			F 1701	1000	F 1908	1022	F 2250 F 2248		2000000000000000			BEACONSFIELDPX
S 1030	S 1044	F 1404	F 1430	F 1658	F 1659	F 1806	F 1906	1933	F 2245					1.9 BEAUREPAIRE
S 1027		F 1401	F 1427	F 1655	F 1656	E 4004	F 1903		2243		F. 1			BAIE D'URFE
\$ 1023	F 1038	F 1357	F 1424	F 1652	F 1653	F 1801	F 1900	1926	F 2240					V STE. ANNESPVX
S 1020	S 1036	S 1354	S 1422	s 1650		S 1759	S 1858	1920	2240					1.0 BRUCY
		F 1352	77		F 1649		P 1055							ILE PERROT
\$ 1017		F 1350			F 1647	1954	F 1855	1920	2235					V VAUDREUIL .KPVWXY
S 1015	1030	S 1348	S 1413	S 1645	1645	1754	1853	1920	2233					Jct. with M. & O. Sub.
-ë		. <u>s</u>	Ę.	.e				Train						Smiths Falls Division
5		Train	Train	Train										
Sion		sion	sion	sion				Sion						
iv di		Subdivision	Subdivision	Subdivision				Subdivision			ļ			
Subdivision Train		Sub	Sub	Sub		1.00	2000	Sall	No.	1111.00			J	
o		O	ó	o				o						Afterland transfer Committee II.
∞			≥ ×	× ×				. oŏ . ₹	1					Section of Table Section for
2		. ≥	2	-					-		-	-		of cityle brigation is at privately
Daily ex. Sat. and Sun.	Sat. only	Daily ex. Sun.	Sun. only	Sat. only	Daily ex. Sat. and Sun.	Daily ex. Sat. and Sun.	Sat. only	Dally	Dally	11.23	to the			autor spill many sellings like
276	282	262	296	298	232	248	284	2	250	a(a)	Distance of the last	delingt.	W. 5. 15	the second of the second
	202	102	-/-	1 - 7 5					I III	men field	The second second			The first three transmitted to the state of

WINCHESTER SUBDIVISION FOOTNOTES — Continued

Electrically locked hand operated switch at Meadowbrook Spur, mileage 3.68, and C.N.R. connection, mileage 4.27. Movements must not enter on nor foul interlocking limits nor re-enter interlocking limits after having cleared it except by signal indication or until permission has been received from signalman. Rules 605-673 apply.

ation

ehill

gnals

num-

cated

ge 17

Meadowbrook Spur, mileage 3.68. All switching movements over public crossing, François Cusson St., must be protected by member of crew.

Dorval — All movements over crossing between Marshall and Michel Jasman Streets, Dorval Texaco Oil siding, must be protected by member of crew.

Movements must not exceed 20 mph on curve, mileage 0.12, Grovehill Spur.

At non electrically locked hand operated switches located at mileage 4.33, 4.42, 4.46, 4.62 and 4.64 track No. 3 at Dorval. Movements must clear the main track at these locations. When switching movements are made through such switches, the switch must be left open until switching completed and movement has returned to track No. 3. Rules 605-673 apply.

Montreal Terminals footnote No. 4, page 10, also applies between Grovehill and Dorval when interlocking signals governing movements over dual control switches indicate STOP.

	WESTWARD TRAINS-INFERIOR DIRECTION											_				
	le Ter		EV.		FIR	ST CLAS	S				111111		Vaudresil	M. & O.		
	NOIS		143		275	273	271	295 Psgr.	293 Pagr.	263 Pagr.	T Panr	277 Psgr.	from	SUBDIVISION		
	4/16	EFA!			Pagr. Dally ex. \$1t. and Sun.	Pagr. Dally ex. Sat. and Sum.	Pagr. Daily ex. Sat. and Sun.	Sat, Sun.	Spa.	Dally ex. Sun.	Pagr. Daily	Daily	Miles	STATIONS		
					1954	1804	1716	1705	1310	1310	1153	0026	0.0	VAUDREUILKWXY		
					F 2004								6.3	COMO		
							S 1733					S 0040	8.4	HUDSON		
							F 1735					F 0042	9.0	HUDSON HEIGHTS		
							F 1738					F 0044	10.6	ALSTON VALE		
					F 2017						J	F 0047	12.4	CHOISY		
					F 2020		1					F 0049 0055	14.2	DRAGON		
					2025				1540			0022	24.5	8.0 ST. BUGENE		
														9,4 VANKLERK HILL		
									-				41.7	7.8 7.8		
			• • • • • • • •										46.1	4.4 ALFRED		
			•	• • • • • • •	•					1			50.8	PLANTAGENET		
												3	61.6	10.8 BOURGET		
					-			-	-			5	70.9	9.3 LEONARD		
		÷)	74.9	NAVAN		
												5		V BLACKBURN		
• • • • • •	••••••							1					. 83.5	M & O JUNCTION		
													-	See		
											132.	5	85.4	OF (OO (OITAWA		
					Daily ex. Sat. and Sun				Sun.	Daily ex. Sun	Dally	Dally		Rule 93A applies between Vaudreuil and M&O Junction.		
					275	273	271	295	293	263	1	277		V HIGHARDIN PHANE TO THE PARTY OF THE PARTY		

M. & O. SUBDIVISION FOOTNOTES

Eastward trains must obtain a clearance in Ottawa terminals and may leave M&O Junction without a clearance.

Walkley is a standard clock, bulletin and register Station.

Times shown at Ottawa are for information only.

All regular trains may register at Vaudreuil by register ticket. Hudson is register station for Nos. 263 and 262.

Engine arriving Hudson on No. 263 must retain all train orders and may assume schedule of No. 262 and leave Hudson without a clearance provided there is no operator on duty and train order signal indicates proceed.

No. 262 will wait at Hudson until No. 263 arrives.

Engine arriving Rigaud on No. 293 Sunday must retain all train orders and may assume schedule of No. 296 and leave Rigaud without a clearance provided there is no operator on duty and train order signal indicates proceed.

No. 296 will wait at Rigaud until No. 293 arrives.

Rigaud is a register station for trains originating and terminating only.

Jct. with Winchester Subdivision at Vaudreuil—Interlocking.

★No. 1 and No. 2 will stop at Vankleek Hill for revenue passengers.

When passenger trains meet at Hudson, westward passenger trains will unless otherwise directed, take siding at crossover switch located 300 feet west of station.

ABS-Eastward between:

M&O Junction and block end sign mileage 81.5. Signal 176 to Vaudreuil.

Westward between:

Signal 189 at Vaudreuil to block end sign mileage 17.3. Signal 09 at mileage 80.2 to M&O Junction.

Rules 263-273 apply continuous from signal 11 at mileage 81.5.

INTERLOCKING LIMITS—VAUDREUIL

WESTWARD—Between signals 183-189B, 190-190B Winchester Subdivision and signal 008 M&O Subdivision.

EASTWARD—Between signal 008 M&O Subdivision and signals 183-189B, 190-190B Winchester Subdivision.

RAILWAY CROSSING AT GRADE

Mileage 33.2—C.N.R. — Automatic interlocking. When applying Rule 672 movements must proceed at restricted speed to the "Block end" sign. Timing circuit eastward from mileage 35.8 to interlocking signal 331, westward from mileage 30.4 to interlocking signal 331. Special instruction G applies—8 minutes. Passenger trains must not exceed 50 mph.

Trains and engines between Walkley Yard and signal 11 at mileage 81.5 M&O sub., including Industrial Lead located west of Hawthorne, connecting to Walkley line at mileage 0.6 and Ottawa Subdivision at mileage 0.6 will be governed by C.N.R. St. Lawrence Region, Rideau Area, Ottawa Terminals current time table. Restrictions prohibiting the sounding of engine whistle signals within limits of City of Ottawa will be found in that time table. Park Avenue train dispatchers will issue train orders to C.P.R. trains and engines relating to track conditions in this area on request of C.N.R. authorities.

Switch leading to Pilgrimage lead west end of siding Rigaud is to be left set for movement from siding to main track. When in this position yellow light and target will so indicate.

Any movement over the Ottawa-Montreal Road which crosses tail track of wye at Rigaud must be protected by member of crew.

							EAST	TWAR	TRAI	NS-S	UPERI	OR DI	RECTIO	N			
			THE	A NA	AT					FIRST (CLASS	144					
201	jer gnals	clty	270	290	272	274	292	294	276	262	296	298	2	481		n T	
	Train Order Office Signals	Car Capacity Sidings	Pagr. Dally ex. Sat. and Sun.	Pagr. Sat.	Pagr. Dally ex. Sat. and Sun.	Pagr. Daily ex. Sat. and Sun.	Psgr. Sat.	Pagr. Sun.	Pagr. Daily ex. Sat. and Sun.	Psgr. Daliy ex. Sun.	Pagr. Sun.	Pagr. Sat.	Pagr. Daliy	Ŕ	<u>\</u>		
KWXYZ	RO	Yard	s 0613	s 0713	0715	s 0746	s 0835	s 0925	s 1015	s 1348	S 1413	s 1645	1920				
	,	Nii	s 0603	S 0703	S 0705	s 0735	F 0824	S 0914	F 1004	•••••	F 1404	F 1634		•••••	 		*******
R	нѕ	27	S 0559	S 0657	s 0700	S 0729	S 0820	S 0910	S 1000	1335	S 1400	S 1630	1909	•••••	 Control of Control of Control		
		Nii	F 0556	F 0654	S 0657	S 0725	F 0818	F 0908	F 0958		F 1358	F 1627	• • • • • • • • •		 	•••••	
		Nil	F 0554	F 0652	F 0653	F 0720	F 0815	F 0905	F 0955		F 1355	F 1624		• • • • • • •	 		
	ş	25	F 0552	F 0650	0650	F 0716	F 0812	F 0902	F 0952		F 1352	F 1621	1903	******	 		
		NB	F 0549	F 0648	F 0648	F 0712	F 0809	F 0859	F 0949		F 1349	F 1618			 		
KWYZ	Gυ	22	0546	0645	0645								19Q0		 		
		21											1853		 		
z		29											* 1845		 		
		20											1838		 	•••••	
		19											1834		 		
		21											1830	;	 		
		23											1820		 		
		50											1812		 		
		16											1808		 		
		22											1802		 		
Y ub.		Nil											1800		 		
ckw	CD	Yard											1755		 		
veen			Daily ex. Sat. and Sun.	Sat.	Daily ex. Sat. and Sun.	Daily ex. Sat. and Sun.	Sat.	Sun.	Dally ex. Sat. and Sun.	Daily ex. Sen.	Sun.	Sat.	Gally				
icuon.			270	290	272	274	292	294	276	262	296	298	2			1	1

M. & O. SUBDIVISION FOOTNOTES — Continued

Demnissible Speed

Maximum	speeds	unless	otherwise	restricted-M.P.H.

70 Freight and Mixed Trains: 45

Pe	rmane	nt Slow Orders		per Hour
Mileage		Location	Passenge Trains	r Freight and Mixed Train
0.0 to	1.0	On curves	40	40
1.0 to	9.0	On curves	55	
9.0 to	10.0		50	
44.4 to	46.6		60	- I
82.9		Over east leg of Wye at	the Post Wall	and the second
		M&O Junction	15	15
83.4 to	83.5		60	_
83.4 to	83.5	M&O Junction		

Diesel Units	Restrictions
DRF-30 and	DRF-36

Crane and Auxiliary 200 to 250 tons capacity......20 mph......Bridge 31.8

Cars must not be left on siding closer than 100 feet from either side of Selkirk Avenue crossing at Hudson.

Movements over West leg of Wye in both directions at M&O Junction Mileage 1.9 C.N.R. Ottawa Subdivision (Mileage 83.5 M&O Subdivision) must not exceed 15 mph over switch at west end of this track.

Except when weather and other conditions prevent proper running inspection Special Instruction "C" is amended to read 60

Laurentian Division extends to Mileage 82.5.

AUTOMATIC PROTECTED PUBLIC CROSSINGS AT GRADE

Mileage 8.35—Wharf Road, Hudson. Eastward trains switching or standing, will use manual control.

Mileage 8.54—Hudson. Westward trains stopping, must not exceed 5 mph until crossing fully occupied. Movements on the back tracks must be protected by member of crew.

Mileage 10.03—Hudson Heights. Westward passenger trains must not exceed 50 mph until crossing fully occupied.

Mileage 16.56-St. Antoine St., Rigaud. Trains turning on wye after discharging passengers must do so through switch at west end of siding. Trains must work the town track from the siding, leaving main track clear of any portion of their train. Westward trains approaching this crossing, after switching on main track or making a stop between signal 159 and the crossing or proceeding after having received a stop indication at signal 159, must proceed at a speed not exceeding 5 mph until crossing fully occupied.

ster and

ying cted cuit king ninıph. at

west and V.R. rent istle ime

s to area id is n in

MARCS rew.

e 19

	NO	ORTH	WARD 1	TRAINS			NI MT)	ž.n	
		FI	RST CLASS						PARK AVENUE SUBDIVISION
	1	56	167	133	181	154	152	from Viger	399911101011
		Psgr. Dally	Pagr. Mon. Wed. Fri.	Pagr. Dally	Pagr. Daily ex. Sat. and Sun.	Pagr. Dally	Pagr. Dally ex. Sun.	Miles	STATIONS
		1835	1815	1755	1730	1330	0815		MONTREAL
								0.0 2.0 3.1	PLACE VIGER 2.0 HOCHELAGA X 1.1 ANGUS X MILE BND X Let Outremont Sub.
								5.0	Jct. Outremont Sub.
		1855	1835	1815	1752 S 1755	1350 \$ 1353	0835 s 0838	5.9 6.1	BRESLAYX Jct. Adirondak Sub. 0.2 V PARK AVENUEVX
		1858 1900	S 1838 1840	S 1817 1819	1757	1355	0840	8,4	V PARK AVENUEVX SO
	F	1903	* 1843	F 1821	s 1801	1358	0843	9.8	BORDEAUXXZ
		-		GAUNTL	ET TRACK				0.4
	F	1908	* 1849	1827	F 1803 F 1808	1403	0848	10.2	LAVAL RAPIDES
			* 1854 * 1856 * 1858	F 1832 F 1834 S 1836	S 1815 S 1817 1823			. 17.2 . 17.9 . 19.9	STE. ROSE XZ 0.7 ROSEMERE 2.0 V. STE. THERESE KVWXYZ Jct. Lachute and Ste. Agathe Sub.
		Dally	Mon. Wed. Fri.	Dally	Dally ex. Sat. and Sun.	Dally	Dally ex. Sun.		
H-1		156	167	133	181	154	152		

PARK AVENUE SUBDIVISION FOOTNOTES

Times shown at Montreal for information only.

Northward trains going beyond Jac. Cartier Jct. must obtain a clearance in Montreal Terminals and may leave Jac. Cartier Jct. without a clearance.

Provided fixed signals indicate proceed, northward trains may move with the current of traffic between Jac. Cartier Jct. and Ste. Therese on the time of superior trains, provided they clear in sufficient time to avoid delay to the superior train.

All trains may register at St. Martin Jct. by register ticket.

First class trains may register at Ste. Therese by register ticket when operator on duty.

Jct. with Ste. Agathe and Lachute subdivisions at Ste. Therese, and with Trois Rivieres Sub. at St. Martin Jct.—ABS.

End of two tracks and Jct. with Adirondack Sub. at Breslay and with Outremont Sub. at Mile End—ABS. Switches are in normal position when set for movements to and from Adirondack Sub. at Breslay, and to and from Outremont Sub. at Mile End.

Yard limits Bordeaux extend to mileage 10.89.

Maximum speeds unless otherwise restricted-M.P.H.

Passenger trains (other)	89
Passenger trains (RDC Units)	90
Braight and mixed trains	40

	Perma	nent	Slo	w O	rders	Psgr. Trains incl. RDCs
Between	mileage	0.0	to	6.0		40
					on curves	
					on curves	
					on curves	
					on curves	

*No. 167 will not carry passengers between stations Montreal and Ste. Therese inclusive. This train will, however, flag stop at these stations to entrain passengers for stations beyond Ste. Therese.

*No. 167 will flag stop at St. Martin Jct. on Friday only to entrain passengers for stations beyond Ste. Therese.

 \star No. 172 will flag stop at St. Martin Jct. to detrain passengers from stations beyond Ste. Therese.

*No. 153 and No. 155 will flag stop at Bordeaux Sunday only.

Whistle signal 14(L) and the ringing of engine bell is prohibited within the limits of the City of Montreal. See Montreal Terminals Division foot note No. 14, page 11 and be governed accordingly.

Whistle signal 14(L) is prohibited approaching public crossings at grade within the limits of the Town of Laval between mileage 10.07 and mileage 11.58.

Continued on Page 21

Train Order Office Signals

WJ

....

JC

			deres	usWite			SOUTH	WARD	TRAINS		2			
			1021114	made 1		F	IRST CLAS	5	RHJ.	3	1 6		FOURTH CLASS	THE DAY
Train Order Office Signals	Car Capacity Sidings	Psgr. Dally ex. Sat. and Sun.	132 Pagr. Daily	Psgr. Daily ex. Sun.	Psgr. Tues. Thur.	153 Pagr. Dally	172 Psgr. Sun.	134 Psgr. Sun.	155 Pagr. Dally			66 P	86 Freight Daily ex. Mon.	
WJ	Yard	0820	1030	1130	1235	1650	2100	2105	2145					
	Yard Yard Yard Yard						 l							
	Nil Nil	0753 S 0752 0746	1003 S 1002 0956	1103 \$ 1102 1059	1208 s 1207 1201	1622 \$ 1621 1618	2033 s 2032 2026	2041 s 2040 2036	2118 S 2117 2114				0245	
	NII	S 0744	F 0954	F 1057			F 2024	F 2034	* 2112					
JC		F 0741 F 0738	0950	1052	1155	1612	* 2020	2029	2108				0230	
 S R	Nil Nil Yard	s 0732 F 0730 0727	F 0944 F 0943 0940		F 1149 F 1148 1145			F 2024 F 2022 2020					0210	
		Daily ex. Sat. and Sun.	Dally 132	Dally ex. Sun.	Tues. Ther.	Daily 153	8un.	Sun.	Dally 155		eth Aki	2005 2005 2005	Dally ex. Mos.	

PARK AVENUE SUBDIVISION FOOTNOTES — Continued

Whistle signal 14(L) is prohibited approaching public crossings at grade within the limits of the Town of Rosemere between mileage 17.51 and mileage 18.85.

Park Avenue Subdivision extends to mileage 20.3.

Train and engine movements south of Jac. Cartier Jct will be governed by Montreal Terminals schedules and footnotes pages 6 to 13 inclusive.

GAUNTLET TRACK BORDEAUX

Mileage 10.1 —Interlocking. Controlled by dispatcher. Rule 663 applies. Telephones located on signals 99 and 102. Southward passenger trains must not exceed 45 mph.

All switching movements over Francis Hughes Street on Tidewater Oil track, St. Martin Jct., must be protected by member of crew.

Mileage 11.93—All movements over Fleetwood Street crossing, mileage 0.28 Fleetwood track, must be protected by member of crew.

Account restricted clearance, employees must not ride the side of cars and engines while switching at the doors on either side of the building at Samuel Sons & Co. Ltd., mileage 12.87. Extreme caution must be exercised when switching in this area.

Mileage 20.03—Turgeon St., Ste. Therese. No engine, car or train shall exceed 10 mph until crossing fully occupied.

Switching movements must be protected by member of crew.

AUTOMATIC PROTECTED PUBLIC CROSSINGS AT GRADE

Mileage 9.91—Gouin Blvd., Bordeaux. Northward trains switching at Bordeaux will use manual control located on east side of station track, which will cause signal 99 to display STOP and crossing gates to clear. If train has to pass signal 99 for a switching move use manual control marked "CLEAR" and then be governed by indication displayed by signal 99. After switching move passes signal 99, push the manual control marked "STOP" so that gates will clear when train clears crossing. When switching completed and train ready to proceed push manual control marked "CLEAR" and be governed by indication displayed by signal 99.

Mileage 13.78—Northward movements on southward track between St. Martin Jct. and St. Elzeard Road must not exceed 35 mph approaching St. Elzeard Road crossing until crossing fully occupied.

Mileage 16.81—Southward trains stopping at Rosemere must not exceed 55 mph until crossing fully occupied.

Southward trains stopping at Ste. Rose must not exceed 25 mph until crossing fully occupied.

Mileage 17.91—Rosemere. Northward Passenger trains making station stop must stop clear of yellow sign located just north of station.

ontreal stop at ad Ste.

....KWZ

only to

sengers

nly.

ohibited rminals rdingly.

rossings mileage

Page 21

	VARD TI			LACHUTE					OR DIRE			
F	IRST CLAS	s	Place Vig	SUBDIVISION	**	9.5		FIRST CLAS	s	FOURTH	CLASS	
		133	from Pi		Train Order Office Signals	Capacity	132	134		86		
		Pagr. Daily	Miles	STATIONS	Train Office	Car Ca	Pagr. Dally	Psgr. Sun.	1 1 of	Freight Daily ex. Mon.		
		1836	19.9	V STE. THERESEKVWYZ	SR	Yard	s 0940	s 2020		0210		
		F 1845	27.7	ST. AUGUSTIN		22	F 0929	F 2010		0155		
		F 1851	32.4	MIRABELz		28	F 0922	F 2004		0145		
		F 1857	37.6	ST. HERMAS		56	F 0914	F 1959		0135		
		S 1907	44.1	LACHUTEZ	F	25	s 0905	S 1950		0120		
		F 1912	48.7	STAYNERVILLEYZ Jct. Staynerville Spur		51	F 0856	F 1943		0105		
	11000	F 1920	55.2	6.5 MARELAN		7	F 0849	F 1935		0050		
		F 1929	59.5	CALUMETZ		45	F 0844	F 1929		0035		
		F 1936	64.8	POINTE AU CHENE		13	F 0838	F 1922		0020		
		F 1943	70.9	6.1 FASSETT		19	F 0831	F 1915		0005		
		S 1949	74.5	3.6 MONTEBELLO		43	S 0826	S 1910		2355		
		S 1955	79.1	4.6 PAPINEAUVILLEZ		20	s 0820	S 1904		2340		
		F 2001	83.9	4.8 PLAISANCE		19	F 0814	F 1858		2330		
		s 2010	90.6	THURSOZ		45	s 0806	S 1850		2305		
		s 2020	99.9	9.3	BC	27	S 0756	\$ 1839		2250		
		F 2030	109.9	10.0 TEMPLETON		29	F 0746	F 1830		2225		
		F 2035	111.9	GATINEAURYZ	GN	32	S 0743	S 1828		2215		
		2041	116.4	V		Nii	0738	1823		2140	,	
				Smiths Falls Division Ellwood Subdivision								
		2105		OTTAWACKW	CD	Yard	0715	1800				
1987.300		Daily		Rule 93A applies.			Daily	Sea.	Galaces ed	Daily ex. Sun.		
		133					132	134		86	Ser in	

LACHUTE SUBDIVISION FOOTNOTES

Eastward trains must obtain a clearance in Ottawa Terminals and may leave Laman without a clearance.

Walkley is a standard clock, bulletin and register station.

Times shown at Ottawa for information only.

Gatineau and Buckingham Jct are register stations for first class trains only.

Rule 105A does not apply at Gatineau.

First class trains may register at Gatineau by register ticket when operator on duty.

First class trains may register at Ste. Therese by Register Ticket when operator on duty.

Jct. with Ste. Agathe and Park Avenue Subdivisions at Ste. Therese — ABS.

ABS—Eastward between:

Signal 238 and signal 204 Westward between: Signal 201 and block end sign, mileage 25.45.

RAILWAY CROSSINGS AT GRADE

Mileage 28.5—C.N.R.—Automatic interlocking. Passenger trains must not exceed 50 mph.

Mileage 31.53—C.N.R.—Automatic interlocking. Passenger trains must not exceed 50 mph.

Rules 263-273 apply between signals 1163 Lachute Sub. and 16 Maniwaki Sub. at Laman, 02B Waltham Sub. at Wamo, 116 Carleton Place Sub. at Bells Jct., 213 Prescott Sub. at Preswood and 11 at mileage 81.5 M&O Sub. Exception to rule 514 does not apply.

Trains and engines between Laman and Ottawa will be governed by C.P.R. Eastern Region and C.N.R. St. Lawrence Region, Rideau Area. Ottawa Terminals current time tables. Restrictions prohibiting the sounding of engine whistles within limits of the Cities of Hull and Ottawa will be found in these time tables.

LACHUTE SUBDIVISION FOOTNOTES — Continued

Maximum	speeds	unless	otherv	vise	restr	icted—l	M.P.H.
Passenge Passenge Freight	r trains	(other) (RDC	units)				89 90 45
		0.1					e Speed

Permanent	Slow Orders		per Hour
Mileage	Location	Passenger Trains	Freight and Mixed Trains
20.03	Turgeon Street	★10	★ 10
	On curves		32-17-
20120 60 1810	On curves	7	
	Bethany Street		★10
	On curves		
111200 00 1110	Barron Street		★10
1 1100			
	On curves		*10
	Main Street		~10
11102 00 1010	On curves	. 05	
(Ayers Ltd.	3 6111 Gt 4	★ 10	★10
	Millway Street	~ ~	×10
1010 00 0010	On curves	-	TALL TO STATE
	On curves	F F	
	On curves		-
64.0 to 86.0	On curves	. 60	
86.0 to 92.0	On curves	. 65	
92.0 to 93.0	On curves	. 60	-
93.0 to 106.0	On curves	. 65	
106.0 to 109.0	On curves	. 60	
109.0 to 111.90	On curves	. 65	
	Main Street	* 30	★30
	On curves		
Ov	ver public crossing or our track to C.I.P. mills	n 3. ★10	★ 10
GATINEAU { Ov	er public crossing of	ш	
	ndustrial lead to ply rood plant C.I.P		★10

★Until crossing fully occupied.

Whistle signal 14(L) is prohibited at the following public crossings at grade within the Town of Gatineau:

Labrosse Street-mileage 111.40

Main Street-mileage 111.91

uns

ins

116

ood

oes

neđ

on.

ons

the

23

Maloney Boulevard—mileage 0.15, C.I.P. Spur leading from mileage 112.04

Maloney Boulevard—mileage 0.10, C.I.P. Spur leading from mileage 112.40

Montee Paiement Crossing - mileage 113.10

Mileage 20.03—Turgeon St., Ste Therese. No engine, car or train shall exceed 10 mph until crossing fully occupied. Switching movements must be protected by member of crew.

AUTOMATIC PROTECTED PUBLIC CROSSINGS AT GRADE

- Mileage 21.5 —Ste. Therese West Blvd. crossing. Movements on other than main track must not exceed 5 mph from 100 feet distant until engine or leading car has passed over crossing.
- Mileage 44.11—Bethany St., Lachute. Eastward trains with switching to be done must stop before reaching yellow post located 200 ft. west of crossing and must not exceed 5 mph until crossing fully occupied. Westward trains required to switch must stop before reaching and leave train sufficient distance from yellow sign marked "circuit end" so that engine will be in rear of this sign when recoupled. Westward through trains required to switch and unable to clear between Bethany St. and Barron St. will leave their train east of Gilbert St. while switching.
- Mileage 45.11—Hamford Street, Lachute. Eastward trains, switching or standing, must stop west of crossing and member of crew must use manual control to stop and start automatic protection.
- Mileage 45.48—Westward trains must not exceed 75 mph over this crossing.

Mileage 79.1 —Papineauville. Westward trains stopping at station must not exceed 5 mph until crossing west of station fully occupied. Westward passenger trains not stopping, must not exceed 50 mph from east siding switch until crossing fully occupied.

Mileage 90.46—Gallipeau St., Thurso.

Westward trains switching or standing must stop clear of yellow sign located 200 ft. east of crossing and member of crew must use manual control.

Eastward trains stopping at station must use

manual control when switching or standing.

Mileage 99.9—Buckingham Jct. Westward trains must not exceed
20 mph from station until first crossing west fully
occupied. Movements on other than main track
must be protected by member of crew.

Mileage 100.9—Highway No. 8, James McLaren Co. Ltd. lead track. Movements must come to a stop before crossing, and movements over this crossing must be protected by member of crew.

Mileage 111.40-Gatineau. Eastward trains switching or standing, must not exceed 10 mph until crossing east of station fully occupied. Eastward passenger trains not stopping, must not exceed 60 mph until crossing fully occupied.

Mileage 111.91-Main St., Gatineau. Westward trains stopping at Station, must not proceed until member of crew has operated manual control. Trains must not leave sidings located immediately east and west of this crossing until member of crew has operated manual control. To avoid blocking this crossing, westward freight trains will pull through yard tracks from east end of yard when setting off cars.

Mileage 112.4—Highway No. 8, Gatineau. Lead track crossing Canadian International Paper Co. Movements must stop at STOP signs located on each side of crossing and then proceed.

Mileage 113.10-Montee Paiement Crossing. Westward passenger trains must not exceed 45 mph approaching crossing until crossing fully occupied.

When setting off cars or switching at Marelan, a cut must be made at the east back track switch and also at the west crossover switch from the back track, in order that Canadian Refractories engine may be able to get out from either end of the back track onto siding.

Trains stopping at Thurso to switch should insure that their trains do not block private crossing into Thurso Pulp and Paper Company plant located at mileage 91.05.

No cars are to be left standing on the siding at Templeton nearer than 100 feet from either side of public crossing at grade, mileage 109.73.

Account less-than-standard clearance in doors of Paper Shed in C.I.P. Plant, Gatineau, employees must not ride the side of cars while operating past this point. Extreme caution must be exercised when switching in this area.

Lachute Subdivision commences at mileage 20.3 and extends to mileage 116.4.

STAYNERVILLE SPUR

RESTRICTIONS

Diesel Units
DRS-24, DRF-30 and DRF-36prohibited.
Crane and Auxiliary

	91 Freight Daily ex. Sun.	SECOND	919 Freight Dally			155	153			TROIS RIVIERES		1
			D 4.1.7			Pagr. Daily	Pagr. Daliy	751 Pagr. Daily	Miles from St. Martin Jct.	SUBDIVISION	Train Order Office Signals	Car Capacity Sidings
		4		ա <u>1</u> 2 գում Ի թագրե	a '	mail la		ex. Sun.	St.	STATIONS	řő	Sig
	1610		0020			1951	1456	0928	82,3	TROIS RIVIERES .CKWYZ	RS	Yard
	1620		0030			1954	1459	0931	79.2	BURËAU		42
	1631		0039			1959	1506	0936	74.6	POINTE-DU-LACZ		44
	1645		0048			2011	1514	0944	67.3	YAMACHICHE		53
						* 2016	* 1519	F 0953	61.7	LOUISEVILLEZ		Nil
	1655		0115			2017	1520	0955	60.3	LAVOIE		120
									57.7	MASKINONGE	,	Nil
	1705		0130			2023	1527	1002	52.2	ST. BARTHELEMY	,	. 51
	1711		0136			2027	1531	1006	47.4	ST. CUTHBERT		54
	1716		0141			2030	1534	1009	44.0	BERTHIERYZ		Nil
	1730		0155			* 2036	* 1540	F 1016	35.7	Jct. St. Gabriel Sub.	SO	162
	1739		0204			2040	1544	1020	30.4	LAVALTRIE		. 76
	1746		0211	4		2043	1547	1024	26.8	VAUCLUSE		. 46
	1752		0217			* 2047	* 1551	F 1029	22.8	L'EPIPHANIE	z	. 47
	1759		0225			2051	1555	1034	17.3	CABANE RONDE		. 73
find di	1805	THE MY	0231			2054	1558	1037	14.2	MASCOUCHE		. 50
	1811		0237			2057	1601	1041	10.4	TERREBONNE		42
	ALEX, W		0245	1	1	2102	1606	1046	4.9	. ST. VINCENT DE PAUL2	Z	. Ni
	1830		0255			* 2108	* 1612	F 1052	0.0	ST. MARTIN JCTRYZ	Z J C	Nil
Injeri-	Bally		Dally	स्य स्था		Daily	Daliy	Dally ex. Sun.		Market Applied Legisland		
	ex. Sen.		919	A Part	4	155	153	151		Rule 93A applies.		4

TROIS RIVIERES SUBDIVISION FOOTNOTES

All trains may register at St. Martin Ict. by register ticket.

Spring switch located at west end of Lanoraie, at mileage 35.2. Dwarf signal 351B is normally clear for westward trains leaving siding. To obtain proceed indication on dwarf signal if not clear, unlock box marked "Push Button" located at dwarf signal and be governed by instructions posted therein. Rule 104A applies. Signal 351 is located to left of track.

Jct. with Park Avenue Sub. at St. Martin Jct., St. Gabriel Sub. at Lanoraie and Berthierville Sub. at Berthier—ABS.

Jct. with St. Maurice Valley Sub. and with station tracks at Trois Rivieres—Interlocking.

First class trains may register at Trois Rivieres by register ticket.

INTERLOCKING LIMITS—TROIS RIVIERES

WESTWARD—Between signal 825 Quebec Subdivision and signal 820 Trois Rivieres Subdivision.

EASTWARD—Between signal 820 Trois Rivieres Subdivision and signal 825 Quebec Subdivision.

Speeds through turnouts and crossovers of interlocking must not exceed 15 miles per hour.

RAILWAY CROSSING AT GRADE

Mileage 23.29—C.N.R. Automatic interlocking. Rule 509 does not apply. When applying Rule 672 movements must proceed at restricted speed to the next signal. Timing circuit eastward from mileage 21.80 to interlocking signal 232, Westward from mileage 25.07 to interlocking signal 235. Special instruction G applies—12 minutes. Passenger trains must not exceed 50 mph.

Special Instruction "C" is not applicable to trains consisting exclusively of multi-level auto cars, piggy-back cars, passenger cars, mechanical refrigerator cars, container cars, cars loaded with containers, or any combination thereof and, except when weather or other conditions prevent proper running inspection, is amended to read 60 miles for other freight trains.

Maximum speeds unless otherwise restricted—M.P.H.

Passenger trains (other)	89
Passenger trains (RDC units)	90
Freight and mixed trains	50
Freight trains handling over 7000 tons	40

10					E	ASTWAR	D TRAIL	4S—SUP	ERIOR	DIRECT	ION	
	TOOIS DIVIERES	1 - 17	143	F	IRST CLA	SS	SECONE	CLASS		FOURTH	CLASS	
Miles from St. Martin Jct.	TROIS RIVIERES SUBDIVISION		Capacity ings	152 Pagr. Dally	154 Pagr. Dally	156 Pagr. Daily	920 Freight Daily	N	94 Freight Daily	96 Freight Daily	98 Freight Daily	
St.	STATIONS	Train Order Office Signals	Car	ex. Sun.		Paul III	ex. Sun.		ex. Sun.		H v	
82.3	TROIS RIVIERES .CKWYZ	R S	Yard	1000	1515	2028	0155		0330	1405	2225	
79.2	BURBAU		42	0956	1511	2024	0141		0313	1351	2211	
74.6	POINTE-DU-LACZ		44	0951	1506	2019	0135		0305	1342	2203	
67.3	YAMACHICHE		53	0944	1458	2011	0126		0253	1331	2151	
61.7	5.6 LOUISEVILLEZ		Nil	0938	1453	F 2005						
60.3 57.7	LAVOIE		120 Nii	0937	1452	2003	0115		0240	1318	2138	
52.2	5.5 ST. BARTHELEMY			0931	1446	1956	0105		0229	1305	2124	
47.4	4.8 ST. CUTHBERT	100000000000000000000000000000000000000	54	0931	1443	1952	0059		0223	1257	2116	1
44.0	3.4 BERTHIERYZ Jct. Berthierville Sub.		1	0928	1440	1949	0053	**********	0215	1251	2110	
35.7	8.3 LANORAIEYZ Jct. St. Gabriel Sub.			0919	1434	F 1943	0040		0155	1236	2036	
30.4	LAVALTRIE	,	76	0915	1430	1939	0032		0125	1221	2011	
26.8	3.6 VAUCLUSE	ļ	46	0912	1427	1935	0027		0118	1214	2004	
22.8	L'EPIPHANIEZ		47	0909	1424	F 1930	0022		0110	1207	1957	
17.3	CABANE RONDE		73	0905	1420	1925	0016		0101	1159	1950	
14.2	MASCOUCHE		50	0902	1417	1922	0011		0054	1154	1944	
10.4	TERREBONNE		42	0859	1414	1919	0006		0048	1148	1938	
4.9	. ST. VINCENT DE PAULZ		Nil				 					
0.0	ST. MARTIN JCTRYZ	J C	NII	0848	1403	1908	2350		0030	1130	1920	
_	Rule 93A applies.			Dally ex. Sun.	Daily	Daily	Daily ex. Sat.		Dally ex. Sun.	Daily	Daily	
- 4		11112		152	154	156	920		94	96	98	

TROIS RIVIERES SUBDIVISION FOOTNOTES — Continued

Perman	ent Slow Orders		ssible Speed per Hour
Mileage	Location	Passenger Trains	Freight and Mixed Trains
0.0 to 1.0	On curves	35	35
4.0 to 5.0	On curves	70	
10.0 to 12.0	On curves	65	
61.0 to 62.0	On curves	60	-
75.0 to 76.0	On curves	65	
80.8 to 81.9		70	
81.0 to 82.3	On curves	40	40

Whistle signal 14(L) is prohibited approaching public crossing at grade mileage 82.12 (Bonaventure Street).

*No. 153 and No. 155 will flag stop at Louiseville, Lanoraie, L'Epiphanie and St. Martin Jct. Sunday only.

Freight cars and double-deck coaches must not be moved on main track underneath station canopy at Trois Rivières.

Account restricted clearance, employees must not ride tops and sides of engines and cars when switching at Three Rivers Pulp and Paper Co., located at mileage 80.99 or while passing overhead highway bridges at mileage 79.59.

Telephones for communicating with Operator Trois Rivieres are located—on Signals 820 and 825, on poles at east and west ends of station platform track No. 1 and at Cap de la Madeleine—on Signal 850.

250 ton capacity Auxiliary Crane 414479, 80, 503, 650 prohibited on track No. 1 at Trois Rivieres.

AUTOMATIC PROTECTED PUBLIC CROSSINGS AT GRADE

- Mileage 4.76—St. Vincent de Paul. Movements on other than main track must be protected by member of crew.
- Mileage 10.4 —Terrebonne. Westward trains stopping, must not exceed 5 mph until first crossing west of station fully occupied.
- Mileage 22.58—L'Epiphanie. Westward trains switching or standing at mileage 22.8, must use manual control.
- Mileage 52.28—St. Barthelemy. Movements on other than main track must be protected by member of crew.
- Mileage 80.9 —Highway No. 2, Royale Blvd. on Domtar lead.

 Movements over all tracks must be protected by member of crew.
- Mileage 82.12—Bonaventure St., Trois Rivieres, Westward trains must not exceed 5 mph from dwarf signals 821A, 821B, 821C, 821D until crossing fully occupied.

loes

Yard 42 44 53 Nil

50 42 Nii Nii

ents nal. to age rucnust

ting nger ded hen ion,

25

NORTH- WARD TRAINS INFERIOR DIRECTION	ine	PILES SUBDIVISION		0	SOUTHWARD TRAINS SUPERIOR DIRECTION
NO REGULAR TRAINS	Miles from Cap de la Madeleins	STATIONS	Train Order Offlice Signals	Car Capacity Sidings	NO REGULAR TRAINS
READ DOWN	0.0 6.7 11.2 20.3	CAP DE LA MADELEINE 6.7 ST. MAURICE 4.5 ST. NARCISSE 9.1 GARNEAU Jct. C.N.R.	1 U	24 4 Nil Yard	READ UP
		Rule 93A applies. Rules 41 and 44 apply.			

PILES SUBDIVISION FOOTNOTES

Maximum	speeds	unless	otherwise	restricted-	-М.Р.Н.
Passenge	r Trains	(Includ	ling RDC u	nits)	25
Freight	and Mix	ed Tra	ins		25

RESTRICTIONS

Diesel Units	
DRS-24, DRF-30, DRF-36	prohibited
All units except DS-6	20 mphbetween
test to any law to the	Mileage 18.5 and Mileage 18.7.

Crane and Auxiliary

200 to 250 tons capacity			prohibit	ed
Spring switch located at	iunction w	vith Quebec		
Cap de la Madeleine. Rule	104A applie	es.		

Rule 105A does not apply.

Telephone for communicating with operator Trois Rivieres, located on signal 850 at Cap de la Madeleine.

NORTH- WARD TRAINS INFERIOR DIRECTION		ST. MAURICE		1	SOUTHWARE TRAINS SUPERIOR DIRECTION
NO REGULAR TRAINS	res	VALLEY SUBDIVISION	r nais	ty	NO REGULAR TRAINS
	Miles from Trois Rivières	STATIONS	Train Order Office Signals	Car Capacity Sidings	grandraje i Krimin zevroje Krimin zevroje
age: 1991, fil	0.0	TROIS RIVIERES CKWYZ 9.8	RS	Yard	declare that a
READ	9.8	MARCHAND		31	READ
DOWN	21.1	SHAWINIGAN YZ		15	OF.
	27.4	GRANDMEREZ		Yard	All Legaldi
		Rule 93A applies. Rules 41 and 44 apply.			in it made

ST. MAURICE VALLEY SUBDIVISION FOOTNOTES

Jct. with Trois Rivieres Subdivision and with station tracks Trois Rivieres—Interlocking.

ABS-Southward between:

Mileage 1.0 to Trois Rivieres.

Northward between:

Signal 02 at Trois Rivieres to block end sign, mileage 1.0.

Maximum speeds unless otherwise restricted-M.P.H.

Passenger Trains (including RDC units) ... 35 Freight and Mixed Trains 35

AUTOMATIC PROTECTED PUBLIC CROSSING AT GRADE

Mileage 82.12—Bonaventure Street, Trois Rivieres. Northward trains must not exceed 5 mph from dwarf signals 821A, 821B, 821C, 821D until crossing fully occupied.

Trains must not exceed 20 mph on curve mileage 14.81 and 30 mph on other curves.

Diesel units must not exceed 20 mph between mileages 24.65 and 27.4.

Whistle signal 14(L) is prohibited approaching Pere Marquette Street crossing mileage 1.53 St. Maurice Valley subdivision and Bonaventure Street crossing mileage 82.12 Trois Rivières subdivision.

Auxiliary Cranes with 200 to 250 tons capacity, except Cranes Nos. 414479, 480, 503, 650, are prohibited.

Telephones for communicating with Operator Trois Rivieres are located—on Signals 820 and 825, and on poles at east and west ends of station platform track No. 1.

Derail located at north end of siding at Marchand. Rule 104E applies.

Rule 105A does not apply.

NORTH- WARD TRAINS INFERIOR DIRECTION	3 U 7 I O	BERTHIER- VILLE SUBDIVISION			SOUTHWARD TRAINS SUPERIOR DIRECTION
NO REGULAR TRAINS	Wiles from Berthler		Train Order Office Signals	ir Capacity dings	NO REGULAR TRAINS
	3.6	STATIONS	-5	Sidi	
READ DOWN	2.1	BERTHIERVILLE 2.1 BERTHIER Y		Yard Nil	READ UP
		Rules 41 and 44 apply.			

ed

ted

es,

cks

.0.

Œ

ırd

als

oc-

nd

.65

ind ub-

nes

are est

4E

BERTHIERVILLE SUBDIVISION FOOTNOTES

Diesel units class DFA, DFB, DPA. and DPB. must not be operated beyond gates at Melcher's plant at Berthierville.

Maximum speeds unless otherwise restricted-M.P.H.

Passenger Trains (Including RDC units) Freight and Mixed Trains All tracks between Berthier and Berthierville will be considered

within yard limits. No engine, car or train backing up on Berthierville Subdivision shall exceed 10 mph over public crossings at grade Mileage 1.07, Mileage 1.60 and Mileage 2.01 until crossing fully occupied.

No engine, car or train making switching movement to and from Great Lakes Carbon Corporation's plant shall exceed 6 mph over

Montcalm Street crossing mileage 1.63. Movements over this crossing must be protected by member of crew.

EAST AND WEST LOOP SPURS - TROIS RIVIERES

Southward - mileage 81.3, Trois Rivieres Sub. to mileage

Rule 105 applies. MAXIMUM SPEED 20 M.P.H.

No engine, car or train shall exceed 10 mph over St. Maurice Street crossing, East Loop spur.

Switching movements over all tracks, de Bellefeuille St., St. Denis St., St. Olivier St., and Royale St. crossings, West Loop spur, must be protected by member of crew.

CAP DE LA MADELEINE SPUR

Southward - mileage 85.0, Quebec Sub. to end of track4.1 miles

Rule 105 applies. MAXIMUM SPEED 20 M.P.H.

No engine, car or train shall exceed 10 mph over first crossing North of freight shed at Cap de la Madeleine, Mileage 2.18. All switching movements over this crossing must be protected by member of crew.

Spring switch located at Jct. with Quebec Subdivision at Cap de la Madeleine. Rule 104A applies.

Engines, cars or trains must not exceed 10 mph over Des Erables Street crossing, mileage 0.75 Wayagamack

All trains must stop at stop sign located on each side of St. Lawrence Blvd. crossing, mileage 1.25, Wayagamack lead before proceeding over crossing.

	Lini	1		HOIT	DIREC	FERIOR	NS-IN	D TRAIL	TWAR	WES			
QUEBEC			FIRST CLASS										
SUBDIVISION	Wiles from St. Martin Jct.	21	151	616	153	629	25	155	75	odure	83	919	
STATIONS	im is	Pagr. Daily	Pagr. Daily ex. Sun.	Pagr. Dally	Pagr. Daily	Psgr. Mon. Fri.	Pagr. Daily	Pagr. Dally	Pagr. Daily ex. Sat.		Freight Daily	Freight Daily	
O QUEBEC CADORNA SELECTION OF SELE	159.8 157.7	0700 0709	0755 0805	1030 1039	1330 1340	1555 1604	1715 1724	1825 1835	2200 2209	ant IV		(1) Support	
LORETTE	152.4		F 0811		* 1346			* 1841			1410	2000	
BELAIR	146.5	4 7 17	0818		1352		mod-	1847			1425	2015	
PONT ROUGE	134.3		F 0831		* 1404			* 1859			1445	2035	
ST. BASILE	129.6		F 0836		* 1408			* 1903			1455	2045	
PORTNEUF	125.0		F 0842		* 1413			* 1908			1505	2113	
7.5 LACHEVROTIERE 10.3 LA PERADE	117.5	. Train	F 0851	. Train	* 1421	. Train	Train	* 1916	Train		1520	2130	
5.2 BATISCAN	107.2	C.N.R.	0906	C.N.R.	* 1430 1434	S. R.	z. Z	* 1925	S.N.S.		1541	2145	
CHAMPI AIN	102.0 95.0	O	0912	Ú	1440	ပ်	ં	1929 1935	ပ်		1555 1605	2155 2205	
O Jct. Piles Sub. and Cap de la Madele	84.9		0921		1449			1933			1620	2220	
O TROIS RIVIERESCKW	82.3		0926		1454			1949			1630	2230	
Rule 93A applies	VAI	Dally	Daily ex. Sun.	Daily	Daily	Mon. Fri.	Dally	Daily	Daily ex. Sat.		Dally	Daily	
of a tall I be the control		21	151	616	153	629	25	155	75		83	919	

QUEBEC SUBDIVISION FOOTNOTES

Rule 99 - OUTSIDE ABS TERRITORY

When a train stops under circumstances in which it may be overtaken by another train, a flagman must immediately go back at least 2000 yards to ensure full protection.

First class trains may register at Trois Rivieres by register ticket.

Eastward first class trains may register at Quebec by register ticket.

C.P.R. timetable governs on joint track between Cadorna and Ouebec.

Trains originating and terminating at Lorette must register at Ouebec.

Westward trains originating at Lorette must obtain a clearance at Quebec and may leave Lorette without a clearance.

Sections of Westward first class trains may be created from Quebec or Lorette but must not be created from Cadorna.

The time of eastward first class trains at Quebec applies at signal 1594 and the time of westward first class trains applies at signal 1593. All tracks east of these signals are yard tracks and Rule 105 applies.

Jct. with Piles Subdivision and Cap de la Madeleine Spur at Cap de la Madeleine—CTC.

Jct. with St. Maurice Valley Sub. and with station tracks Trois Rivieres—Interlocking.

Jct. with C.N.R. and Wolfe's Cove lead at Cadorna—Inter-locking.

Yard limits Lorette extend between mileage 151.0 and mileage 157.4.

*No. 152 and No. 154 will stop at Lorette to detrain revenue passengers from Trois Rivieres and west.

*No. 153 and No. 155 will stop at Lorette to entrain revenue passengers for Trois Rivieres and west.

*No. 153 and No. 155 will flag stop at Pont Rouge, St. Basile, Portneuf, Lachevrotière and LaPerade Sunday only.

Special instruction "C" is not applicable to trains 919 and 920 or to trains consisting exclusively of multi-level auto cars, piggyback cars, passenger cars, mechanical refrigerator cars, container cars, cars loaded with containers, or any combination thereof and, unless weather or other conditions prevent proper running inspection, is amended to read 60 miles for other freight trains.

Whistle signal 14(L) is prohibited approaching public crossings at grade within the limits of the City of Quebec between the hours of 2200 and 0700. Western limits extend to St. Vallier Street, mileage 157.69.

Account restricted clearance, freight trains must not operate over main track in front of station building Trois Rivieres.

At Quebec on both inward and outward Freight Shed Tracks, employees must not ride on top or sides of cars account restricted clearance.

Switch leading to siding extension East end of siding Lorette is to be left set for movement from siding to main track. When in this position yellow light and target will so indicate.

Instructions governing movements on Cap de la Madeleine Spur, mileage 85.0, appear on page 27.

1	- 1				EAS	TWAR	TRAIN	S-SUI	PERIOR	DIRECTI	ON			
	İ			0	SECOND CLASS		FOURTH CLASS							
Train Order Office Signals	Car Capacity Sidings	74 Pagr. Daily ex. Mon.	628 Pagr. Mon. Fri.	20 Psgr. Dally	Psgr. Daily ex. Sun.	617 Pagr. Dally	154 Psgr. Dally	24 Psgr. Daily	156 Pagr. Daily	in some	920 Freight Daily ex. Sun.	in factor	60 Freight Daily	62 Freight Daily
н	Yard 17	0755 0746	1015 1006	1104 1055	1125 1115	1505 1456	1640 1630	2009 2000	2200 2150				t trouble	endeleji dayê
R	43 43 46 42 34	eser enci	vino 276 d Venno d Venno d Venno d	uma (ji sve slipin (j slipin (j slipin (j	* 1109 1103 1052 1048 1043		* 1624 1618 1607 1603 1558		F 2143 2136 F 2124 F 2119 F 2113		0430 0420 0402 0355 0348		0600 0548 0527 0519 0511	1540 1530 1510 1455 1436
	130 43 44 43 42	C.N.R. Trais	C.N.R. Train	C.N.R. Train	1035 1026 1022 1016 1007	C.N.R. Trais	1550 1541 1537 1531 1522	C.N.R. Train	F 2104 F 2055 2050 2044 2035		0337 0322 0314 0305 0249		0500 0445 0435 0425 0410	1421 1345 1335 1325 1310
R S	Yard	Daliy ex. Mon.	Mon. Fri.	Dally	Dally ex. Sun.	Dally	1517 Daily	Daity	2030		Daily ex. Sum.	ulmines)	0400 Dally	1300 Dally
		74	628	20	152	617	154	24	156		920		60	62

QUEBEC SUBDIVISION FOOTNOTES — Continued

ABS—Westward between: Signal 867 and signal 851.

Eastward between: Signal 850 and block end sign mileage 87.4.

Rules 263-273 apply between signals 822, 822b and 824 east of Trois Rivieres station and signals 01, 03 and 851 east of Cap de la Madeleine.

Rule 268 applies at switches mileage 82.66, 82.86, 83.03, 83.31 and 83.33.

Westward extra trains originating at Cap de la Madeleine may leave without clearance, Rule 268 applies.

Spring switches located at Jct. with Piles Subdivision and with Cap de la Madeleine Spur at Cap de la Madeleine. Rule 104A applies.

All movements must not exceed 20 mph between signal 822 and signal 832 at Trois Rivieres.

INTERLOCKING LIMITS—TROIS RIVIERES

WESTWARD—Between signal 825 Quebec Subdivision and signal 820 Trois Rivieres Subdivision.

EASTWARD—Between signal 820 Trois Rivieres Subdivision and signal 825 Quebec Subdivision.

Speeds through turnouts and crossovers of interlocking must not exceed 15 miles per hour.

Telephones for communicating with Operator Trois Rivieres are located—on Signals 820 and 825, on poles at east and west ends of station platform track No. 1 and at Cap de la Madeleine—on Signal 850.

Rules 263-273 apply between signals 1574-1574B-1574C at Cadorna and signals 1593 and 1593B at Quebec; also between signals 118 Wolfe's Cove lead and signals 1593-1593B at Quebec.

Westward signal 1593 is located to the left of the track.

Eastward movements originating at Cadorna may leave without a clearance, Rule 268 applies.

Special Instruction "D" applies at switches Mileage 157.55, 157.67, 157.73, 157.8, 158.01 and 158.03.

All movements must not exceed 15 m.p.h. between signals 1574-1574B-1574C-118 at Cadorna and signals 1593-1593B at Quebec.

Movements may be made between Quebec and Cadorna under Rules 263 and 273 without obtaining clearance. Reverse switching movements may be made from Quebec Yard up to but not beyond Parent Street, Mileage 158.65, provided Signal 1593 or 1593B indicates proceed. Any movement proceeding West of Parent Street must not make reverse movement until it has cleared controlling signal either on Wolfe's Cove lead or at Cadorna, except under flag protection or as provided by Rule 266. Westward trains to CNR at Cadorna must obtain clearance at Quebec.

Trains using Cadorna siding at St. Sacrement Blvd. must communicate with Operator at Quebec from telephone located near West switch so that route may be properly lined at Cadorna.

Telephones for communicating with operator at Quebec are located on instrument case near signals 118, 119; on signals 1574 and 1577; on signal 1593 Quebec; on signal case in safety bay in middle of tunnel, also at diamond crossing with C.N.R. at South end of tunnel.

Continued on Page 30

ileage venue

.....Z

E Madeleine

.CKWYZ

venue Basile,

d 920 piggyconnereof

nning trains. ssings hours Street,

e over

racks, tricted

ette is nen in

Spur,

age 29

QUEBEC SUBDIVISION FOOTNOTES - Continued

INTERLOCKING LIMITS—CADORNA

Between signals 1574-1574B-1574C and signal 201 Wolfe's Cove lead.

Between signal 1577 and signal 201 Wolfe's Cove lead.

Speeds through turnouts and crossovers of interlocking must not exceed 15 miles per hour.

When switching movements are being made into tracks located within limits of Interlocking, the main track switch must always be left open.

All movements from Cadorna to Wolfe's Cove must pass through tunnel under full control and then be governed by Signal 200 located to left of track at South end of tunnel.

No engine car or train shall exceed 10 mph over Ste. Therese Street crossing, Quebec, Mileage 0.22 Wolfe's Cove lead.

AUTOMATIC PROTECTED PUBLIC CROSSINGS AT GRADE

- Mileage 107.15—LaPerade. Members of crew on westward trains switching, must use manual control.
- Mileage 125.07—Ste. Christine Road, Portneuf. Eastward trains having occupied circuit in excess of one minute, member of crew must use manual control.
- Mileage 129.5 —Delage Road, St. Basile. Westward trains having occupied circuit in excess of one minute, member of crew must use manual control.
- Mileage 152.37—Lorette. Eastward trains stopping on main track west of crossover must not exceed 8 mph until crossing fully occupied.
- Mileage 157.69—St. Valier Street. All trains switching must use manual control for movements over crossing.

Mileage 158.97—Dorchester Street,

Mileage 159.03—Gosford Street, ★

Mileage 159.11—Crown Street, ★

*When a train is required to stop at the above crossings causing protection to operate, member of crew must immediately contact gateman by telephone and follow his instructions.

All movements over the following public crossings at Quebec must be protected by a member of the crew.

Henderson Street — Track No. 10 Henderson Street — Beaver track

St. Pierre Street — St. Andrews Branch

Dalhousie Street — "Chemin C.P.N. — "

St. Andre Street — "St. Paul Street — "

St. Jacques Street —

RAILWAY CROSSINGS AT GRADE

Mileage 117.85—C.N.R. Lachevrotiere. Automatic interlocking.

Timing circuit eastward from mileage 115.91 to interlocking signal 1178, westward from mileage 120.30 to interlocking signal 1179. Special instruction "G" applies—6 minutes.

Passenger trains must not exceed 50 mph.

- Mileage 155.8 —C.N.R. Automatic interlocking. When necessary to apply Rule 672 member of crew must first communicate with Operator, Quebec, unless all means of communication have failed. Passenger trains must not exceed 50 mph.
- Mileage 2.01 —C.N.R.—Wolfe's Cove lead. Controlled by operator, Quebec. Rule 663 and the provisions of Rule 672 apply. If all means of communication have failed, southward movements may apply the provisions of Rule 672 only.
- Quebec Yard —C.N.R. Wharf track, Ramsey Street. Trains will be governed by instructions posted in manual control box.

Maximum speeds unless otherwise restricted-M.P.H.

Passenger Trains (other)	89
Passenger Trains (RDC Units)	90
Freight and Mixed Trains	55
Freight trains handling over 6000 tons	35

Permanent S	Slow Orders	Permis Miles	sible Speed per Hour
Mileage	Location	Passenger Trains	Freight and Mixed Trains
82.3 to 84.0	On curves	50	50
99.0 to 101.0	On curves	60	_
101.0 to 107.0	On curves	70	404
120.0 to 130.0	On curves	50	50
134.0 to 137.0	On curves	55	34 T
142.0 to 153.0	On curves	50	50
157.0 to 158.0	On curves	15	15
158.0 to 159.8	On curves	10	10
157.36	Entering or leaving east end of siding Ca- dorna		10
157.69	St. Valier St	15	15
157.89	Marie de l'Incarnation St.		15
159.11	Crown St	★15	★15
159.76	Henderson St (just east of Palais Stn.)	* 6	* 6

*Until crossing fully occupied.

RESTRICTIONS

Diesel Units

DPA-15, 17..... prohibited on tracks 1, 2, 3, 8 Palais Station,
Quebec and shed tracks 2, 3, 4 at Wolfe's

Cars

Park cars.....prohibited on tracks 1, 2, 3, Palais station, Quebec.

Double Deck cars. prohibited on tracks 1, 2, 3, 4, 5, 6, 7, 8 and 10, Palais station, Quebec.

Cars having a height greater than 16 feet from top of rail are prohibited beneath canopies on Station tracks, Palais Station, Quebec.

Crane and Auxiliary

414501 and 414502....prohibited in Palais station train sheds.

ry rst all ger

of on oly

ill ial

nd ins

on, nd

are on,

đs.

NORTHWARI				20		SOUTHWARD TRAINS SUPERIOR DIRECTION			
2	FIRST		STE. AGATHE SUBDIVISION			FIRST	CLASS	FOURTH	
The state of the s	167 Psgr.	Miles from Ste. Therese	Topico de la constante de la c	Train Order Office Signals	Car Capacity Sidings	164 Psgr. Tues.	172 Psgr.	80 Freight Tues.	
at employee	Mon. Wed. Fri.	Miles Ste.	STATIONS	Tra	Sid	Thur.	Sun.	Thur. Sat.	
	1900	0.0	STE. THERESE	SR	Yard	S 1145	s 2010	1425	
	1903	2.5	SAUVE		13	1140	2005	1415	
	F 1906	4.2	BOUCHARDZ		Nil	F 1137	F 2002		
	F 1910	7.2	ST. JANVIER		16	F 1133	F 1958	1355	
	s 1918	13.3	ST. JEROMEYZ		25	S 1125	s 1950	1330	
	F 1932	21.9	SHAWBRIDGE		28	F 1111	F 1936	1300	
	F 1938	26.1	PIEDMONT		15	F 1104	F 1929	1250	
	S 1944	29.1	MONT ROLLANDZ		12	S 1058	S 1923	1240	
	F 1953	33.7	STE. MARGUERITE		Nii	F 1049	F 1914		
	F 1959	37.4	VAL MORIN		Nil	F 1042	F 1907	1211	
	F 2003	39.6	VAL DAVID		13	F 1038	F 1903	1200	
	s 2015	43.8	STE. AGATHE2		12	S 1030	S 1855	1145	
	2036	54.7	10.9		15	1011	1836	1105	
	F 2040	57.0	2.3 ST. FAUSTIN2		16	F 1005	F 1830	1055	
	F 2047	60.7	3.7 MORRISON		Nii	F 0958	F 1823	1045	
100	F 2055	65.0	ST. JOVITE2		. 21	F 0950	F 1815	1035	
	F 2104	70.7	MONT TREMBLANT .2		NII	F 0940	F 1805	1020	
		-	9.5		1	0 0047	0 4550	1000	
	S 2117	80,2	13.2		26	s 0927	S 1752	₹ 0927	
	F 2135	93.4	ANNONCIATION		21	F 0907	F 1732	U855	
	F 2142	96.9	LACOSTE		. Nil	F 0901	F 1726	0845	
	F 2154	103.7	NOMININGUE		15	F 0851	F 1716	0820	
	F 2211	114.6	LAC SAGUAY	• • • • •	Nil	F 0835	F 1700	0755	
	F 2236	129.8	BARRETTE		26	F 0811	F 1636	0720	
	2250	138.2	MONT LAURIER KYZ	AM	Yard	0800	1625	0700	
dest 1	Mon. Wed. Fri.	(Late	Rule 93A applies. Rules 41			Tues. Thur.	Sun.	Tues. Thur. Sat.	
Agent All	167		and 44 apply.	11. 7t		164	172	80	

STE AGATHE SURDIVISION FOOTNOTES

STE.	AGAT	HE SUBDI	VISIO	N	FO	OTNOTES		
Maximum speeds unless otherwise res	stricted —	M.P.H.						sible Speed per Hour
Passenger trains	other	RDC units	Permar	ent !	Slow	Orders	Passenge	er Freight and
Between Ste. Therese and Labelle	50 40	50 50	-	lileag		Location		Mixed Trains
Between Labelle and Mont Laurier Freight and Mixed Trains	30		38.0 39.6		39.6 55.0	On curves	30	
	Dormaio	sible Speed	55.0			On curves	0.0	25
		per Hour	80.0			On curves	4.0	
Permanent Slow Orders		r Freight and	94.0			On curves		
Mileage Location	Trains	Mixed Trains	108.0 116.0		~ ~	On curves		
		Wince Trums	119.0			On curves		_
0.0 to 13.0 On curves	*10	*10 *10	127.0			On curves Over bridge	40	20
13.0 to 17.0 On curves	35	_	137.7			Over Public	*10	* 10
21.0 to 24.0 On curves		di ala <u>.</u>	137.0			On curves	35	-
29.17 (Southward) over Public Crossing 24.0 to 38.0 On curves		*10 25	* Until	cro	ssing	fully occupied.	Continu	ed on Page 32

STE. AGATHE SUBDIVISION FOOTNOTES — Continued

First class trains may register at Ste. Therese by register ticket when operator on duty.

Jct. with Lachute and Park Avenue Subdivisions at Ste. Therese —ABS.

Jct. with C.N.R. at mileage 11.7-Non-interlocked.

ABS—Southward between:
Signal 18 and signal 02.
Northward between:

Signal 201 and block end sign mileage 2.50.

Rule 20 of form 582 applies to southward trains Val Morin to Mont Rolland and to northward trains Summit to Morrison. Special Instruction "L" applies.

Trains must not follow a train carrying passengers until a report has been received of its departure from or until it is clear in siding at the station ahead between St. Jovite and St. Jerome in both directions. Freight trains may however follow in 30 minutes if the next station ahead or the station from which they are to follow is not an open train order office.

All movements over public crossing mileage 0.29 Rolland Paper Company track located at mileage 12.78, must be protected by member of crew.

AUTOMATIC PROTECTED PUBLIC CROSSINGS AT GRADE

- Mileage 13.31—Parent Ave., St. Jerome. Northward trains stoping or switching between the north freight shed switch and crossing and occupying circuit in excess of 90 seconds must use manual control for movements over crossing.
- Mileage 43.6 —Ste. Agathe. Southward trains stopping at station must not exceed 20 mph until crossing fully occupied.
- Mileage 65.08—St. Jovite. Northward trains which have stopped within 1500 ft. of crossing, must not exceed 4 mph until crossing fully occupied.
- Mileage 93.55—Annonciation. Northward trains stopping at Station must not exceed 10 mph until crossing fully occupied.
- Mileage 137.7—Switching movements must be protected by member of crew.

Switch leading to lead north end of siding extension at Sauve is to be left set for movement from siding to main track. When in this position yellow light and target will so indicate. Switch leading to north leg of wye south end of storage siding and switch leading to Eagle Lumber Company lead north end of storage siding St. Jerome are to be left set for movement from siding to main track. When in this position yellow lights and targets will so indicate.

The North crossover switch leading to the business track at St. Janvier is to be left set for movement from siding to main track. When in this position a yellow light and target will so indicate.

Account restricted clearance, employees must not ride tops and sides of engines and cars when switching at Bacman Company, mileage 136.93.

Account restricted clearance, employees must not ride sides of cars or engines when switching at unloading ramp on west side of siding at Lac Saguay, mileage 114.6.

Cars must not be left foul of crossing north of Mont Laurier station leading to entrance of Bellerive Veneer and Plywood Plant,

Derail located at north end of sidings at St. Faustin and Labelle. Rule 104E applies.

RESTRICTIONS

Diesel	units	
--------	-------	--

DRS-24	30 mph	.Bridge 115.0.
DRF-30. DRF-36	10 mph	. Bridges 67.0, 115.0.

Car

Over 198,000 to 220,000 lbs. gross weight each30 mph	Bridge	115.0.
Over 199,000 to 220,000 lbs., (ore) gross weight each20 mph	Bridge	86.3.
Over 225,000 to 263,000 lbs., gross weight each20 mph	Bridge	67.0.
Over 220,000 to 263,000 lbs., gross weight each 10 mph	Bridge	115.0.

Crane and auxiliary

100 to 160 ton capacity	10 mph Bridges 67.0, 115.0.
414400-2	
	30 mph Bridge 86.3;
200 to 250 ton capacity	10 mph Bridges 67.0, 115.0;
200 to 250 ton capacity	Prohibited Bridge 137.3. except 414479, 480, 503, 650.
Crane 414471, 502	5 mph Bridge 115.0.

Combination Crane - Pile Driver.

30 or 31 ton capacity	20	mph	Bridge	67.0.
	10	mph	Bridge	115.0.

ST. LIN SPUR

Rule 105 applies. MAXIMUM SPEED 15 M.P.H.

Use extreme caution switching or moving about Gouin's scrap yard account debris.

NORTH- WARD Trains Inferior Direction		ST. GABRIEL SUBDIVISION	2 E	ŋ	SOUTH- WARD TRAINS SUPERIOR DIRECTION	
NO REGULAR	Miles from Lanoraie	308011,31011	Train Order Office Signals	Car Capacity Sidings	NO REGULAR	
TRAINS	= S	STATIONS	7.9	22	TRAINS	
- i- bi	0.0	LANORAIEKYZ	so	Yard		
	6.3	JOLIETTEZ Jct. C.N.R. 5.2		24		
READ	11.5	LOURDES		12	READ	
DOWN	13.0	ROCHz		17	UP	
	16.7	ST. FELIXZ		18	i la ma	
14 18	27.6	ST. GABRIELYZ	••••	Yard		
		Rule 93A applies. Rules 41 and 44 apply.				

ST. GABRIEL SUBDIVISION FOOTNOTES

RAILWAY CROSSING AT GRADE

ng

of. om

nd

at

ain so

nd

ny,

of of

ier

le.

0.

Mileage 7.11—C.N.R. Automatic interlocking. Trains must not exceed 15 mph approaching approach signal.

Trains must not exceed 30 mph on curve mileage 0.17, and 20 mph over bridges mileage 2.41 and mileage 2.61.

Maximum speeds unless otherwise restricted-M.P.H.

Passenger trains	(Including	RDC	units)	 35
Freight and Mixe	ed Trains			 35

Rule 105A does not apply.

ST. GABRIEL SUBDIVISION FOOTNOTES

- Continued

No engine, car or train shall exceed 15 mph over crossing mileage 7.31 and 10 mph over St. Gabriel St. crossing mileage 27.53 until crossing fully occupied.

The position of the switch which connects St. Gabriel Subdivision to the line leading to Joliette station is normal when set for trains to and from St. Gabriel.

Special Instruction "L" applies to northward trains mileage 27 to St. Gabriel and to southward trains mileage 27 to Lanoraie.

RESTRICTIONS

Diesel Units
DRF-30 and DRF-36......30 mph Bridge 2.61.

Cars

Over 255,000 to 263,000 lbs. gross weight each.....20 mph Bridges 2.41, 2.61.

Auxiliary Cranes

200 to 250 tons capacity 20 mph Bridges 2.41, 2.61.

AUTOMATIC PROTECTED PUBLIC CROSSINGS AT GRADE

Mileage 4.78—Movements on Independent Cement Co. private track, must stop at stop signs each side of crossing.

Mileage 16.49 and 16.76—St. Felix. All trains switching must stop and leave train sufficient distance from signal box painted yellow so that engine will be in rear of box when recoupled.

Trains stopping at station must not exceed 5 mph until crossing fully occupied.

Mileage 27.53—St. Gabriel Street crossing. Northward and Southward trains must stop at Stop sign before reaching crossing and may then proceed. Cars must not be left standing between stop signs and crossing.

Account restricted clearance, employees must not ride tops or sides of engines and cars when switching at Le Comptoir Avicole, St. Felix, mileage 16.65.

Movements over crossing on private track leading to Abex Industries Ltd., Joliette, mileage 6.15, must be protected by member of crew.

Account restricted clearance, employees must not ride tops of engines and cars when switching at Firestone Tire and Rubber Co., mileage 6.99. All trains switching at above plant must not leave any car on main track between signal 71 C.N.R. Diamond and switch leading to Plant.

NORTH- WARD TRAINS INFERIOR DIRECTION	ı Jet.	BUCKINGHAM SUBDIVISION		t)	SOUTH- WARD TRAINS SUPERIOR DIRECTION
NO REGULAR	Miles from Buckingham	30001113161	Train Order Office Signals	Car Capacity Sidings	NO REGULAR
TRAINS	200	STATIONS	-0	n w	TRAINS
Lip big 1	0.0	BUCKINGHAM JCT. YZ	ВС	Yard	
READ DOWN	1.7	MURPHY		22	READ UP
Service.	3.2	BUCKINGHAM		Yard	
		Rule 93A applies. Rules 41 and 44 apply.	i		

BUCKINGHAM SUBDIVISION FOOTNOTES

Maximum speeds unless otherwise restricted—M.P.H.

Passenger trains (Including RDC units) 25
Freight and Mixed Trains 25

No engine, car or train shall exceed 10 mph over public crossing at grade, mileage 3.0, until crossing is fully occupied. All movements over crossing must be protected by member of crew.

All movements over Main Street, Buckingham, mileage 3.97 must be protected by member of crew.

Buckingham Subdivision extends to mileage 4.0 and derail is installed on main track at mileage 3.33. Rule 104E applies.

Yard Limits Buckingham Jct. extend to end of track at Mileage 4.0.

NORTH- WARD TRAINS INFERIOR DIRECTION	WARD TRAINS SAWYERVILL SAWYERVILL			sis		SOUTH- WARD TRAINS SUPERIOR DIRECTION	Max Pa Fi Trains AUTOM	imum assenge reight must	speed er train and M not ex	ds unless on the constant of t	otherwise restricted—M.P.H. g RDC units) 15 15 nph over crossing mileage 6.98. UBLIC CROSSING AT GRADI			
NO REGULAR TRAINS	Wiles from	STATIONS		Train Order Office Signals	Car Capacity Sidings	NO REGULAR TRAINS	Mileage 0.01—Main St., Cookshire. Movements over this crossing n 5 mph southward and 10 mph crossing fully occupied. RESTRICTIONS			r this crossing must not exceeted and 10 mph northward untocupied.				
READ DOWN	6.7 0.0	SAWYERV 6.7 COOKSH Jct, Sherbroo	IIRERZ bke Sub.	CN	Nil Nil	READ UP Diesel Units DRS-24, DRF-30 and DRF-36				Diesel Units DRS-24, DRF-30 and DRF-36				
		Rule 93A applies. Rules 41 and 44 apply.				mack Scores Scores Scores		160 t	ons ca	pacity	prohibited Bridge 5.2 {10 mph Bridge 1.5 prohibited Bridge 5.2			
Industrial Section	En Si	NC W TI INF DIR				TANBRI		E	Labor 1	SOUTH- WARD TRAIMS SUPERIOR DIRECTION	1 1 1 1			
			NO REGULAR TRAINS	Miles from Farnbam	S	STATIO	31111	Train Order Office Signals	Car Capacity Sidings	NO REGULAR TRAINS	TIGHTE STIER OF THE			
		READ			1	STANBRID 2.3 BEDFORI 11.5 FARNHAM Jct. Adirondac St. Guillaume	D CKWXYZ		Nil Nil Yard	READ UP	property of the second			
				Alar I	Ru	Rule 93A a les 41 and 4	applies. 4 apply.			mm DGA	galladien - eller generalisett			

STANBRIDGE SUBDIVISION FOOTNOTES

AUTOMATIC	PROTECTED PUBLIC CROSSINGS AT GRADE
	—Adirondack sub., St. Louis St., Farnham. Timing circuits are provided for main track movements on approach circuits between 1200 ft. south and 1400 ft. north of crossing. Movements occupying these circuits in excess of 3 minutes are restricted to 5 mph before proceeding over crossing. All siding and southward yard movements, from siding and Stanbridge sub. over crossing, must not exceed 5 mph. Northward yard movements to the siding and Stanbridge sub. and yard movements in both directions on town and freight shed tracks, are manually controlled. Movements must not proceed until gates are in the horizontal position. If movement is not made, manual control located on bungalow must be used. Stop signs are erected each side of crossing on C.N.R. Movements must be brought to a full stop within these signs and not proceed until gates are
	in horizontal position.

Mileage 0.10—Jacques Cartier St., Farnham. Movements must not exceed 20 mph until crossing fully occupied.

Maximum	speeds	unless	otherwis	se restricted—	-M.P.H.
				Units)	
Ereight o	nd Miv	ed Trair	10	100000000000	30

RESTRICTIONS

	RESTRICTIONS	
13.22	tween mileage 12.59 and RF-36 on Bridges 3.4, 11 16d prohibited between m	.310 mph
13.22. Cars Over 220,000 to 263,0 weight each Heavy duty, series 50	000 lb gross20 mph on 12000prohibited.	Bridges 3.4, 11.3.
Crane and Auxiliary 100 to 160 tons capac Crane-Piledriver 4142	city also \ \ 5 mph or \ 230-31 \ \ \ \ \ \ \ \ \ \ 10 mph or \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	n Bridge 3.4. n Bridge 11.3.

Combination Crane-Pile Driver
30 or 31 tons capacity20 mph on Bridges 3.4, 11.3.

200 to 250 tons capacity prohibited.

NORTHWARD TRAINS— INFERIOR DIRECTION			- sunvictor P			SOUTHWARD TRAINS— SUPERIOR DIRECTION						
				THIRD CLASS	from ton	DRUMMONDVILLE SUBDIVISION	Train Order Office Signals	Car Capacity Sidings	78 Freight Daily ex. Sat. and Sun.	eny eny		
		33 No.	POP I	77 Freight								
				Dally ex. Sat. and Sun.	Wiles from Knowiton	STATIONS						
					0.0	KNOWLTON		22				
				0600	5.3	FOSTERRYZ Jct. Sherbrooke Sub.	FO	Nil	1505			
				0615	9.7	4.4 WATERLOOZ Jct, C.N.R.		7	1445			
				0647	22.0	SOUTH ROXTON		18	1405			
				0704	29.0	ROXTON FALLS		Nil	1350			
				0720	34.8	ACTONVALE Jct. C.N.R.		Nil	1335			
				0738	43.4	8.6 WICKHAM		16	1320			
				0755	51.9	DRUMMONDVILLE RYZ Jct. C.N.R.		Yard	1300			
				Dally ex. Set. and Sun.		Rule 93A applies. Rules 41 and 44 apply.			Daily ex. Sat. and Sun.		71111	
			1000	77		Company of the Name			78			TAR

DRUMMONDVILLE SUBDIVISION FOOTNOTES

RAILWAY CROSSINGS AT GRADE

Mileage 9.1 —C.N.R.—Non-Interlocked.

Mileage 35.09—C.N.R.—Automatic-Interlocking. Timing circuit northward from mileage 33.84 to interlocking signal 349, southward from mileage 35.84 to inter-locking signal 350. Special Instruction "G" applies -6 minutes. Northward trains must not exceed 15 mph at the approach signal south of automatic interlocking. Southward trains must not exceed 25 mph between mileage 34.74 and 34.94.

Mileage 0.19—C.N.R.—Industrial Spur Drummondville — Interlocking. Controlled by C.N.R. dispatcher, Montreal. Movements are restricted to 10 mph within 1000 feet of interlocking signal. When signal indicates STOP and after waiting 5 mins., member of crew will communicate with dispatcher and be governed by his instructions. If communications have failed the provisions of Rule 672 must be applied.

Rule 105A does not apply.

рh

ph nd

.3.

1.3.

Engine arriving Drummondville on No. 77 must retain all train orders and may assume schedule of No. 78 and leave Drummondville without a clearance provided there is no operator on duty.

Extreme caution must be exercised when switching at Broma Inc., located north of Drummondville station, mileage 51.94, between Lindsay and Brock Streets, account canopy erected and restricted clearance.

All movements over crossing mileage 1.39, Drummondville Industrial Spur, must be protected by member of crew.

No engine car or train shall exceed 10 mph over the following public crossings at grade:
Mileage 0.03 tail track Knowlton

2.24 Highway Nos. 39 and 52

8.97 Lake Street, Waterloo 51.43 Notre-Dame Street, Drummondville 51.51 St. Marcel Street, Drummondville 51.59 St. Albert Street, Drummondville

and 15 mph at the following:

Mileage 29.14 Notre-Dame Street, Roxton Falls " 29.22 Factory Street, Roxton Falls

until crossing fully occupied.

All trains must come to a stop at the STOP SIGN located each side of Highway No. 1, mileage 9.12, at Waterloo, St. Joseph Street, highway No. 22, mileage 51.72 and at mileage 0.9 Industrial Spur at Diagnostic Trains may proceed, after making stop, when it is known that the protection is operating.

Cars must not be left on siding within 100 ft. on north side and no cars to be left on south side of station driveway crossing at Foster.

Whistle signal 14(L) and the ringing of engine bell is prohibited approaching public crossings at grade within the limits of the City of Drummondville. "City Limit" sign is erected at Fourth Range Road crossing at mileage 50.47. Regulation whistle signal 14(L) and the ringing of angine bell must be observed for all public crossings. the ringing of engine bell must be observed for all public crossings at grade in the Village of St. Joseph.

Maximum speeds unless otherwise restricted—M.P.H. Passenger trains (including R.D.C. units) ...

Freight and Mixed Trains

RESTRICTIONS

30

Diesel Units

DRS 24, DRF 30 and DRF 36 Prohibited.

Crane and Auxiliary

..... Prohibited. 200 to 250 tons capacity Prohibited. Except 414479, 480, 503, 650 30 mph on Bridge 30.9.

		D TRAII							SOUTHWARD TRAINS— SUPERIOR DIRECTION						
		THIRD	THIRD CLASS			LYNDONVILLE SUBDIVISION			SECOND CLASS	THIRD CLASS					
		903 Freight	Freight	Freight	Freight	917 Freight	Miles from Newport		Wolkiwianua	Train Order Office Signals	Car Capacity Sidings	904 Freight Daily	52 Freight		
		Daily	Daily	4		STATIONS				ex. Mon.					
			1845	63.7		WELLS RIVERRZ		Yard	1245						
				59.8		3.9 3.9		Nil 83							
			1856	58.7 50.4		BÊÎL 8.3 INWOOD		Nil	1231						
		2330	1930	43.5	S	ST. JOHNSBURYKZ	ВХ	80	1155	1750					
		2350	1949	34.7	A	LYNDONVILLEZ		87	1130	1720					
		0025	2026	27.1		WEST BURKE		Nil 96	1105	1650					
				14.2		7.1 BARTONZ 5.2		Nil							
		0052	2054	9.0		Z	1		1025	1620					
· · · · · · · · · · · · · · · · · · ·		0110	2115	0.0		NEWFORTCKWZ Jct. Newport Sub. and Q.C.R.	NP	Yard	1005	1600		-			
		Daily	Daily		-	Self-per Self-shelt			Dally	Daily ex. Mon.					
			BELL			Rule 93A applies. Rules 41 and 44 apply.			004	52					
		903	917						904	32					

LYNDONVILLE SUBDIVISION FOOTNOTES

Northward trains originating at White River Jct must obtain CPR clearance before leaving and may leave Wells River without obtaining clearance.

CPR Bulletin board is located in B&M yard office at White River Jct.

Train register at Wells River is located in wayside B & M phone box near South Wye switch.

B&M rules and time table govern south of south switch of former siding at Wells River, mileage 63.58.

St. Johnsbury is a register station for trains originating and terminating only.

No. 1 track at St. Johnsbury is the car capacity siding. Rule 105A does not apply.

Jct. with St. J. & L. C. Ry, at St. Johnsbury — ABS.

Unless weather or other conditions prevent proper running inspection, requirements of Special instruction "C" will be considered complied with by making standing train inspection at or between St. Johnsbury and Wells River on southward trains and between St. Johnsbury and or at Summit on northward trains.

Yard limits Newport extend between yard limit sign located at mileage 2.08 and switch located at mileage 1.8.

All tracks between end of Newport subdivision; Junction switch with Q.C.R.; and mileage 1.8 are other than main tracks. Rule 105 applies.

Switch at mileage 1.8 is in normal position when set for trains entering and leaving Newport Yard.

Spring switch located north end St. Johnsbury. To obtain proceed indication on dwarf signal, unlock box marked "Push Button", located opposite dwarf signal, and be governed by instructions posted therein. Rule 104A applies.

ABS—SOUTHWARD continuous from signal 18.

NORTHWARD continuous to Block end sign mileage 1.8.

Switch leading to spur at north end of siding at Orleans is to be left set for movement from siding to main track. When in this position yellow light and target will so indicate.

Switch leading to extension at north end of Spur track at Barton is to be left set for movement from Spur to main track. When in this position yellow light and target will so indicate.

Overhead bridge at mileage 38.5 is less than standard clearance.

Extreme caution must be exercised when switching at Orleans Furniture Co., mileage 9.0, French and Bean Co., mileage 38.8 and E.H.V. Industries Inc. mileage 38.9 account restricted clearance at warehouse door.

Cars on feed store track at Lyndonville will not clear trainman riding on side of train moving through siding.

Extreme caution must be used when switching at Concord Woodwork, Lyndonville, account restricted clearance.

LYNDONVILLE SUBDIVISION FOOTNOTES — Continued

AUTOMATIC PROTECTED PUBLIC CROSSINGS AT GRADE

Mileage 8.8 -North Ave. and

ıs

ns

ge

to

n in

ns .8

rd

37

Mileage 8.9 —Main St., Orleans. Northward trains switching on shed track, when finished, will not exceed 10

Mileage 14.2 —Eastern Ave., Barton. When southward trains have switching to do, and back train north on main track, member of crew will see that train is at least 600 feet south of crossing. Northward trains with switching to do in yard, when finished, will not exceed 10 mph over crossing.

Mileage 34.9 —Before leaving siding at south end Lyndonville, mileage 34.8, member of crew must observe switch indicator and, if no train approaching, line switch for movement to main track then proceed to box marked "push button" located behind switch and be governed by instructions posted in box.

Mileage 58.38—Main St., Newport. Movements are restricted to (Newport Sub.) 10 mph, and before movement is made, engineman must know that gates are in horizontal position. Whistle signal 14 (h) must be sounded when making back-up movement.

No train or engine will obstruct any crossing, either public or farm in the State of Vermont for a longer period than 5 consecutive minutes.

Maximum speeds unless otherwise restricted-M.P.H.

Passenger trains (Including RDC units) ... 40 Freight and Mixed Trains 40

Permane	ent Slow Orders	Permissible Speed Miles per Hour
Mileage	Location	All Trains
7.0 to 9.0	On curves	35
42.0 to 44.0	On curves	35

RESTRICTIONS

Crane and auxiliary

200 to 250 tons capacity Except 414479, 480, 503, 650 In travel position only on bridges 2.2, 5.9, 6.0 except 414478, 500, 502 prohibited on bridges 2.2, 6.0. 20 mph on bridges 36.7, 47.1, 55.75

NORTHWARD TRAINS— INFERIOR DIRECTION FOURTH CLASS SECOND CLASS		IOR DIRECTION				SOUTHWARD TRAINS— SUPERIOR DIRECTION					
		SECOND	CLASS		NEWPORT SUBDIVISION			SECOND	CLASS	FOURTH	d CLASS
	81		903	Miles from Brookport		Train Order Office Signals	Car Capacity Sidings	904	918	80	
	Freight Daily		Freight Daily	Miles	STATIONS	Train Office	Car C Sidin	Freight Daily	Freight Daily	Freight Daily ex. Sun.	
	1130		0240	58.4		NP	Yard	0730	2000	1100	
	1150		0300	52.7	MAGOWAN		41	0716	1940	1036	
	1155		0305	50.7	CENTRE		39	0711	1933	1026	
	1210		0318	44.1	NORTH_TROYz		39	0658	1921	1006	
	1215		0322	41.6	2.5 HIGHWATER		49	0654	1915	0958	
	1230		0337	32.5	9.1 MISSISQUOI		53	0639	1900	0930	
	1245		0346	27.4	RICHFORDz	RH	92	0629	1850	S 0915	
	1300		0410	19.4	z		49	0616	1835	0750	
	1315		0432	11.8	WEST BROME		48	0546	1820	0730	
	1325		0441	6.9	Z		43	0537	1811	0720	
	1340		0451	1.0	BRIGHAM		Nil	0523	1802	0705	
•••••••	1345		0453	0.0	Jct. Adirondack and Sherbrooke Subs.		Nil	0521	1800	0700	
	Dally 81		Daily 903		Rule 93A applies.			Dally 904	Daily 918	Daily ex. Sun.	

NEWPORT SUBDIVISION FOOTNOTES ON PAGE 38

NEWPORT SUBDIVISION FOOTNOTES

Rule 99 — OUTSIDE ABS TERRITORY

When a train stops under circumstances in which it way be overtaken by another train, a flagman must immediately go back at least 2000 yards to ensure full protection.

Southward trains must obtain clearance at Farnham and may leave Brookport without a clearance if train order signal, when provided, indicates proceed and no operator on duty.

Jct. with Adirondack and Sherbrooke subdivisions at Brook-port—CTC.

ABS—NORTHWARD—From signal 05 Lyndonville Subdivision to block end sign mileage 55.8 and continuous from signal 15.

SOUTHWARD—From signal 01 to block end sign mileage 2.4 and from signal 564 to block end sign mileage 0.5, Lyndonville Subdivision.

The time of all trains to the Newport Subdivision applies at the junction switch, Adirondack Subdivision, at Brookport.

At Richford, overhead passageway on H. K. Webster's private track is less than standard clearance, trainmen must not ride on top of cars at this point. Also tracks leading to sheds at north end east side of their plant, clearance restricted between and on each side of these tracks, in addition to overhead clearance. Trainmen must not ride on sides or tops of cars when switching these tracks.

Bulletins and Standard clock located at Richford.

Brookport yard limits extend to mileage 1.61.

AUTOMATIC PROTECTED PUBLIC CROSSINGS AT GRADE

- Mileage 7.02—South St., Cowansville. Southward trains switching or standing must use manual control. Cars or train must be left North of clearance point of Bruck Mills switch. Movements on other than main track must be protected by member of crew.
- Mileage 27.30—Province St., Richford. Movements except on main track must be protected by member of crew. In addition southward trains leaving any portion of train north of crossing must use manual control during switching or while standing. Upon completion and before proceeding south, crossing must be protected by member of crew.
- Mileage 41.70—Highway 105, Highwater. Movements except on main track must be protected by member of crew.
- Mileage 58.38—Main St., Newport, Movements are restricted to 10 mph, and before movement is made, engineman must know that gates are in horizontal position. Whistle signal 14(h) must be sounded when making back-up movement.

Except when weather or other conditions prevent proper running inspection. Special Instruction "C" is amended as follows:—Freight trains will make one standing train inspection at or between Farnham and Missisquoi.

Yard limits, Newport, extend between yard limit sign located at mileage 57.35 and end of Newport subdivision mileage 58.4.

Rule 105A does not apply at Richford.

Extreme caution must be exercised when switching at Moore Business Forms Ltd., mileage 5.72 account canopy erected and restricted clearance.

No train or engine will obstruct any crossing either public or farm in the State of Vermont for a longer period than 5 consecutive minutes.

Maximum speeds unless otherwise restricted-M.P.H.

Passenger trains (Including RDC units)	40
Freight and Mixed Trains	40
Freight trains handling over 6000 tons	30

Po	ermanent Slow Orders	Permissible Speed Miles per Hour
Mileage	Location	All Trains
50.0 to 51.0	On curves	. 35
57.0 to 58.4	On curves	. 15

RESTRICTIONS

Diesel Units

DRS-24, DRF-30 and DRF-36	30	mph	Bridge	44.3
---------------------------	----	-----	--------	------

Car

Over 245,000 to 263,000 lbs gross weight each	Bridge 44.3
Over 179,000 to 220,000 lbs (ore) gross weight each	Bridge 44.3

Crane and Auxiliary

100 to 160 tons also Crane-Piledriver 414230-31 ...20 mph on Bridges 5.1, 10.3, 44.3.

200 to 250 tons..... 20 mph on Bridges 5.1, 10.3, 16.4, 19.4, 22.5, 44.3. 414471, 502 in Travel condition only on Bridge 57.8.

nor

n-

.3

3.

NORTHWARD TRAINS— INFERIOR DIRECTION												D TRAIL	
FIRST CLASS					ADIRONDACK					FIRST	CLASS		
	35	41	213			S	UBDIVISION	Train Order Office Signals	acity	34	214	40	42
	D & H Psgr. Daily	Pagr. Daily	Psgr. Dally ex. Sat. and Sun.	Miles from Brookport			STATIONS	Train 0	Car Capacity Sidings	D & H Psgr. Daily	Pagr. Daily ex. Sat. and Sun.	Psgr. Dally	Pagr. Daily
		0725		0.0	ſ		BROOKPORT Newport and Sherbrooke Subs.		139			1913	2103
		s 0735	0640	6,3			6.3 FARNHAM CKV St. Guillaume Stanbridge Subs. and C.N.R.	W H	Yard		1845	s 1904	s 2054
			F 0643	10.5			STE. BRIGIDE		Nil		F 1835		
			F 0645	12.8			VERSAILLES		Nil		F 1831		•••••
			F 0647	15.4	o l				Nil		F 1829		
				. 17.6	U		IBERVILLE JCT		136				
			S 0651	19.2			IBERVILLE		Nil Nil		S 1825		
		S 0753	S 0656	20.0			Jct. C.N.R.	ЈН	Nil		S 1822	S 1846	S 2036
			F 0701	24.5			4.5 LACADIE		. Nil		F 1815		
				. 27.6			DESNOYERS		. 135				
<u>.</u> ,			F 0711	31.2			ST. PHILIPPE		Nil	200	F 1808		
1908	1923	0815	s 0717	35.0	ì	ment	3.8 DELSONRX Jct. N.J.R. and C.N.R.	YZ JU	Nil		S 1803	1831	2021
			s 0720	36.0		Movement by signal Indication	. ST. CONSTANT	4.5	Nii		S 1800		
	1929	0821	F 0728	40.7	1-7	Montreal Terminals	ADIRONDACK JCT	XY	N 55 S 55	1012	F 1754	1823	2013
	2000	0850	0750		F	Mon	MONTREALKY	wz w j	Yard	0950	1735	1800	1950
	Daily	Daily	Daily ex. Sat. and Sun.							Daily	Daily ex. Sat. and Sun.	Daily	Dally
	35	41	213					-	1	34	214	40	42

ADIRONDACK SUBDIVISION FOOTNOTES ON PAGES 40 AND 41

SEE PAGES 6-7-8 AND 9 FOR TIMES BETWEEN ADIRONDACK JCT. AND MONTREAL

ADIRONDACK SUBDIVISION FOOTNOTES

The time of all trains to the Sherbrooke and Newport Subdivisions applies at the junction switch at Brookport.

All trains except trains originating and terminating may register at Farnham by register ticket.

N. J. trains may register at Delson by register ticket.

Delson is register station for N. J. trains only.

Northward trains may leave Brookport without a clearance if train order signal, when provided, indicates proceed and no operator on duty.

Trains to Newport and Sherbrooke subdivisions must obtain a clearance at Farnham and may leave Brookport without a clearance if train order signal, when provided, indicates proceed and no operator on duty.

Southward trains going beyond mileage 38.3 must obtain a clearance in Montreal Terminals. All trains may leave Adirondack Jct. without obtaining clearance.

Trains between Adirondack Jct., St. Luc and Montreal will be governed by Montreal Terminals schedules and footnotes pages 6 to 13 inclusive. Times at Adirondack Jct. and Montreal are for information only.

Rules 263-273 apply between signal 01 Newport subdivision, signal 1255 Sherbrooke subdivision and signals 330 and 330b Adirondack subdivision. Exception to Rule 514 does not apply in this territory.

End of TWO TRACKS at mileage 33.0—C.T.C.

Rules 251—257 apply on northward and southward tracks between mileage 33.0 and mileage 38.3.

Seaway interlocking limits extend southward to mileage 38.3.

Jct. with Seaway spur, mileage 38.3—Interlocking.

Montreal Terminals footnote No. 4, page 10, also applies at mileage 38.3 when interlocking signals governing movements over dual control switches indicate STOP.

Following signals located to left of track they govern:-

Southward	Northward
34	17
48	99
226	123
252	151
298	183
314	283

Special Instruction "D" applies at the following switches:

Mileage 10.70-Ste. Brigide.

Mileage 12.85-Versailles.

Mileage 20.0, 20.24, 20.44, 21.01, 21.62 and 21.69—St. Johns.

Mileage 31.05 and 31.34-St. Philippe.

Rule 268 applies at the following electrically locked hand operated switches:

Mileage 19.2

Mileage 19.9

Mileage 20.6

Mileage 38.37.

AUTOMATIC PROTECTED PUBLIC CROSSINGS AT GRADE

Mileage 5.5 —Main St., Farnham. Manual controls are located on either side. All yard movements are manually controlled except northward movements from siding into No. 5 lead. Crews must use manual control and know that gates are in horizontal position before movements proceed over crossing. Timing circuit of 60 seconds is provided for southward trains occupying siding track north of crossing. After time has elapsed manual controls must be used and gates known to be in horizontal position before movements proceed. Movements over siding track between 300 ft. north and 300 ft. south are restricted to 5 mph, and no cars or engines are to be left within this area.

Mileage 6.19—St. Louis St., Farnham. Timing circuits are provided for main track movements on approach circuits between 1200 ft. south and 1400 ft. north of crossing. Movements occupying these circuits in excess of 3 minutes are restricted to 5 mph before proceeding over crossing. All siding and southward yard movements, from siding and Stanbridge sub. over crossing, must not exceed 5 mph. Northward yard movements to the siding and Stanbridge sub. and yard movements in both directions, on town and freight shed tracks, are manually controlled. Movements must not proceed until gates are in the horizontal position. If movement is not made, manual control must be used to clear gates. When switching shed tracks manual control located on bungalow must be used Stop signs are arrested each side of pressible used. Stop signs are erected each side of crossing on C.N.R. Movements must be brought to a full stop within these signs and not proceed until gates are in horizontal position.

Mileage 20.17—Mercier St., St. Johns. Movements on other than main track must be manually controlled by member of crew. Rule 103, paragraph 9 applies.

Mileage 34.43—Tortue Road and

Mileage 34.58—Main St., Delson. Manual control located 8 poles north of milepost 34. Northward trains switching or standing and unable to clear these crossings must stop south of brick yard crossing in order to allow gates to clear. After movement has returned to standing portion of train, member of crew must use manual control to place crossing protection back in operation.

Rule 103, paragraph 8, applies on other than main track over Normandie Blvd. crossing, mileage 6.88, By-pass Road mileage 7.1 at Farnham and crossing mileage 17.76.

ADIRONDACK SUBDIVISION FOOTNOTES — Continued

Drawbridge at mileage 19.8 — Interlocking. Controlled by bridgetender. Rule 663 applies. Telephones located on signals 197 and 200.

Jct. with N.J.Ry. at Delson-Interlocking.

d

E

d

al al

g. or

of Is al ts

ts h

d

re

If be

ks

be

ıĬĬ

n-

es ng gs ler as er ng

er

41

Jct. with St. Guillaume sub. at Farnham—CTC.

Jct. with Newport and Sherbrooke subs. at Brookport-CTC.

INTERLOCKING LIMITS—DELSON

SOUTHWARD—Between signals 352-352B and signals 349-349B-signal 351 on N.J. Railway.

NORTHWARD—Between signals 349-349B-signal 351 on N.J. Railway and signals 352-352B.

RAILWAY CROSSINGS AT GRADE.

Mileage 20.84—C.N.R.— Automatic interlocking. Rule 264 does not apply. When applying Rule 672 movements must proceed at restricted speed to the next signal. Timing circuit Northward from mileage 20.10 to interlocking signal 207—8 minutes; Southward from mileage 24.0 to interlocking signal 210—10 minutes. Special instruction G applies.

Mileage 35.02—C.N.R.—Interlocking. Controlled by dispatcher at Sherbrooke. Passenger trains must not exceed 50 mph. When interlocking signal indicates STOP member of crew will communicate with dispatcher and be governed by his instructions. If communications have failed Rule 104B and the provisions of Rule 672 must be applied except wait 5 minutes before proceeding at restricted speed to the next signal.

Dispatchers telephones located on signals 349 and 352 for CPR. Signal 351 for NJ and signals 176 and 177 for CNR.

Equipment with built-in markers equipped to display only yellow or red to the rear will, when necessary display yellow instead of green to comply with Rule 19.

Track adjacent west side of main track, between mileage 4.9, and mileage 8.2, at Farnham, is yard track and is to be used for the meeting and passing of trains. No movement may be made onto this track except by signal indication or by authority of the Train Dispatcher.

At Farnham, track leading to Stanbridge subdivision must not be used for doubling trains into Farnham yard.

When northward trains are required to set off cars at Delson for N.J. Interchange, rear portion of train must be left standing on main track clear of Brick Yard crossing circuit and only cars for set off are to be handled to N.J. tracks. Farm crossings must not be blocked by cars set off on N.J. Interchange tracks.

Cars spotted on team track south of Jacques Cartier street, St. Johns, must be kept back 50 feet from street line at the said crossing.

Yard limits Delson extend between mileage 33.83 and mileage 36.44.

Maximum speeds unless otherwise restricted—	M.P.H.
Passenger trains (other)	89
Passenger trains (RDC units)	90
Freight and Mixed Trains	50

	Pe	rman	ent Slow Orders		s per Hour
Mi	leag	ge.	Location	Passenger Trains	Freight and Mixed Trains
0.0	to	5.0	On curves	. 60	ra d Amino
5.0	to	5.5	On curves	. 30	30
5.5	to	6.7		20	20
6.7	to	7.0	On curves	. 60	2134
18.0	to	19.8	On curves	. 55	-
19.8	to	20.3	On crossings	*10	*10
20.3	to	21.0	On curves	. 55	
35.02			Railway crossing	. 50	35

*Until crossing fully occupied.

Special Instructions "A" and "C" are not applicable to trains consisting exclusively of multi-level auto cars, piggy-back cars, passenger cars, mechanical refrigerator cars, container cars, cars loaded with containers, or any combination thereof. These trains will be governed by speed restrictions for passenger trains but must not exceed 35 mph over railway crossings at grade mileage 20.84 and 35.02, and 60 mph at any other point.

Except when weather or other conditions prevent proper running inspection, Special Instruction "C" is not applicable to trains to or from Newport except as prescribed by Newport Sub. footnotes. All trains to or from Sherbrooke Sub. will make standing train inspection at Farnham unless otherwise provided.

SEAWAY SPUR

All movements over crossings mileage 0.73 and Highway 9C, Seaway Spur, must come to a stop before reaching crossings and know that protection signals are operating as intended before proceeding. If protection signals not operating, crossings must be protected by member of crew.

	WESTW	/ARD T	RAINS—	-INFERI	OR DIRE	CTION				
THIRD		SECOND	CLASS		F	FIRST CLASS		Megantic	SHERBROOKE SUBDIVISION =	
913		981	981 949 9				41	Miles from	Train Order Office Signals	Car Capacity Sidings
Freight Daily ex. Sun.		Freight Daily ex. Mon.	Freight Daily	Freight Daily			Psgr. Dally	IN	STATIONS	Sign
		1600	1025	0430	ļ		0400	0.0	V MEGANTICCKVWYZ G.C. Jct. Q.C.R.	Yard
		1625	1050	0446			0414	8.4	NANTES	150
		1636	1101	0456			0423	14.8	6.4 MILAN	50
		1646	1111	0504			0430	19.7	SPRUCE	37
		1705	1122	0513		er det sur er dett	F 0437	25.0	5.3 SCOTSTOWN Z	57
		1717	1134	0525			0447	30.2	GOULD	122
		1735	1152	0548			0500	38.3	8.1 BURY	38
		1743	1200	0556			0507	42.4	4.1 ROSS	110
		1752	1209	0605			F 0515	47.4	Z COOKSHIREZ CN Jct. Sawyerville Sub.	43
		1803	1220	0616			0525	52,1	BIRCHTON	115
		1813	1230	0626			0535	58.2	JOHNVILLE	50
		1818	1235	0631			0533	60.7	RACEY	. 101
		1828	1245	0641			0548	65.4	LENNOXVILLE	31
1600		1905	1320	0700			0555	68.5	Jct. C.N.R. & Q.C.R. 3.1v SHERBROOKECKVWZ HO	52
1605				0705			s 0605	70.6	Jct. Q.C.R. 2.1 LANDERS	
1615		1910 1920	1324 1332	0703	1		0609 0614	70.6	4.7 ROCK FOREST	68
1625				and the second			New Year	a state	SHANKS	104
1400000		1930 1941	1340	0721 0732			0620	80.4	6.4	
1646			1351	0132			F 0630	86.8	MAGOGZ G	58
1700		2000	1408	0746			0641	92.7	MOUNT ORFORD	90
1710		2015	1416	0754			0648	97.3	BASTRAY	46
1716		2020	1422	0800	ļ		0652	100.9	SOUTH STUKELY	52
1724		2028	1430	0808			F 0658	105.6	Jct. Drummondville Sub.	114
1730		2033	1436	0816			0703	109,1	3.5 FULFORD	47
1740		2043	1448	0828			F 0710	114.2	5.1 BROMONT	105
1750		2052	1458	0838			F 0718	121.6	ADAMSVILLE	40
1800		2103	1505	0845			0725	125.6	4.0 BROOKPORTZ Jct. Adirondack and Newport Subs.	N
Daily ex. Sun.		Dally ex. Mon.	Dally	Dally			Daily	4384		
	A range		040	022			43		Rule 93A applies.	1
913	Mary 1	981	949	933	mount I	1, 4500	41	100	medical and all of beligned of at an inc. of	

SHERBROOKE SUBDIVISION FOOTNOTES

Sherbrooke and Foster are register stations for trains originating and terminating only.

Jct. with Q.C.R. at Megantic and with Sawyerville sub. at Cookshire—ABS.

Jct. with Q.C.R. at Sherbrooke, with Adirondack and Newport subs at Brookport.—CTC.

ABS—Westward—From Megantic to block end sign mileage 3.2.
From signal 461 to block end sign mileage 48.3.
From signal 651 to block end sign mileage 74.0.
Continuous from signal 1241 to Brookport.

Eastward—From signal 1255 at Brookport to block end sign mileage 123.2.

From signal 730 to block end sign mileage 64.5. From signal 482 to block end sign mileage 46.0. From signal 24 to Megantic.

Eastward signals 08 and 02 at Megantic are station protection signals.

Eastward signals 694-688 and Westward signal 687 at Sherbrooke are station protection signals.

Continued on Page 43

	of the later			EASTWARD TRAINS—SUPERIOR DIRECTION									
atic	SHERBROOKE SUBDIVISION			1137	FIRST CLA	ss	SE	COND CLA	ASS	FOURTH CLASS			
from Megantic	SUBDIVISION	Order Signals	pacity	40	42		952	908	914	70	72	74	76
Wiles fo	STATIONS	Train 0	Car Capacity Sidings	Pagr. Dally	Pagr. Dally		Freight Daily	Freight Daily	Freight Dally ex. Sum.	Freight Daily ex. Sat. and Sun.	Freight Daily	Freight Daily	Freig Dail
0.0	V MEGANTIC CKVWYZ Jet. Q.C.R. 8.4	GC	Yard	2240	0030		0650	1810			0935	2005	023
8.4	NANTES 6.4		150	2226	0016		0616	1744			0912	1947	021
14.8	MILAN		50	2218	0008		0558	1728			0902	1937	020
19.7	SPRÜCE 5.3		37	2209	2359		0548	1716			0850	1925	015
25.0	SCOTSTOWNZ		57	F 2201	F 2351		0538	1705			0840	1913	014
30.2	GOÜLD		122	2152	2342		0525	1650			0830	1903	013
38.3	BÜRY		38	2140	2330		0500	1632			0810	1845	01:
42.4	ROSS		110	2134	2324		0437	1623			0759	1834	010
47.4	COOKSHIREZ Jct. Sawyerville Sub.	CN	43	F 2125	F 2315		0425	1612			0750	1825	00.
52.1	BIRCHTON		115	2118	2308		0413	1603			0740	1803	003
58.2	JOHNVILLE 2.5		50	2109	2259		0400	1550			0725	1725	002
60.7	RACEY		101	2105	2255		0350	1540			0718	1718	00:
65.4	Jet. C.N.R. & Q.C.R.		31	2055	2245		0335	1530			0710	1710	00
	V SHERBROOKE CKVWZ	но	52	2050 S 2040	2240 s 2230		0315	1520	0145	Train a	0700	1700	000
70.6	LANDERS		89	2033	2223		0300	1447	0130		0625	1647	233
75.3	ROCK FOREST		68	2027	2217		0251	1439	0121	İvisi	0614	1640	233
80.4	SHANKS		104	2021	2211		0239	1431	0109	Subdivision	0556	1625	23
86.8	MAGOGz	G	58	F 2012	F 2202		0227	1420	0057		0544	1600	230
92.7	MOUNT ORFORD		90	2000	2150		0215	1408	0045	Drummondville	0529	1545	224
97.3	BASTRAY		46	1950	2140		0205	1340	0035	l å	0518	1534	22:
00.9	SOUTH STUKELY		52	1945	2135		0156	1331	0026	Dran	0511	1526	223
05.6	Jct. Drummondville Sub.	FO	114	F 1939	F 2129	,	0143	1318	0013	0330	0504	1516	22
09.1	FULFORD		47	1934	2124		0133	1308	0003	0318	0453	1505	22
14.2	BROMONT		105	F 1927	F 2117		0122	1257	2352	0305	0440	1448	21
21.6	ADAMSVILLE			F 1918	F 2108		0108	1243	2338	0250	0425	1410	21
25.6	BROOKPORTZ Jct. Adirondack and Newport Subs.		Nil	1913	2103		0100	1235	2331	0240	0415	1400	21
				Dally	Dally		Dally	Daily	Dally	Dally	Dally	Daily	Da
	Rule 93A applies.	e tu	HY.	40	42	140	952	908	ex. Sat.	ex. Sat. and Sun. 70	72	74	7

SHERBROOKE SUBDIVISION FOOTNOTES — Continued

Following signal located to left of track it governs, 1241.

Special Instruction "D" applies at switch mileage 66.5.

nd

on

er-

Eastward trains must obtain a clearance at Farnham and may leave Brookport without a clearance if train order signal, when provided, indicates proceed and no operator on duty.

All switching movements over crossings at Belvedere, King and Marquette Streets, Sherbrooke, must be protected by member of crew

Spring switch at mileage 69.3, west end Sherbrooke yard. Before trains leave south side of yard, movement must be stopped clear of stop sign located near indicators, and be governed by instructions inside of box marked "Push button" located on block indicator. Rule 104A applies.

No. 4 track at Sherbrooke is the car capacity siding. Rule 105A does not apply.

Continued on Page 44

SHERBROOKE SUBDIVISION FOOTNOTES — Continued

When trains meet at Landers and eastward train is holding main track, it must stop west of Quatre-Pins crossing, mileage 70.39 and switch must be opened in order to give westward train an approach indication on signal 693 at Sherbrooke.

The time of all trains to the Sherbrooke subdivision applies at the junction switch, Adirondack subdivision at Brookport.

Mileage 0.28—Frontenac St., Megantic. All switching movements must be protected by member of crew.

Rules 263 to 273 apply between signal 659 west of Lennoxville, signal 443 on C.N.R. governing trains to C.P.R. at Lennoxville and signals 684 and 684B east of Sherbrooke Station.

Movements may be made between Sherbrooke and Lennox-ville under Rules 263 to 273 without obtaining a clearance. Reverse switching movements to Sherbrooke may be made without clearing control signals at Lennoxville only under flag protection, or as provided by Rule 266, or when movement has not cleared beyond signal 670 and signal 683 indicates proceed.

Switch leading to Fairbanks lead, mileage 68.1, equipped with electric switch lock operated from Sherbrooke. Rule 268 applies.

RAILWAY CROSSING AT GRADE

Mileage 65.97—C.N.R.—Interlocking. Controlled by dispatcher at Sherbrooke. Rule 264 applies.

When all means of communication have failed — WESTWARD movements MUST NOT proceed until authorized.

EASTWARD movements must be governed by Rule 104B and the provisions of Rule 672 except wait 5 minutes before proceeding at restricted speed to the block end sign.

Telephones for communicating with Dispatcher are located on signals 659 and 662.

AUTOMATIC PROTECTED PUBLIC CROSSINGS AT GRADE

- Mileage 24.68—Scotstown. Eastward trains standing or switching between Scotstown station and this crossing must not exceed 20 mph until crossing fully occupied.
- Mileage 65.39—College St., Lennoxville. Movements on interchange track must use manual control before occupying crossing.
- Mileage 92.7 Mount Orford. Westward train meeting at that point must stop 500 ft. east of crossing, and when ready to proceed must not exceed 15 mph until crossing fully occupied.
- Mileage 122.0—Westward passenger trains must not exceed 80 mph from mileage 121.5 until crossing fully occupied.

Switch leading to Spur at west end of siding at Scotstown is to be left set for movement from siding to main track. When in this position yellow light and target will so indicate.

Switch leading to Spur at east end of siding at Cookshire is to be left set for movement from siding to main track. When in this position yellow light and target will so indicate.

Whistle signal 14(L) and the ringing of engine bell is prohibited approaching public crossings at grade within the limits of the City of Sherbrooke between mileage 67.38 and mileage 72.05 between the hours of 2200 and 0700 except at Quatre-Pins crossing, mileage 70.39.

Rule 99 — OUTSIDE ABS TERRITORY

When a train stops under circumstances in which it may be overtaken by another train, a flagman must immediately go back at least 2000 yards to ensure full protection.

Maximum	speeds	unless	otherwise	restricted-M.P.H.
---------	--------	--------	-----------	-------------------

Passenger trains (other)	89
Passenger trains (RDC units)	90
Freight and Mixed Trains	45
Freight trains handling over 6000 tons	30

Permanent Slow Orders

Permissible Speed Miles per Hour

Mile	age		Location	Passenger Trains	Freight and Mixed Trains
0.28			Frontenac Street	. *10	*10
0.0	to	1.0	On curves	. 40	40
1.0	to	3.0	On curves	. 45	- Hy
3.0	to	9.0	On curves	. 50	
9.0	to	10.0	On curves	. 40	40
10.0	to	22.0	On curves	. 50	_
22.0	to	25.0	On curves	. 45	
25.0	to	26.0	On curves	. 35	35
26.0	to	30.0	On curves	. 45	-
30.0	to	34.0	On curves	. 50	
34.0	to	38.0	On curves	. 45	101 pg 1 bill
38.0	to	39.0	On curves	. 40	40
39.0	to	46.0	On curves	. 45	poka - Liv
46.0	to	51.0	On curves	. 40	40
51.0	to	57.0	On curves	. 50	SHALL AND THE PARTY OF THE PART
57.0	to	61.0	On curves	. 45	
61.0	to	64.0	On curves	. 35	35
0.23			nnection Alexander Street	. *25	*25
5	her	brooke	King Street	. *10	*10
64.0	to	70.0	On curves	. 40	40
70.0	to	79.0	On curves	. 55	RETAINS TO THE
79.0	to	85.0	On curves	. 60	4 <u></u> 61
85.0	to	86.82	On curves	. 40	40
86.82	ιο	00.02	Lake Street	. *10	*10
86.82	to	88.0	On curves	. 40	40
88.0	to	93.0	On curves	. 45	
93.0	to	95.0	On curves	. 40	40
95.0	to	102.0	On curves	. 50	
102.0	to	105.0	On curves	. 45	ADA -
105.0	to	106.0	On curves	. 40	40
106.0	to	109.0	On curves	. 45	
109.0	to	114.0	On curves	. 50	
114.0	to	125.0	On curves	. 70	
125.0	to	125.6	On curves	. 55	traduction.
			fully occupied.		
	-				

To avoid excessive blocking of Victoria Street crossing mileage 0.82 at Megantic, Eastward freight trains, except No. 952, will stop west of this crossing until authorized to yard train.

Yard limits Sherbrooke extend between mileage 64.70 and mileage 73.05.

The time of No. 70 at Foster applies at the west wye switch.

Special Instructions "A" and "C" are not applicable to trains consisting exclusively of multi-level auto cars, piggy-back cars, passenger cars, mechanical refrigerator cars, container cars, cars loaded with containers, or any combination thereof. These trains will be governed by speed restrictions for passenger trains but must not exceed 65 mph at any point.

Except when weather or other conditions prevent proper running inspection, Special Instruction "C" will be considered complied with by other trains by making one standing train inspection at or between Magog and Cookshire.

NORTHWARD TR	AINS— CTION	LCR	ST. GUILLAUME			SOUTHWARD TRAINS— SUPERIOR DIRECTION			
THIRD CLASS						FOURTH CLASS			HEE
	85 Freight	Miles from Faraham	SUBDIVISION	Train Order Office Signals	Car Capacity Sidings	86 Freight Daily	MT MINZ		44.0
Autorities (Inc.)	ex. Sat. and Sun.	32	STATIONS	10		ex. Set. and Sun.			
	0600	0.0		WH	Yard	1100			
	0605	0.2	Jct. C.N.R.		Nil	1055			
	0618	5.6			14	1043			
	0645	16.4	ST. PIE		Nil	1020			
	0710	24.7	ST. HYACINTHERZ		15	1000			
		26.4	STE. ROSALIE JCT		14		*********		•••••
		46.7	ST. GUILLAUMEYZ		Nii				• • • • • • • • • • • • • • • • • • • •
TOTAL DESCRIPTION OF THE PARTY	Daily ex. Sat. and Sun.		Rule 93A applies. Rules 41 and 44 apply.	30 A.		Daily ex. Sat. and Sun.		l pa	
BULL BURLET	85	91				86			

ST. GUILLAUME SUBDIVISION FOOTNOTES

Rule 105A does not apply.

18

nd

٠h.

ins

rs,

ars

out

er

'ed

ain

St. Hyacinthe is register station for trains originating and terminating only.

Yard limits St. Hyacinthe, extend to mileage 28.0.

Engine arriving St. Hyacinthe on No. 85 must retain all train orders and may assume schedule of No. 86 and leave St. Hyacinthe without a clearance.

RAILWAY CROSSINGS AT GRADE

Mileage 11.5 — C.N.R. — Automatic interlocking. Timing circuit 1300 ft. south of interlocking signal, Special instruction "G" applies — 2 minutes. Movements are restricted to 15 mph within 500 ft. of interlocking signal.

C.N.R. Interlocking. Controlled by C.N.R. Operator at St. Hyacinthe, Movements are restricted to 10 mph within 500 feet of interlocking signals. When interlocking signal indicates STOP member of crew will communicate Mileage 26.4 with operator and be governed by his instructions. If communications have failed the provisions of Rule 672 must be applied except wait 5 minutes.

AUTOMATIC PROTECTED PUBLIC CROSSINGS AT GRADE

Mileage 0.25 — Main St., Farnham. Movements restricted to 5 mph Northward and 10 mph Southward until crossing fully occupied.

Mileage 16.5 — St. François St., St. Pie. Movements restricted to 20 mph until crossing fully occupied.

Mileage 26.74 — Northward movements must not exceed 20 mph until crossing fully occupied.

Jct. with C.N.R. Meigs — normal position of switch is for CPR movements.

Jct. with Adirondack sub. — Farnham — CTC.

All southward trains must stop clear of Jct. switch at Meigs and proceed only after communicating with Farnham Yard Office.

All trains and engines must obtain permission from train dispatcher before fouling main track switches including south leg of wye, Adirondack subdivision at Farnham. Telephones located on poles near switches. Rule 268 applies.

Maximum speeds unless otherwise restricted - M.P.H.

Passenger trains (including RDC. Units) 30 Freight and Mixed Trains

Trains must not exceed 10 mph between mileage 16.0 and 16.4. Trains must not exceed 10 mph on curves between mileage 31.7 and 32.0.

All movements over crossing mileage 33.04 must come to a stop and be protected by a member of the crew before proceeding over this crossing.

Mileage 40.88 — Southward trains must not exceed 10 mph until crossing fully occupied.

RESTRICTIONS

Diesel Units

All (except HS5 and Rail Diesel

Over 198,000 to 220,000 lb gross

weight each 20 mph on Bridges 16.17, 34.2. Over 220,000 to 263,000 lb gross 20 mph on Bridge 0.3. 10 mph on Bridges 16.17, 16.18, 24.1, 34.2, 37.9. . 20 mph on Bridges 0.3, 24.1.

gross weight each Over 152,000 to 220,000 lb (ore)

Over 176,000 to 220,000 lb (ore) each.

Crane and Auxiliary

23 to 75 tons capacity 20 mph on Bridges 0.3, 16.17, 24.1, 37.9.

100 tons capacity also Crane-Pile Driver 414230, 414231 24.1, 34.2, 37.9. Pile Driver 414230, 414231

5 mph on Bridge 0.3.

Prohibited on Bridges 0.3, 16.17, 16.18, 24.1, 37.9. 150 to 160 tons capacity ... 10 mph on Bridge 34.2. 200 to 250 tons capacity ... prohibited.

Combination Crane-Pile Driver

10 mph on Bridges 0.3, 16.17. 20 mph on Bridges 16.18, 24.1, 34.2, 37.9. 30 or 31 tons capacity Pile Driver

400043 20 mph on Bridges 0.3, 16.17, 24.1, 37.9.

WESTWARD TRAINS INFERIOR DIRECTION	B7.4	TRING SUBDIVISION			EASTWARD TRAINS SUPERIOR DIRECTION
NO REGULAR TRAINS	Miles from Tring Jet.	STATIONS	Train Order Office Signals	Car Capacity Sidings	NO REGULAR TRAINS
READ DOWN	59.1 45.5 40.8 32.0 23.9 9.9 0.0	MEGANTIC CKWYZ Jot. C.P.R. 156. ST. SAMUEL ST. SEBASTIEN 8.8 COURCELLES Z 8.1 ST. EVARISTE 14.0 ST. VICTOR 9.9 TRING JCT RYZ Jct. Vallee Sub.		Yard 9 5 29 13 18 Yard	READ UP
	nation of	Rule 93A applies. Rules 41 and 44 apply.			ACTEN TOTAL

TRING SUBDIVISION FOOTNOTES

All tracks east of Wye switch, mileage 58.44, at Megantic are other than main tracks. Rule 105 applies. The position of this switch is normal when set for North leg of wye.

Trains must not make movements on to C.P.R. main track at

Megantic without authority of Yardmaster or Operator. Rule 105A does not apply.

RESTRICTIONS

RESTRICTIONS	
Diesel Units All units except HS-5 Mile 15.2 to 27.5 DFA-16b, c, g, DFB-16d prohibited mileage 15.2 DRS-24, DRF-30 and DRF-36 on Bridges 9.6, 36.0, 54.0	to 27.5.

Cars Over 232,000 to 263,000 lb. gross weight each Over 200,000 to 220,000 lb. (ore) gross weight each 20 mph

Crane and Auxiliary

100 to 160 tons capacity 20 mph on Bridges 9.6, 32.0, 36.0, 54.0, Except 414400-2 {20 mph Bridges 15.6, 32.0. 10 mph Bridges 9.6, 36.0, 42.7, 54.0 200 to 250 tons capacity prohibited on Bridges 3.3, 28.5, 47.8, 48.4. except 41479 25 mph Bridge 15.6.

4479 480 503 650 10 mph Bridge 15.6. Bridges 9.6, 32.0, 36.0, 42.7, 54.0

Combination Crane—Pile Driver

30 or 31 ton capacity ... 20 mph on Bridges 9.6, 42.7. 40 ton capacity 20 mph on Bridges 9.6, 32.0, 36.0, 42.7, 54.0.

Maximum speeds unless otherwise restricted — M.P.H. Passenger trains (including RDC Units) 25 Freight and Mixed Trains

Permissible Speed Miles per Hour Permanent Slow Orders Mileage Location All Trains 42.7 Bridge 15

Engines and cars must not be moved closer than 30 feet from bridge over roadway near quarry on Lacombe track, mileage 43.4, serving Granite Bussiere Inc.

MORTH- WARD TRAINS INFERIOR DIRECTION		Code Transport Control Code		a 160	SOUTH- WARD TRAINS SUPERIOR DIRECTION
NO REGULAR		LEVIS SUBDIVISION	* a	6	NO REGULAR
TRAINS	from Jet.	gift on darrate or 10 pe	Order	spacit	TRAINS
11 100	Miles	STATIONS	Train Order Office Signals	Car Capacity Sidings	half and
Hawarin	0.0	SCOTTS JCTRYZ Jct. Vallee Sub.		Yard	
400	6.0	STE. HENEDINEZ		17	RE OF R
	11.4	ST. ANSELME		16	
READ DOWN	18.7	ST. HENRI VILLAGE		13	READ
DOWN	21.6	CARRIER 5.9 HARLAKARYZ		Nil	UP
	27.5	≅ Jct. C.N.R.		MI	SECTION OF
	32.0	0.8	NY	• • • • • • •	ALC: NO. 760
	32.8	POINTE LEVIS	•••••		de de la c
		Rule 93A applies. Rules 41 and 44 apply between Scotts Jct. and Harlaka.			N - 8

LEVIS SUBDIVISION FOOTNOTES

C.N.R. Time Table governs between Harlaka and Pointe Levis. Southward trains may leave Harlaka without clearance.

Rule 105A does not apply.

Trains must not exceed 25 mph approaching Trans-Canada Highway mileage 26.88, until crossing fully occupied.

Railway Crossing at Grade.

Mileage 21.6—C.N.R. Automatic Interlocking. Trains must not exceed 10 mph approaching.

RESTRICTIONS

Over 212,000 to 220,000 lb. gross weight (ore)		
on Bridge 11.0	25	mph.
Commercial Associations		

Crane and Auxiliary

200 to 250 tons capacity on Bridge 11.0 20 mph. Prohibited on Bridges 0.96, 20.5.

Except 414479, 480, 503, 650.

Maximum speeds unless otherwise restricted - M.P.H.

Passenger trains (including RDC units)	25
Freight and Mixed Trains	25

NOR	ERIOR	D TRAI	NS— ION						THWAR		
FOURTH CLASS		VALLEE SUBDIVISION		JIM	#1	FOURTH CLASS					
			83 Freight Dally	Miles from Sherbrooke		Train Order Office Signals	Car Capacity Sidings	82 Freight Daily			
	- 1		ex. Sát.	N is	STATIONS	Tr 0f	Sig	ex. Sun.	Dept. In		NUN
				0.0	SHERBROOKECKWZ	но	Yard				
			1400	1.4	NEWINGTON		47	1159			
			1420	10.5	ASCOT		35	1141			
			1435	16.9	EAST ANGUSZ		28	1126			
			1455	25.4	DUDSWELLz		24	1106			
			1500	26.3	BISHOPTON		32	1101			
			1525	36.9	10.6 WEEDONZ		25	1033			
			1530	41.6	ST. GERARD Z	DN	35	1023			
			1545		GARTHBY Z		30	1013			
			1555	47.6 52.8	DISRAELI Z		31	1004			
				4 . 100	4.9		25	0952			
			1610	57.7	COLERAINEZ		27	0940			
				63.5	BLACK LAKEZ			0.7			
			1730	70.8	THETFORD MINESKYZ	FD	51	0924			******
			1740	74.7	ROBERTSON	• • • • • • •	27	0906			
	*********		1750	79.6	5.2	• • • • • • •	24	0856			
			1805	84.8	EAST BROUGHTONZ		23	0835			
			1815	87.4	CAREY MINE	• • • • • • •	20	0820			
	••••••	**********	1825	90.3	TRING JCT	NA	20	0810			
			1850	99.4	BILODEAU		19	0737			
•••••	•••••		1905	100.0	VALLEE JONCTIONCKWZ Jct. Chaudiere Sub. 6.8	UC	Yard	0735			
• • • • • • • • • • • •				106.8	STE. MARIEZ		16				
	•••••			111.6	SCOTTS JCT. RYZ Jct. Levis Sub, 10.0		6				
• • • • • • • • • • • • • • • • • • • •				121.6	VILLE LAMBERT		Nil				
	• • • • • • • • • • • • • • • • • • • •	•••••		127.3	BREAKEYVILLEZ		10				
				130.7			Nil				
	•••••			130.9	DIAMOND Jct. C.N.R.						
•••••				145.5	O CADORNA						
••••••	*******			147.6	Jct. C.P.R. Set QUBBEC CKWZ (Palais Station)	ВО					
	Dr.	noise.	Daily ex. Sat.		Rule 93A applies. Rules 41 and 44 apply between Sherbrooke and Walsh.		Fand Melicux	Daily ex. Sun.			

VALLEE SUBDIVISION FOOTNOTES

No. 83 must obtain clearance at Sherbrooke and may leave Newington without clearance.

Southward trains must obtain CPR clearance at Joffre and may leave Walsh without clearance.

Tring Jct. is register station for southward trains only.

Scotts Jct. is register station for trains originating and terminating only.

Jct. with C.P.R. at Sherbrooke - CTC.

re nis at

ph .5. ph

ph

ph ph

.0,

0,

.0,

om

is.

ıda

not

ph.

ph.

Jct. with C.N.R. at Diamond — C.T.C.

C.N.R. time table governs between Diamond and Cadorna.

Quebec subdivision schedules and footnotes govern between Cadorna and Quebec.

Yard Limits, Sherbrooke, extend to mileage 1.8.

Yard Limits, Vallee Jonction, extend to mileage 98.7.

Continued on Page 48

VALLEE SUBDIVISION FOOTNOTES — Continued

Whistle signal 14(L	and the ringing of engine bell is prohibited
approaching the foll	owing public crossings at grade within the
0700:	Sherbrooke between the hours of 2200 and

Alexander Street	 mileage 0.3
Short Street	 mileage 0.68

Rule 105A does not apply at Dudswell, Robertson, Carey Mine, Bilodeau, Scotts Jct. and Breakeyville.

AUTOMATIC PROTECTED PUBLIC CROSSINGS AT GRADE

Mileage	17.35 - East	Angus. Trains	switching South	end of
C VO	Mill sign	Yard (North before proceedi	Yard) must stop ing over Westgar	at stop
	cross	sing.		

Mileage	36.87 — Weedon. Northward trains switching or stand-
	ing will stop south of Creameries siding switch
	and must not exceed 5 mph until crossing fully
	occupied.

Mileage	60.67	- Lake	Asbestos	Ltd.	Also,
---------	-------	--------	----------	------	-------

Mileage	73.0	- National Asbestos Mines Ltd. Public crossings
		on their private tracks. Movements must STOP
		at STOP signs before proceeding over crossings.

Mileage	track	or sidin	Southward ng, must no	movement t exceed 1	s on O mph	ma un	in til
	Team	track	occupied. is on manu orth side of	al control crossing.	and b	XOC	is

Mileage	106.96 —	Ste.	Marie	. 1	Moveme	nt	s on	othe	r than	main
		track	must	not	exceed	. 5	mph	until	crossin	g fully
		occup	pied.							

Mileage	127.29	Break	eyville	e. I	Movements	on	other	than	main
		track	must	be	protected	by	membe	er of	crew.

All movements over private crossing mileage 64.03 located 200 feet south of the entrance of King-Beaver Asbestos Warehouse must be protected by member of crew.

All movements over public crossing at grade, mileage 100.33, must be protected by member of crew.

Train radios must not be used on Beaver Spur, Black Lake, mileage 63.5 account blasting operations.

No. 1 track at Thetford Mines is the car capacity siding. Rule 105A does not apply.

Cars set out at Carey Mine must not be left north of public crossing mileage 87.47.

RESTRICTIONS

Diesel Units	
DRS-24, DRF-30, DRF-36 {Bridges 10.3, 38.9 Bridge 99.9	30 mph. 10 mph.
Cars	
Over 210,000 to 220,000 lb. (ore) gross weight each Bridge 38.9	30 mph.
Over 221,000 to 263,000 lb. gross weight each	
Bridge 38.9	
Bridge 99.9	20 mph.
Heavy duty, series 376500p	rohibited.
Crane and Auxiliary	
100 tons capacity Bridges 38.9, 99.9	20 mph.
150 to 160 tons capacity {Bridge 108.1 Bridges 38.9, 99.9	20 mph. 10 mph.
200 to 250 tons capacity	prohibited
Combination Crane-Pile Driver	
30 or 31 tons capacity Bridge 99.9	20 mph.
414230, 231Bridges 38.9, 99.9	20 mph.
Pile Driver	
400040, 43 Bridge 99.9	20 mph.

Maximum speeds unless otherwise restricted - M.P.H.

Passenger	trains	(including	RDC	Units)	 40
Freight an					40

	Per	manent	Slow Orders	Permissible Speed Miles per Hour
Mile	age		Location	All Trains
0.0	to	0.8	On curves	25
0.8	to	1.4	On curves and Bridge 1.4	20
1.4	to	2.2	On curves	30
12.0	to	18.0	On curves	35
18.0	to	22.0	On curves	30
90.0	to	90.5	On curves	25
99.9	to	100.33	On curves	25
100.33			Crossing Vallee Jonction	*30
130.6	to	130.9	On curves	30

^{*}Until crossing fully occupied.

THETFORD MINES INDUSTRIAL YARD SPUR

Movements over pedestrian crossing, mileage 2.40, must be flagged by member of crew. No cars to be left standing on industrial tracks within 50 feet of this crossing.

Asbestos Corp. Kings Mine's private crossing, mileage 2.85, must not be blocked for periods in excess of 5 minutes.

AUTOMATIC PROTECTED PUBLIC CROSSINGS AT GRADE

Mileage 0.47 — Wye connection. Movements must not exceed 10 mph until crossing fully occupied. Timing circuit 175 ft. east of Wye switch approaching crossing from west side and protection will cease to operate if train stands on circuit for a longer period than 30 seconds. Care must be taken that trains do not stand between timing circuit and crossing.

Mileage 2.56 — St. Alphonse St. Movements must STOP at STOP signs located on each side of crossing before proceeding.

ph. ph.

ph.

ph. ph. ted.

ph.

ph. ph. ited 1.3.

ph.

nph.

ph.

3

n it

WESTWARD TRAINS INFERIOR DIRECTION		CHAUDIERE		Иσ	SUP	WARD AINS ERIOR CCTION	CHAUDIERE SUBDIVISION FOOTNOTES		
NO REGULAR TRAINS	Miles from Vallee Jourtion	STATIONS	Train Order Office Signals	Car Capacity Sidings	REG	ULAR	Crane and Auxiliary 200 to 250 tons capacity Bridge 9.05 except 414479, 480, 503, 650 Switching movements over public crossing at grade, mileage 0.35, must be protected by member of crew.		
READ	70.0 60.1 50.5 45.4 34.7 22.8 14.5		GR	Yard 52 Nil 22 Nil 29 9 14 12 Yard	READ UP		Derail located at east end of siding at Morisset. Rule 10 applies. Movements must not exceed 10 mph at any point in Lac Frediere Yard. Rule 105a does not apply. Maximum speeds unless otherwise restricted—M.P.H. Passenger trains (including RDC units) 30 Freight and Mixed Trains 30 Permissible Speed Miles per Hour Mileage Location All Trains 4.78 Crossing. *10 *Until crossing fully occupied.		
NORTH- WARD TRAINS INFERIOR DIRECTION	(1) (E) (E) (E) (E) (E) (E) (E) (E) (E) (E	Rules 41 and 44 apply.				SOUTH- WARD TRAINS SUPERIOR DIRECTION	BEEBE SUBDIVISION FOOTNOTES No train or engine will obstruct any crossing either public or		
FOURTH CLASS		BEEBE SUBDIVISION				FOURTH	Rules 263 to 273 apply between signal 29 at Lennoxville and CNR-CPR connection. CNR timetable governs.		
93 Freight Daily ex. Sun.	Miles from Sherbrooke	STATIONS		Train Order Office Signals	Car Capacity Sidings	92 Freight Daily ex. Sun.	Sherbrooke subdivision schedules and footnotes govern between C.P.R.—C.N.R. Connection and Sherbrooke. Jct. with C.N.R. at Lennoxville—CTC. Northward trains must approach the approach signal to C.T.C. at mileage 2.9 at slow speed and must stop at Adams then obtain instructions from train dispatcher at Sherbrooke before leaving.		
0700 0720 0755 0820 0845 0850	33.9 21.1 12.4 3.3	NEWPORT Jct. C.P.R. 6.3 BEBBE JCT. Jct. Stanstead Sub. 12.8 AYERS CLIFF 8.7 NORTH HATLEY 9.1 ADAMS 0.4 LENNOXVILLB Jct. C.N.R.	z z	N P	Yard Nil 22 5 10 Nil	0630 0610 0540 0515 0427 0425	Mileage 3.08 —College St., Lennoxville. Northward movements receiving STOP indication on signal 29 must stop south of yellow post located to left of track 200 feet south of crossing and, when authorized to proceed, must not exceed 5 mph until crossing fully occupied. Mileage 40.17—Main St, Newport. Southward movements must stop at STOP sign located North of crossing. Movements over crossing may be made only after engineman knows that gates are in horizontal position and then at a speed not exceeding 10		
Daily ex. Sun.	2.6 0.0	C.N.R. C.P.R. Conn. C.P. Conn. C.P.R. Conn. C.P. C	43	но		Bally ex. Sun.	mph. Whistle signal 14 (h) must be sounded when making back-up movement. Trains may leave Lennoxville without clearance. Southward trains must obtain clearance at Sherbrooke. Trains originating and terminating at Lennoxville must register at Sherbrooke. Maximum speeds unless otherwise restricted—M.P.H. Passenger trains (including RDC units) 30		
WESTWARD TRAINS INFERIOR DIRECTION	from Jet.	STANSTEAD SUBDIVISION	Train Order Office Signals	pacity	SUPE	WARD AINS ERIOR CTION	STANSTEAD SUBDIVISION FOOTNOTES		
NO REGULAR TRAINS	Miles f Brebe	STATIONS	Train Office	Car Capacity Sidings		IO ULAR	Maximum speed 10 M.P.H. All tracks between Beebe Jct. and Rock Island will be considered within yard limits. Movements over public crossings at grade mileages 0.48 and 1.95		
READ DOWN	2.4	2.4		Yard Yard	1	AD IP	Movements over public crossings at grade mileages 0.48 and 1.95 must not exceed 5 mph. RESTRICTIONS Diesel Units DFA-16b, c, g and DFB-16d		

SPECIAL INSTRUCTIONS

A-Freight and mixed trains will, unless otherwise provided, be governed by the following speed limits:

Subdivision	Speed Lin	nit Mi	Ή.
Ouebec		55	
Winchester, Westmount, Adirondack, Trois-Rivieres and M. & O. (Rigaud to M. & O. Jct.)		50	
M. & O. (Vaudreuil to Rigaud), Lachute and Sherbrooke	35	45	
Park Avenue, Newport, Lyndonville and Vallee	Ed Tyln F	40	
Park Avenue, Newport, Lyndonvine and Vance		35	
St. Maurice Valley and St. Gabriel Ste. Agathe, Drummondville, Stanbridge, St. Guillaume and Chaudiere		30	
Ste. Agathe, Drummondville, Stanbridge, St. Gundaline and Chaudier		25	
Piles, Berthierville, Buckingham, Tring, Beebe and Levis		15	
Sawyerville		10	
Stanstead			

B-MAXIMUM SPEEDS FOR DIESEL UNITS AS GOVERNED BY TRACTION MOTOR GEARING

Class	Miles Per Hour	Class	Miles Per Hour
DPA-15, DPA-17	. 89	DFA-16b, c, d, g	. 70
DPA-22	. 85	DS-8, DS-9, DS-12, DRS-12	65
DRS-10c, d, DFA-15b, DFA-16a, e, f	. \ 75	DRS-15, DFA-15c, d, e, f DFB-15c, d, e, DRS-17 DS-6, DS-10, DRS-10a, b	J
DRS-20, DRF-22, DRF-25 DRF-30a, b, g, h, i, k	71	HS-5	. 35

*DRS-24, DRF-30 and DRF-36 restricted to freight train speed on curves.

MAXIMUM SPEED FOR RAIL DIESEL CARS — 90 mph.

C-Freight and mixed trains will not, unless otherwise provided, run more than 40 miles without stopping for standing

train inspection.

Such inspection may be performed as follows:—

Head-end trainman detrain from engine at a point half the train's length from the anticipated stopping point of caboose. He will then give one side of train a pull-by inspection until it stops, when he will cross over and walk up other side of the train to his engine, performing standing inspection. As soon as the train stops, the rear-end trainman will walk up one side of the train performing standing inspection to the point where the head-end trainman crossed over. He will then cross over to the other side and give a pull-by inspection to the rear portion of train as it pulls by slowly.

D—In territory where Rules 263-273 are effective, trains must not clear the main track at non-electrically locked hand operated switches at the locations listed in the subdivision footnotes of time table. When switching movements are made through such switches, the switch must be left open until switching completed and movement has returned to the main track.

E—In addition to the requirements of Rule 90A, crews equipped with end-to-end radios at the front and rear of trains will communicate with each other when approaching and passing stations.

F—Rule 5—Unless otherwise specified by train order or other special instructions.

AT TERMINATING STATIONS arriving time of First Class Trains applies at the Station, of all Other Trains at the first main track switch where trains can enter siding or yard tracks, if no such switch time applies at the Station. Trains may be yarded or final stop made on the main track at or before arriving time shown in time table.

AT INITIAL STATION leaving time of First Class trains applies at the Station, of all Other Trains at the last main track switch where trains can leave siding or yard tracks, if no such switch time applies at the Station.

G—Movements occupying timed circuits approaching interlocking for periods in excess of that specified in subdivision time table footnotes, must proceed prepared to find interlocking signal displaying 'STOP' indication.

H-RIDING ON TOP OF CARS

Employees are prohibited from riding on the tops of cars or cabooses not equipped with running boards.

Employees are prohibited from riding on the tops of cars or cabooses equipped with running boards except when necessary in switching or making up trains in yards or industrial spurs.

I—The use by employees subject to duty of mood altering agents or their possession or use while on duty, is prohibited except as prescribed by a Doctor. In addition each employee taking medication as prescribed by a Doctor, or otherwise, is responsible for taking only such amount as will ensure that he or she does not become incapacitated for work and if by prescription, no more than the amount prescribed at the intervals prescribed.

J—Instructions for movement of Freight Cars having a gross weight up to 263,000 pounds are specified in subdivision footnotes and Equipment Authorization Chart. Authority for movement of Freight Cars having a gross weight in excess of 263,000 pounds must be secured from the Superintendent.

K—Main track switches may be equipped with reflectorized lenses or targets of the prescribed color in lieu of lights, and yard limit signs may be reflectorized in lieu of lights.

L—Retaining valves must be used on 50% of the cars on freight trains on descending grades of 2% or over if the tonnage is in excess of "A" rating for the ascending grade for the diesel units on which the dynamic brake is in effective operating condition, unless the train is controlled with a pressure maintaining brake valve. Otherwise Rules 34(a) Form 582, and 27 Form 583 apply.

Rule 34 of Form 582 does not apply to Rail Diesel Cars.

SPECIAL INSTRUCTIONS — Continued

M-FLAGGING INSTRUCTIONS FOR PROTECTION OF MEN AND MACHINES

When men and machines are to be worked on or near the track and before the track is made unsafe for movements at normal speeds, protection may be provided as follows:

- By day place a red flag and, in addition, by night a red light between the rails at least 200 yards in each direction from the defective point or working area, WHICH MAY BE AT ANY LOCATION WITHIN THE LIMITS STATED IN THE TRAIN ORDER, and place torpedoes on each rail to cause one explosion 200 yards beyond the red signals, also;
- (b) By day place a yellow over red flag and, in addition, by night a yellow light and a red light at least 3000, but not more than 4000 yards in each direction from the defective point or working area, to the right of the track as seen from an approaching train and place torpedoes for more than 100 nor less than 50 yards apart to cause two explosions 200 yards beyond the yellow over red flag, also;
- (c) By day place a green flag and, in addition, by night a green light in each direction immediately beyond the defective point or working area to denote that normal speed may be resumed.
- (d) Trains exploding the torpedoes prescribed by Clause (b) shall immediately reduce speed and be prepared to stop at the red signal prescribed in Clause (a) and there be governed by instructions or signal of the Maintenance of Way employee in charge, but must not proceed until the red signal has been removed in the clear view of the engineman.
 - NOTE:—(1) The red signal must not be removed except as authorized by the Foreman in charge.
 - (2) Torpedoes prescribed by Clauses (a) and (b) shall be replaced by Maintenance of Way employees.
 - (3) This Special Instruction must not be used where either Rules 41 or 44 apply.
 - (4) Rules 45 and 46 apply.
- (e) Maintenance of Way employees providing protection required under Clause (b) must each be equipped for day time with-
 - -a yellow over red flag mounted on staffs
 - -a supply of torpedoes, and in addition for night time and when weather or other conditions obscure day

a red light - a yellow light — a supply of matches

and must not return until recalled or relieved.

TRAIN ORDER advice must be issued in conjunction with these Flagging Instructions as follows: Men and machines working......until.....between mileage.....

Protection when required will be provided under Time Table Special Instruction M."

- NOTE:-(1) The Foreman must be advised of the limits and times specified in the order.
 - (2) WORKING AREA SHOULD BE AS SHORT AS PRACTICABLE, TO BE CHANGED AS THE PROGRESS OF THE WORK MAY REQUIRE.
- M.1—WHEN PROVIDING PROTECTION UNDER RULES 40, 41, 42 (EXCEPT UNDER EXAMPLE 2 OF FORM Y TRAIN ORDER WHEN RADIOS ARE FUNCTIONING) AND TIMETABLE SPECIAL INSTRUCTION "M". THE FOLLOWING WILL APPLY.
- Maintenance of Way employees must not permit a train to proceed over the defective point or through working area until it is known the track is passable and all machines are clear, except that—
- If the main track is clear up to a specified point, the train, after being stopped, may be permitted to proceed to that point where it must stop and wait further instructions.
- Speed restrictions and any instructions given a train under (2), must be authorized by foreman in charge, must be in writing and not delivered until the train has been brought to a stop.

N-PROTECTION FOR AND MOVEMENT OF MAINTENANCE-OF-WAY MACHINES

Burro Cranes and other similar machines cannot be depended on to operate signal systems and certain other machines will definitely not operate signal systems. Such machines must be operated and protected in the following manner:

- (a) AS PRESCRIBED BY RULES 40, 41, 42, or Special Instruction "M".
- OPERATION BY TIMETABLE AND TRAIN ORDER

Timetable and train order authority may be used for the operation of the following machines when accompanied by a Conductor, Yard Foreman or Operating Officer: **Burro Cranes**

Wickham Track Inspection Cars

Hy Rail Cars — self propelled machines equipped for highway and rail operation.

Railway Equipment — self propelled machines that can be normally handled on their own wheels in the consist of a train.

Within ABS Territory:

Unless the machine is continuously coupled to a standard railway car —

— Rule 99 OUTSIDE ABS TERRITORY (at least 2000 yards) must apply.

— Yard limits, Station limits and Station Protection Signals afford NO protection.

Rules 281 to 293 inclusive do not apply. Movements must be made at a speed that will permit stopping within one half the range of vision except when a report has been received of the arrival of ALL preceding trains at a

Outside ABS Territory:

In the application of Rule 99, the flagman must go back at least 2000 yards.

SPECIAL INSTRUCTIONS — Continued

(c) CENTRALIZED TRAFFIC CONTROL (CTC) OR TO WORK WITHIN INTERLOCKINGS

The employee in charge of machines or track work may be authorized by Train Dispatcher or Signalman to occupy track or tracks within specified limits and specified times without flag protection, as follows:

(Name or Machine No.)

BETWEEN (Signal and/or Location)

(Time)

(Name or Machine No.)

A

UN

MAY USE (Track or Tracks)
AND (Signal and/or Location)
UNTIL (Time)

When requesting track and time limits, employee will give his name, occupation and location and specify time and work limits and track or tracks to be used. When such authority is granted the instructions must be in writing and repeated to and acknowledged by Train Dispatcher or Signalman before being acted on. Train Dispatcher or Signalman must make proper record immediately.

Before authorizing track occupancy, Train Dispatcher or Signalman must block all levers controlling signals governing movements into such limits at STOP and must not remove lever blocks nor permit any train or engine to enter such limits until the employee in charge reports the time track and/or machines are clear, REGARD-LESS OF THE TIME LIMITS GRANTED. If additional time is required, authority must be obtained in writing before previously authorized time expires. Train Dispatcher or Signalman must report to the Superintendent any failure to clear such tracks before expiration of time specified.

Train Dispatcher or Signalman must, when practicable, line track switches against potential conflicting movements and in addition, when practicable, line signals away from the protected limits.

(d) TO MOVE THROUGH INTERLOCKINGS

STOP before passing signal governing movements into Interlocking (WHETHER OR NOT SIGNAL INDICATES PROCEED). Obtain authority or hand signal from Signalman who must first provide protection by blocking levers controlling signals governing movements on or conflicting with the authorized route at STOP. Signalman must not remove lever blocks nor permit any train or engine to pass such signals until employee in charge has reported clear of Interlocking Limits.

(e) AUTOMATIC INTERLOCKINGS AND AT OTHER INTERLOCKINGS WHERE RULE 672 APPLIES STOP before passing signal governing movements into Interlocking (WHETHER OR NOT SIGNAL INDICATES PROCEED). If no immediate conflicting movement is evident, an employee must proceed to the crossing and unlock box marked "switches" and be governed by instructions posted in the box.

In boxes where lights are provided to indicate the approach of trains, if those of the opposing railway are lighted and no train is seen approaching he will open SWITCH and give proceed hand signal or move the machine through the limits. If lights are not provided, or if those of the opposing railway are not lighted, such employee, after opening SWITCH, must wait THREE MINUTES before giving the proceed hand signal or moving the machine through the limits. SWITCH must not be closed until the entire movement has cleared the Interlocking Limits.

(f) NON INTERLOCKED RAILWAY CROSSINGS AT GRADE NON INTERLOCKED DRAWBRIDGES OR WHILE INTERLOCKING STATION CLOSED

The route must be properly lined and protected against conflicting movements, after which machine may proceed.

(g) POWER OPERATED SWITCHES

Movements must not exceed 4 MPH over power operated switches.

(h) PUBLIC CROSSINGS AT GRADE PROTECTED BY SIGNALS AND/OR GATES

Crossing must be protected by a member of the crew unless it is known the signals have been operating for at least twenty seconds or the gates are horizontal when the crossing is reached.

Automobile type inspection cars must approach crossing prepared to stop and may then proceed over crossing as the way is seen to be clear.

O-SPERRY DETECTOR CARS

Sperry Detector Cars, WHEN TESTING, cannot be depended on to operate signal systems and such cars should be operated and protected in the following manner:

(a) Within ABS Territory:

By train order form H or U. When flag protection is required, protection as prescribed by Rule 99 OUTSIDE ABS TERRITORY must be provided; such flag protection must also be provided within yard limits and station limits.

(b) Within CTC Territory:

By Rule 266. When flag protection is required, protection as prescribed by Rule 99 OUTSIDE ABS TERRITORY must be provided.

(c) Through Automatic Interlockings:

Regardless of indication of the governing interlocking signal the knife switch referred to in Rule 672 must be opened and kept open until movement has passed the interlocking signal governing movement in the opposite direction.

- (d) Over public crossings at grade protected by automatic devices:

 Crossing to be protected by member of crew unless it is known that the automatic protection is operating.
- (e) Over Power Operated Switches-Movement must not exceed 4 miles per hour.

SPECIAL INSTRUCTIONS — Continued

P-MOVEMENT OF CRANES, COMBINATION CRANE-PILE DRIVERS, PILE DRIVERS

AUTHORITY for the movement of equipment listed below is contained in subdivision footnotes and the Equipment Authorization Charts.

Equipment with arrows to denote the direction of travel must be placed in train accordingly.

Yardmasters must have an authorization from the Chief Dispatcher before moving any equipment here listed. Connecting Divisions, Conductors, Enginemen and all concerned with a movement must be given complete instructions regulating the same.

Cranes exceeding 25 ton capacity must not make a lift while standing on a bridge nor move over a bridge while carrying a load, without special authorization from the Chief Engineer.

SEPARATION OF EQUIPMENT

Cranes up to 160 tons capacity Combination Crane-Pile Drivers Pile Drivers

To be separated from each other and other equipment by two cars of a gross weight each of not more than 220,000 pounds or lesser weight where authorized.

Cranes of 200 to 250 tons capacity

To be separated from other equipment by one car of not more than 142,000 pounds gross weight.

Cars used for separation must have a length greater than 37 feet over strikers.

		Where Authoriz <mark>ed</mark> Freight Train	Unless Otherwise Mentioned in Footnotes, Trains Moving Equipment
Cranes	Crane Series	Speed is MPH	Must Not Exceed MPH
Capacity Tons 15 231/2 25	414133 414171 414179 414600 to 414607 incl.	Over 25 25 or less	20 15
30	414225	many transfer and the same of	
40 75 100	414230, 414231 414282 414323 to 414327 incl. 414330 to 414332 incl. 414334, 414335 414337, 414339 414420, 414421 414470 to 414480 incl.	40 or over 35 to 30 25 or less	35 25 Permissible Freight Train Speed
250	414500 to 414503, 414650	CHANGE CONTRACTOR OF THE PARTY	
100 150	414321, 414328 414400, 414401, 414402	Over 25 25 or less	25 15
Combination Cr	ane-Pile Driver		
30 31	414203, 414205 414207 to 414215 incl. 414178, 414200 to 414202 incl. 414204, 414206	Over 25 25 or less	25 15
Pile Driver			
THE DIIVE	400040 400043	35 or over 25 to 35 Under 25	25 20 15
Scale Test Car			
	420925 to 420928 incl.	30 or over Under 30	30 5 less than permissible Freight Train Speed
Self Propelled I	Hy-Rail Cranes	Rail	All Turnouts
50	414000	Forward Direction 25 MPH Maximum.	5 MPH
60	414025	Permissible Freight Train Speed if less than 25 MPH.	
		Reverse Direction 15 MPH Maximum. Permissible Freight Train Speed if less than 15 MPH.	5 MPH

SPECIAL INSTRUCTIONS - Continued

Q-ORE CARS

Trains handling cars in series 370000 to 377249 inclusive, short ballast cars 368443 to 368543 inclusive, and foreign cars 30 feet and less in length, must not exceed 30 mph when loaded, and 25 mph when empty on M&O, Winchester, Adirondack, Sherbrooke, Newport, Lyndonville, Park Avenue, Lachute, Trois Rivieres and Quebec Subdivisions, 25 mph on Vallee, Levis and St. Maurice Valley subdivisions, and 20 mph on all other subdivisions.

R-CENTRALIZED TRAFFIC CONTROL

In C.T.C. territory, when the "Employee Call" located on most signal bungalows is operating either by a steady or flashing light or sounding horn, or both, it is an indication for any employee in the vicinity, except crews on moving trains, to answer the Dispatcher's phone at that location.

S—STANDARD TRAINLINE PRESSURE

Section 15 of Form 583 (train handling and other instructions relating to brake and communicating signal equipment) is revised to require standard air pressure of 75 lbs. per square inch instead of 70 lbs. per square inch in freight service.

T-RULE 99 WITHIN CTC TERRITORY

Within CTC protection against following trains or engines on the same track is not required except when signals are declared inoperative.

U—HOT BOX DETECTOR SYSTEM

On subdivisions where this Special instruction applies the following will govern:

SCANNER—To avoid abnormal heat indication from a source other than defective equipment, enginemen should when practicable avoid prolonged use of train brakes approaching this point and any application of brakes while a portion of the train is passing scanning equipment.

INDICATOR—This is in the form of a WHITE LIGHT mounted on a mast and IS NOT A BLOCK SIGNAL. The last indication displayed will apply as follows:

STEADY BURNING or UNLIGHTED—Stop before fouling switch at the inspection point and immediately communicate with the train dispatcher. If communication fails, perform standing train inspection.

FLASHING-No evidence of overheating.

The train dispatcher will provide information as to the location of overheating. The journal is to be inspected and, if no evidence of overheating is found, that car and at least two cars on each side must be inspected for any condition which may be responsible for the abnormal heat condition, opening all journal box lids as part of the inspection. Before proceeding, the train dispatcher must be informed of the result of the inspection and any action taken.

V-SIGNALLED SIDINGS AND SIGNALLED YARD TRACKS

Before undertaking any work which may render a SIGNALLED SIDING or SIGNALLED YARD TRACK unsafe for movements at normal speed or if rendered unsafe from any cause, trackmen, bridgemen or other employees must provide protection in accordance with U.C.O.R. Rules 40 to 45 inclusive, Special Instruction M or Special Instruction N. Signalled sidings and signalled yard tracks must be protected in the same manner as main tracks.

W-PROTECTION OF IMPASSABLE OR SLOW TRACK

When necessary to provide protection under Rules 40 to 44 and Time Table Special Instruction "M" the distance specified must be at least 3000 yards instead of at least 2000 yards.

X—RULE 15 U.C.O.R.

The explosion of one or more torpedoes in the absence of a more restrictive signal, indicates proceed, but at restricted speed for 3000 yards from the point where torpedoes were exploded.

U.C.O.R. Rule 15 is modified accordingly.

FACE IN DIRECTION NAMED, COUNT CROSSARMS FROM THE TOP, DOWN.

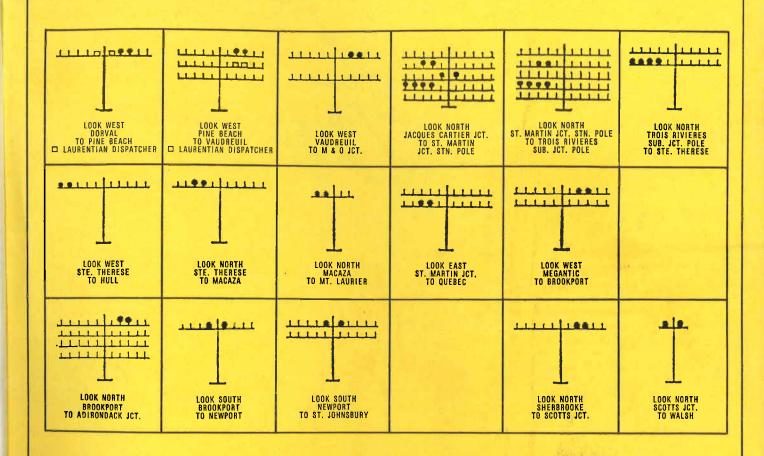


TABLE SHOWING RATE OF SPEED A TRAIN IS RUNNING WHERE TIME OF ONE MILE IS GIVEN

Time Miles Per Mile Per Hour	Time Miles Per Mile Per Hour	Time Per Mile	
0 Min. 40 Sec 90	1 Min. 0 Sec 60	2 Min. 0 Sec	30
0 " 42 " 85	1 " 5 " 55	2 " 24 "	25
0 " 45 " 80	1 " 12 " 50	3 " 0 "	20
0 " 48 " 75	1 " 20 " 45	4 " 0 "	15
0 " 51 " 70	1 " 30 " 40	6 " 0 "	10
0 " 55 " 65	1 " 43 " 35	12 " 0 "	. 5

